

KV-M2530E/M2531E

RM-816

SERVICE MANUAL


Spanish Model

KV-M2530E

Chassis No. SCC-F12H-A

KV-M2531E

Chassis No. SCC-F12G-A

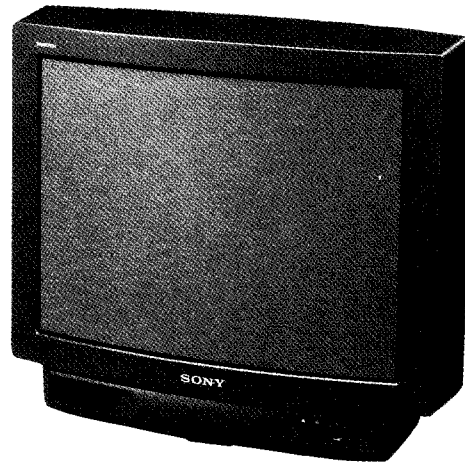

AE-1C CHASSIS

MODELS OF THE SAME SERIES	
KV-M2530E/M2531E	KV-E2523E/E2923E
KV-M2520E/M2521E	KV-A2913E
KV-A2113E/A2513E	KV-C2123E

SPECIFICATIONS

Television system	B/G/H	Sound output	10W (Music)
Color system	PAL	Power consumption	83Wh (KV-M2530E)
Channel coverage	VHF: E2-E12 UHF: E21-E69		86Wh (KV-M2531E)
	CABLE TV: S1-S41	Dimensions	Approx. 577 x 523 x 491mm (w/h/d)
	CABLE TV: S01-S05, M1-M10, U1-U10	Weight	Approx. 34kg
Picture tube	Hi-Black Trinitron tube	Supplied accessories	RM-816 Remote Commander (1)
	Approx. 65 cm		IEC designation R6 batteries (2)
	(Approx. 59 cm picture measured diagonally)	[RM-816]	
	110°-degree deflection	Remote control system	infrared control
Inputs	Ⓔ 1 21-pin connector:	Power requirements	3V dc
	CENELEC standard including		2 batteries IEC designation
	RGB input.		R6 (size AA)
	Front: Ⓔ 3	Dimensions	Approx. 75 x 221 x 23mm (w/h/d)
	Ⓔ Video input phono jack	Weight	Approx. 230g (including batteries)
	Ⓔ Audio input phono jack	Accessories supplied	IEC designation R6 Commander
	Ⓔ S Video input 4pin DIN		
	Y: 1Vp-p±3dB 75ohm		
	C: 0.3Vp-p±3dB 75ohm		
Outputs	21-pin connector: CENELEC standard		
	Earphones jack: minijack		


Design and specifications are subject to change without notice.



TRINITRON® COLOR TV

SONY®

21 - pin Euro Connector Configuration

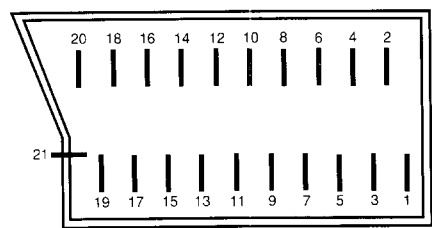

PIN	SIGNAL	SPECIFICATION
1	Audio output	0.5Vrms/1kilohm or less
2	Audio input	0.5Vrms/10kilohm or more
3	Audio output	0.5Vrms/1kilohm or less
4	Earth (audio)	
5	Earth (B - input)	
6	Audio input	0.5Vrms/10kilohms or more
7	B - input	0.7Vp-p/75ohms
8	Function switching	9.5V to 12V
9	Earth (G - input)	
10		
11	G - input	0.7Vp-p/75ohms
12		
13	Earth (R - input)	
14	Earth (blanking)	
15	R - input	0.7Vp-p/75ohms
16	Fast blanking	1V to 3V / 75ohms
17	Earth (video)	
18	Earth (fast blanking)	
19	Video output	1Vp-p / 75ohms
20	Video input	1Vp-p / 75ohms
21	Screening plug	


4 pin connector [E]

Pin No	Signal	Signal level
1	Ground	
2	Ground	
3	Y (S signal) input	1V ± 3db 75ohm, positive Sync 0.3V
4	C (S signal) input	0.3V ± 3db 75ohm positive

TABLE OF CONTENTS

<u>Section</u>	<u>Title</u>	<u>Page</u>	<u>Section</u>	<u>Title</u>	<u>Page</u>
1. GENERAL			4. CIRCUIT ADJUSTMENTS		
1-1.	Switching On/Off	4	4-1.	A Board Adjustment	18
1-2.	Presetting	4	4-2.	B Board Adjustments	18
1-3.	Basic TV Operation	6	4-3.	D Board Adjustments	18
1-4.	Advanced TV Operation	7	4-4.	J1 Board Adjustments	19
1-5.	Teletext Operation	7	4-5.	V Board Adjustment	19
1-6.	Operation Connections/Operations	8	4-6.	Secondary Adjustments	20
1-7.	Additional Information	9			
2. DISASSEMBLY			5. DIAGRAMS		
2-1.	Rear Cover Removal	11	5-1.	Block Diagram	21
2-2.	Chassis Assembly Removal	11	5-2.	Circuit Board Location	25
2-3.	A and J1 Boards Removal	12	5-3.	Schematic Diagrams and Printed Wiring Boards	25
2-4.	B and V Boards Removal	12	5-4.	Semiconductors	51
2-5.	Service Position	12	6. EXPLODED VIEWS		
2-6.	Picture Tube Removal	13	6-1.	Chassis	53
3. SET-UP ADJUSTMENTS			6-2.	Picture Tube	54
3-1.	Beam Landing	14	7. ELECTRICAL PARTS LIST		55
3-2.	Convergence	15			
3-3.	Focus	17			
3-4.	White Balance	17			


SAFETY RELATED COMPONENT WARNING !!

COMPONENTS IDENTIFIED BY SHADING AND MARKED WITH  ON THE SCHEMATIC DIAGRAMS, EXPLODED VIEWS AND IN THE PARTS LIST ARE CRITICAL TO SAFE OPERATION. REPLACE THESE COMPONENTS WITH SONY PARTS WHOSE PART NUMBERS APPEAR AS SHOWN IN THIS MANUAL OR IN SUPPLEMENTS PUBLISHED BY SONY.

SECTION 1 GENERAL


1-1. SWITCHING ON/OFF

After you have completed the basic preparation, your TV is ready to be connected to the mains power supply (220/240V AC, 50Hz).

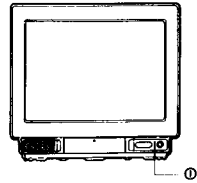

How to turn the TV on

Action	Result
Press ① on the TV.	The TV will turn on. Note: If the screen remains blank, the TV may be in the standby mode. Press ② on the commander to switch it on.

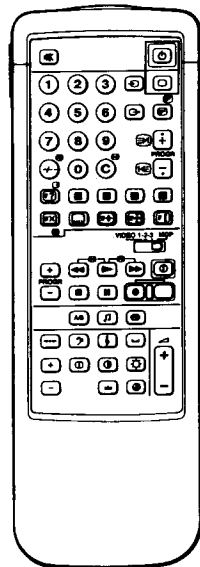

How to turn the TV off

A Temporarily	
Press ③ to enter standby mode.	The TV will be in standby. To return to the TV mode press ④
B Completely	
Press ⑤ on the TV.	The TV will turn off.


1-2. PRESETTING

Before viewing the TV programmes you need to preset TV channels. There are 60 spaces available for storing these channels.

TV stations broadcast their channels at certain frequencies. You must preset these channels to programme numbers on the TV. If you are unfamiliar with the channel numbers of the stations you wish to preset, use "How to Preset Channels Automatically". If you are familiar with the channel numbers refer to "How to Preset TV Channels Directly".

Slide open the full function side of the Remote Commander to reveal preset buttons.


How to preset channels automatically

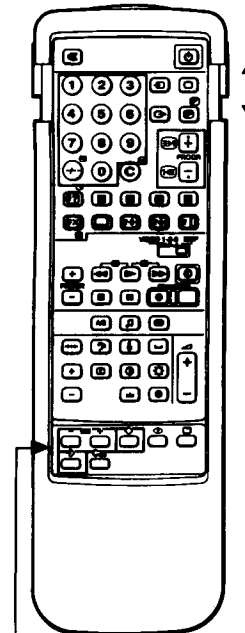

Note: These buttons should be used in preset mode only.


Action	Result
1 Press → to enter the preset mode. 	The programme number will start flashing.
2 Press PROGR +/- or the number buttons to select the programme number to which you want to preset a channel. Note To select a double-digit number, use the -/-- button. For example, if you want to choose 23, press -/--, 2, and then 3.	The programme number changes
3 Press + or - once to search forward or backward for channels.	When a channel is tuned in, the search will stop and the channel number will be displayed. Note If you want to skip a channel, press + or - again to restart the search.
4 Press if you want to store the channel which is tuned in. Press → to exit preset mode without storing.	The channel is now stored and you have returned to TV mode.
5 Repeat steps 1 to 4 to store the other channels.	

How to preset TV channels directly

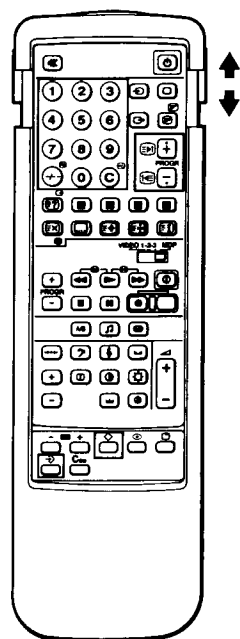

Action	Result
1 Press \rightarrow to enter the preset mode. 	The programme number will start flashing.
2 Press PROGR +/- or the number buttons to select the programme number on which you want to preset a channel. Note To select a double-digit number, use the -/-- button. For example, if you want to choose 23, press -/--, 2, and then 3.	The programme number changes.
3 Press C. 	The indication "C--" starts flashing on the display.
4 Select the channel number with two digits (e.g. 04) by pressing the number buttons. Note Press the second number within 5 seconds after the first one, otherwise the operation will be cancelled.	The channel number changes to select the new channel. Note If you have made a mistake the letter "X" will appear. Repeat step 2 again.
5 Press \diamond to store the channel which is tuned in. Press \rightarrow to exit the preset mode without storing. 	The channel is now stored and you have returned to TV mode.
6 Repeat steps 1 to 5 to store the other channels.	

You can use up to five characters to "name" a channel or station (e.g. BBC1).

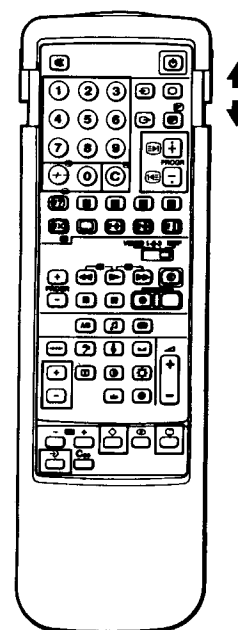


Action	Result
1 Select a programme number you want to name by pressing the PROGR +/- or the number buttons 	The selected programme number will appear.
2 Press \rightarrow . 	The programme number starts flashing.
3 Press C. 	The first column of the station name indication will start flashing.
4 Press + or - repeatedly to select a letter in the alphabet, a number, or a blank space. 	The letters of the alphabet, numbers and space (" ") will appear sequentially.
5 Press C. 	The first character is now set and the second column will start flashing.
6 Repeat steps 4 and 5 to set each letter or number.	
7 Press \diamond . 	The channel name is now stored and you have returned to TV mode.

How to tune in a channel temporarily

You can tune a channel in temporarily, if it has not been preset.

Action	Result
1 Press C. For cable channels, press C twice.	The indication "C" appears on the screen.
2 Select the channel number with two digits by pressing the number buttons (e.g. for channel 4, first press 0, then 4.)	The channel is received, but it is not stored to any programme number.

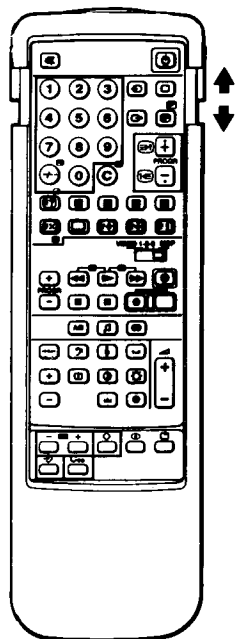

Using the PROGR +/- buttons you can skip unused programme channel numbers. However, the skipped numbers may still be called up using the number buttons.

Action	Result
1 Press \rightarrow to enter the preset mode.	The programme number will start flashing.
2 Select the programme number that you want to skip by pressing PROGR +/- or the number buttons.	The programme number changes.
3 Press Coo.	The lowest channel number appears under the programme number.
4 Press \diamond .	The channel is now stored and you have returned to TV mode.
5 Repeat steps 1 to 4 to skip other programme numbers.	



How to Fine Tune Manually

If the picture is distorted, you can fine tune the channel manually.

Action	Result
Press \square +/- repeatedly until the picture looks normal.	The indication $\leftarrow F \rightarrow$ appears on the screen.
Press \rightarrow to enter the preset mode.	The programme number starts flashing.
Press \diamond .	The fine tuning is stored.

1-3. BASIC TV OPERATION

Note: Press \perp on door to open.

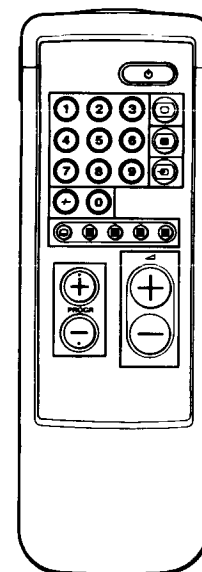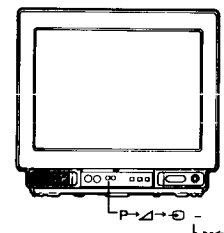

This section introduces you to the basic control functions which are available on the simple side of the remote commander.

How to Select Programmes

Before you can select programmes make sure that you have preset channels, (refer to pages 5 and 6).

Action	Result
Press PROGR +/- or the number buttons. To select a double-digit number, use the +/- button. For example, if you want to choose 23, press +/-, 2, and then 3.	The selected programme is displayed.

How to Adjust the Volume

Action	Result
Press \triangle +/-.	The volume markers will appear and are adjusted accordingly.

How to Use Additional Functions

How to operate with the buttons on the TV

You can also select programmes and adjust the volume using the P-DEL and \rightarrow +/- buttons on the front of the TV. For operation, first press the P-DEL button repeatedly so that the P (for programme) or \triangle (for volume) indication appears on the screen, and then adjust with the \rightarrow +/- buttons.

Note: To restore factory set level press \rightarrow +/- together.

Basic teletext operation



Select:
The \square button to view teletext.
The \square button to request subtitles (p.888).
The \square button to return to TV mode.
For details about teletext operation, refer to page 12.

How to view the video input picture

Press \square . To return to the TV mode, press \square . For further details, refer to page 15.

1-4. ADVANCED TV OPERATION

This section shows you how to use convenient features, to adjust the picture and sound to your taste, enter a name for a channel to be displayed on the screen, and fine tune a channel.
Use the full-function side of the Remote Commander.

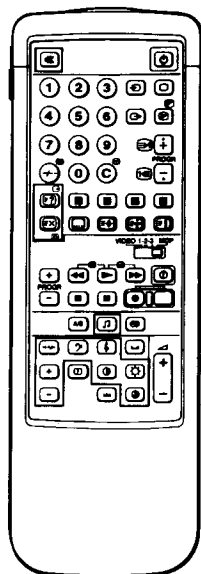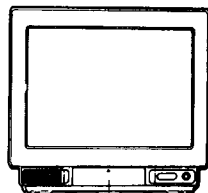

How to use on-screen display and special sound features

You can enjoy the following convenient features.

How to	Action	To resume normal picture/sound
Display on-screen indications	Press 3 .	Indications disappear after 5 seconds.
Display programme number	Press 3 twice.	Press 3 twice again.
Mute the sound	Press 4 .	Press 4 again.
Set the sound to music listening position	Press 1 .	Press 1 again.
Request the time	Press 0 .	Press 0 again.

How to adjust the picture and sound

Although the picture and sound have been adjusted at the factory, you might want to adjust them to your own taste. To do this, please follow the steps.

To Adjust:	Press:	Then:	Result: (- ↔ +)
Picture:			
Colour Intensity	5	+	Less ↔ More
Picture Contrast	6	-	Less ↔ More
Brightness	7		Dark ↔ Bright
Sound:			
Base	8	+	Less ↔ More
Treble	9	-	Less ↔ More

To reset the picture and sound to factory set levels press **→ ↔ ←**.

On the set:

Press **→ ↔ ←** +/- buttons simultaneously.


Note:

Some of the functions on the remote commander are not available for use with this TV set.

1-5. TELETEXT OPERATION

TV stations broadcast teletext programmes via the TV channels. To use the full teletext features, use the buttons indicated in green on the full function side of the Remote Commander.



How to View the Teletext






Action	Result
1 Select the channel which carries the teletext service you wish to see.	The channel changes on the screen.
2 Press 0 .	 If the teletext signal is not broadcast, then p100 is displayed.
3 Input three digits for the page number using the number buttons. Note If you make a mistake, type in any three digits, then re-enter the correct page number.	The numbers are entered on the screen. The requested page will appear in a few seconds.
To return to the TV mode. Press 0 . To change the teletext channels First press 0 to return to the TV mode, then repeat steps 1 to 3.	

Note

If the signal of the TV channel is weak, teletext errors may often occur.

How to Use the Advanced Features of Teletext

How to	Action	Result (On-screen display)
Request the index page.	Press 0 (INDEX).	 The index page appears.
Request the subtitle page (p888).	Press 0 .	The subtitle page is displayed (p888).
Access the next or preceding page.	Press 0 (PAGE +) or 0 (PAGE -).	 The next or preceding page appears.

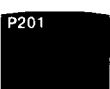How to	Action	Result
Superimpose the teletext display on the TV programme.	Press TEXT once if you are in text mode, or press TEXT twice if in TV mode. To return to the normal teletext display press TEXT again.	 The teletext displays are superimposed on the TV programmes.
Prevent a teletext page from being updated or changed.	Press TEXT (HOLD). To resume normal teletext reception, press TEXT .	 The HOLD symbol (TEXT) appears on the screen and the chosen sub-page is held until you cancel.
Enlarge the teletext display.	Press TEXT once to enlarge the upper half. Press twice to enlarge the lower half. Press again to restore the normal display.	 The upper half is enlarged.
Reveal concealed information (e.g. answers to a quiz).	Press TEXT (REVEAL). Press again to conceal the information.	 The information is revealed.
Watch the TV programme while waiting for a requested page to be displayed.	1. Request a new page.	The numbers are entered.
	2. Press TEXT (TEXT CL).	The TV program is displayed, and the requested page number and other teletext data appear at the top of the screen.
	3. When the requested page has been captured, the page number remains and the other data disappears.	 P201
	4. Press TEXT to view this page.	The requested page is displayed.

 
 
 
Some of the features may not be available depending on the Teletext service.

1-6. OPERATION CONNECTIONS/OPERATIONS


You can connect video equipment such as VTRs and video disc players to the TV.

How to connect video equipment to the TV


This TV has 2 different input connectors and 1 output signal.

Connector	Acceptable input signal	Available output signal
1 	Normal audio/video and RGB signal	Audio/video from TV tuner
  on the front	Normal audio/video and S video signal	No outputs

Connecting video equipment

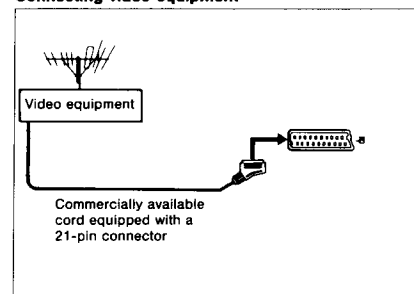


Connecting a computer with RGB output

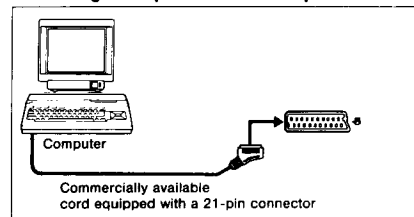

Connecting video equipment temporarily

It is convenient to use the front connectors when connecting equipment such as a video camera recorder.

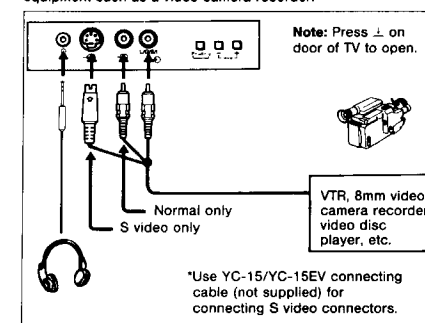

To connect a VTR using the π terminal

Connect the aerial output of the VTR to the aerial terminal π of the TV.

Note


If you connect your VTR to the aerial terminal of the TV, it is recommended that programme number 0 is used to tune in the video signal.

S video input (Y/C input)

Video signals may be separated into Y (luminance or brightness) and C (chrominance) signals. Separating the Y and C signals prevents them from interfering with one another, and therefore improves picture quality (especially luminance). This TV is equipped with S video input through which these separated signals can be input directly.

If the picture or the sound is distorted

Move the VTR away from the TV.

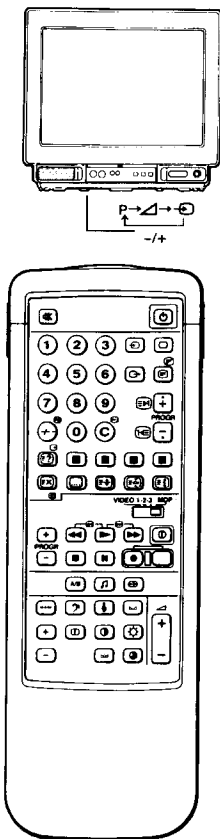

How to view the video input picture

You can view the picture of video equipment connected to the input terminals by selecting the input mode.

Operation


Action	Result
Press repeatedly to select the desired input.	Symbol for the selected input appears. (See the table below.)
To return to the TV mode, press the button.	

Input modes


Symbol	Result
	Audio/video input through the connector.
	RGB input through the connector.
	Audio/video input through and jacks on the front.
	S video input through the connectors on the front (4-pin connector).

You can also select the input mode using the button on the TV. In this case, first select and then press +/- buttons to select the input.


A

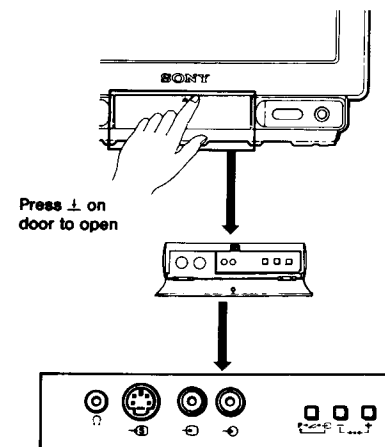


B

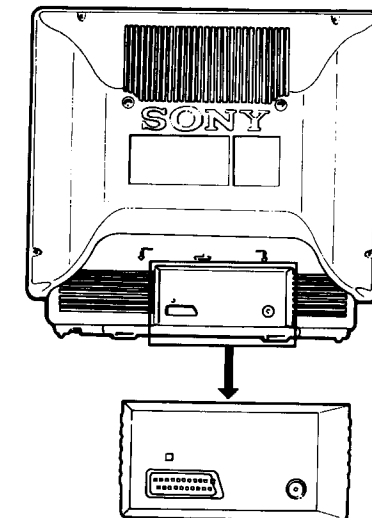

C

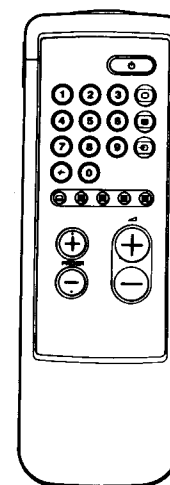

D

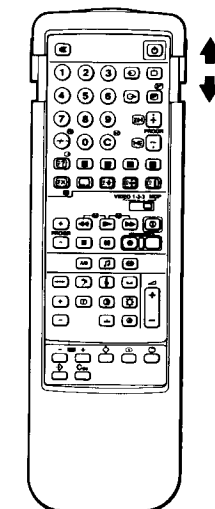

This section briefly describes the buttons and controls on the TV set and on the Remote Commander.
For more information, refer to the pages given next to each description.

A TV set – Front		
Sign	Name	
	Main power switch	
	Standby indicator	
	Headphones jack (stereo minijack)	
	Input jacks (S-video/video/audio)	
	Function selector (Programme/volume/input)	
	Adjustment buttons for function selector	


B TV set – Rear		
Sign	Name	
	21-pin Euro-AV connector (RGB/video input, TV output)	
	Aerial terminal (IEC type)	

C Remote Commander – simple side		
Sign	Name	
	Input mode selector	
	Teletext button	
	Fastext buttons	
	TV mode selector	
	Standby button	
1,2,3,4,5, 6,7,8,9, and 0	Number buttons	
-/--	Double-digit entering button	
	Volume control button	
PROG +/-	Programme selector	


D Remote Commander – full function side		
Sign	Name	
	Mute on/off button	
	Standby button	
1,2,3,4,5, 6,7,8,9, and 0	Number buttons	
	Input mode selector	
	TV power on/TV mode selector button	
	Teletext button	
	Music button	
-/--	Double-digit entering button	
C	Direct channel entering button	
	Request time display	
	Teletext operation buttons	
	Fastext buttons	
	On-screen display button	
	Picture and sound adjustment reset button	
	Volume control	
PROG +/-	Programme selector	
	Picture and sound controls	
VIDEO 1/2/3, MDP	Video equipment selector	
	Video equipment operation buttons	
Coo	Programme number clear button	
	Channel preset button	
- +	Tuning buttons	
	Channel store button	
	Station label button	

SECTION 2 DISASSEMBLY

2-1. REAR COVER REMOVAL

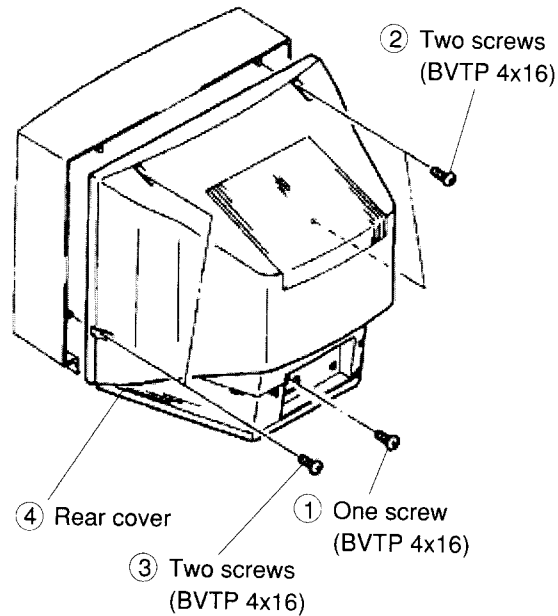


2-2. CHASSIS ASSEMBLY REMOVAL

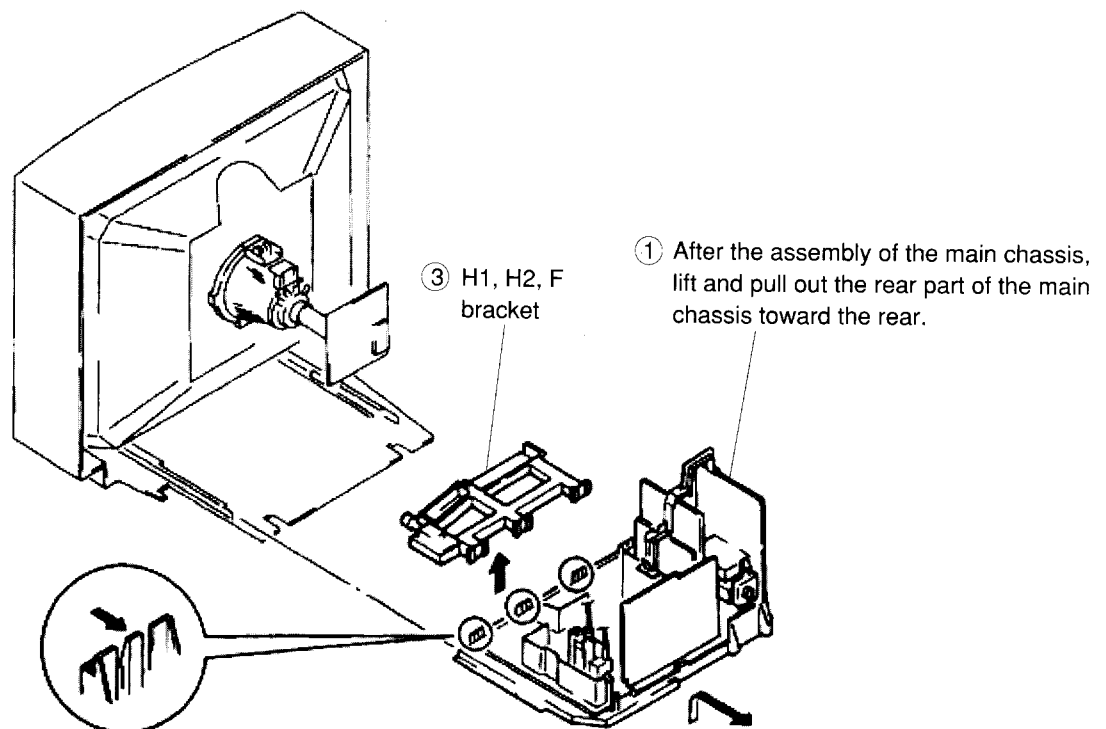


- ② Push the three claws of the main chassis in the direction of the arrow and remove the H1, H2, F bracket upwards.

2-3. A AND J1 BOARDS REMOVAL

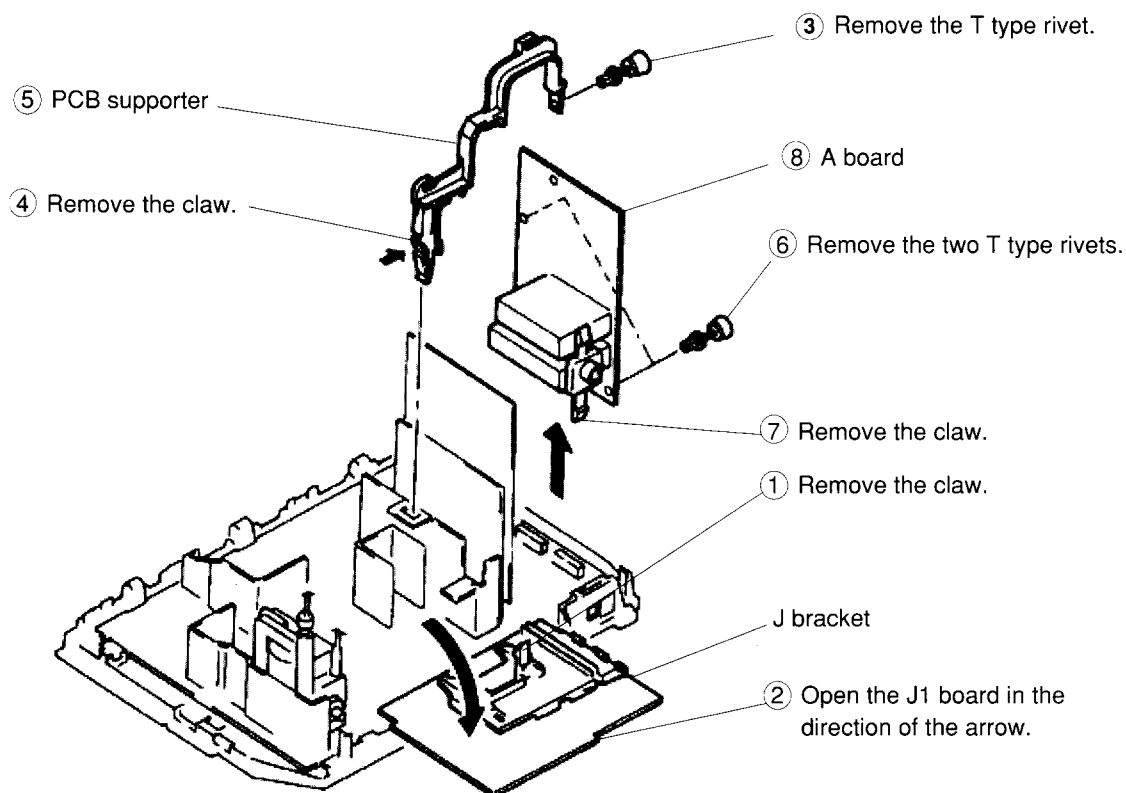


2-4. B AND V BOARDS REMOVAL

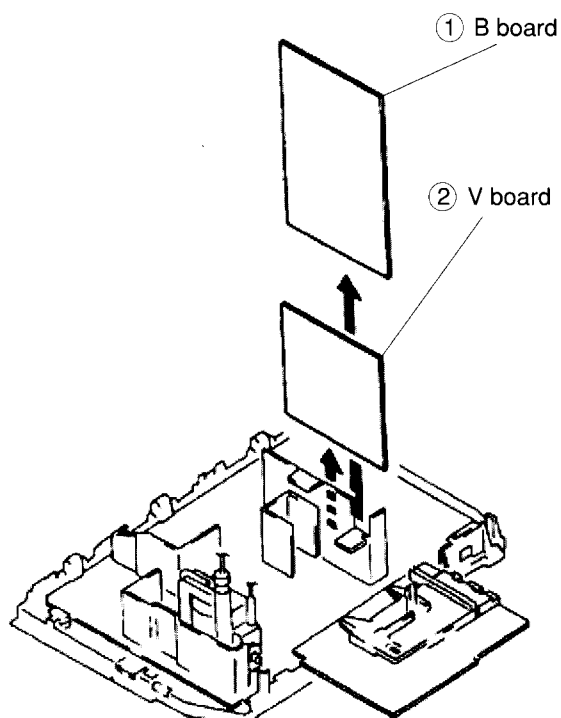


2-5. SERVICE POSITION

* Remove the H1, H2, F bracket from the main chassis assembly and then perform the following servicing.
(Refer to 2-2. CHASSIS ASSEMBLY REMOVAL.)

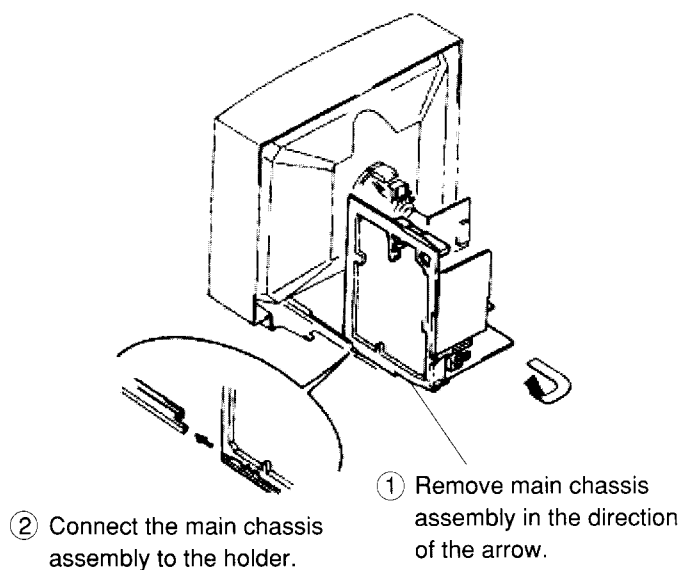

Note: 10 pin extension cable (S-0945-001-0)


2-6. PICTURE TUBE REMOVAL

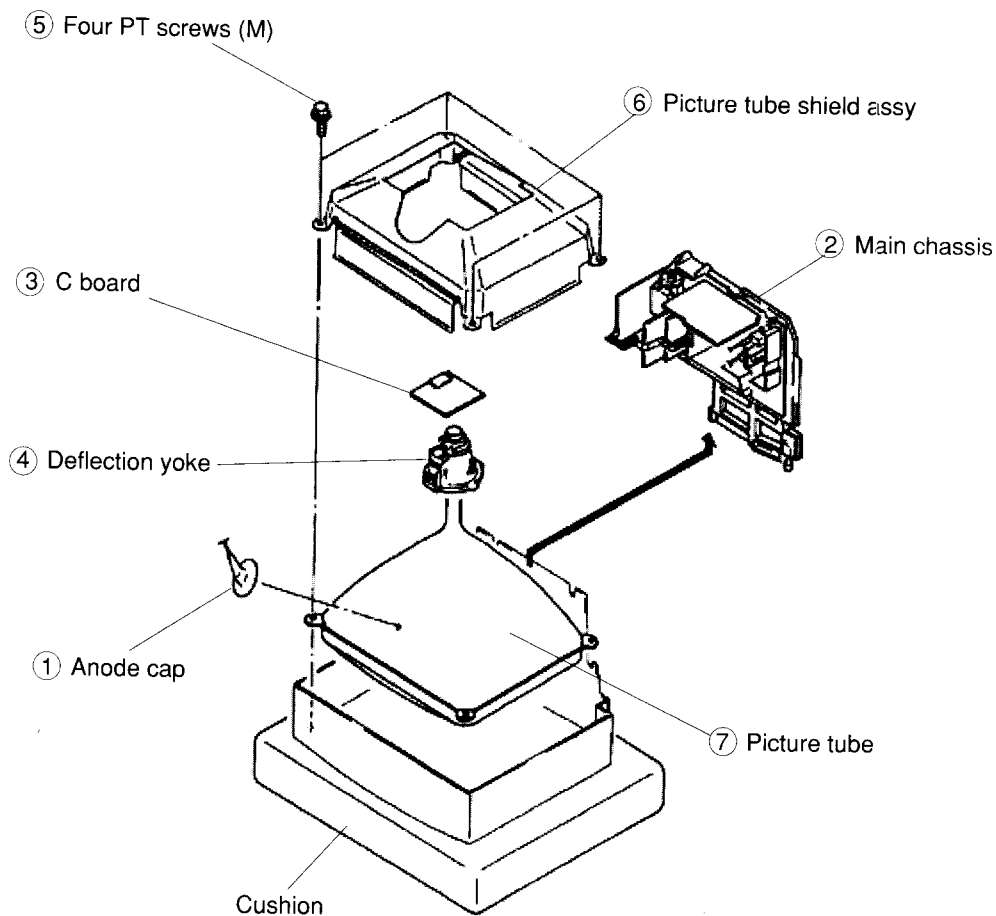

• REMOVAL OF ANODE-CAP


Note: Short circuit the anode of the picture tube and the anode cap to the metal chassis, CRT shield, or carbon painted on the CRT, after removing the anode.

• REMOVING PROCEDURES

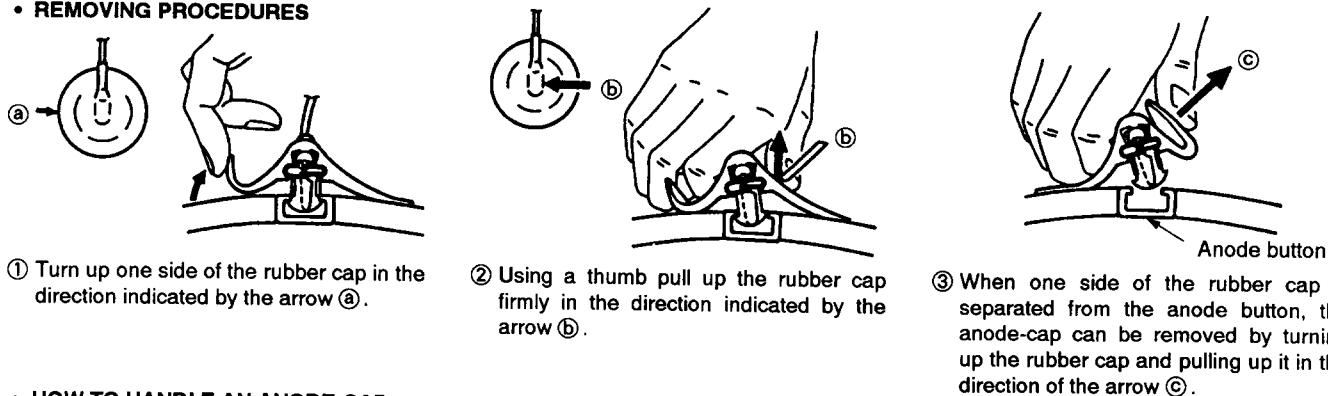

• HOW TO HANDLE AN ANODE-CAP

- ① Don't hurt the surface of anode-caps with sharp shaped material !
- ② Don't press the rubber hardy not to hurt inside of anode-caps !
A metal fitting called as shatter-hook terminal is built in the rubber.
- ③ Don't turn the foot of rubber over hardy !
The shatter-hook terminal will stick out or hurt the rubber.

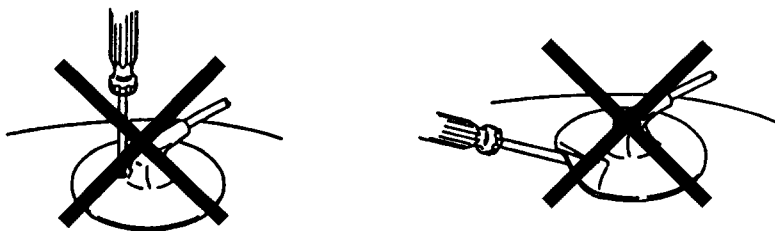

SECTION 3

SET-UP ADJUSTMENTS

- When complete readjustment is necessary or a new picture tube is installed, carry out the following adjustments.
- Unless there is specific instruction to the contrary, carry out these adjustments with the rated power supply.
- Unless there is specific instruction to the contrary, set the controls and switches this way :

● Contrast80%

(or remote control normal)

✱ Brightness50%

- Carry out the following adjustments in this order:

1. Beam landing
2. Convergence
3. Focus
4. White balance

Note: Testing equipment required

1. Colour bar/pattern generator
2. Degausser
3. DC power supply
4. Digital multimeter
5. Oscilloscope

Preparation:

- In order to reduce the influence of geomagnetism on the set's picture tube face it east or west.
- Switch on the set's power and degauss with the degausser.

3-1. BEAM LANDING

1. Input the white signal with the pattern generator.
 Contrast } normal
 Brightness }
2. Position neck ass'y as shown in Fig. 3-2.
3. Set the pattern generator raster signal to red.
4. Move the deflection yoke to the rear and adjust with the purity control so that the red is at the center and the blue and the green take up equally sized areas on each side.
 (see Fig. 3-1 through 3-3.)
5. Move the deflection yoke forward and adjust so that entire screen is red. (See Fig. 3-1.)
6. Switch the raster signal to blue, then to green and verify the condition.
7. When the position of the deflection yoke has been decided, fasten the deflection yoke with the screws.
8. If the beam does not land correctly in all the corners, use a magnet to adjust it.
 (See Fig. 3-4.)

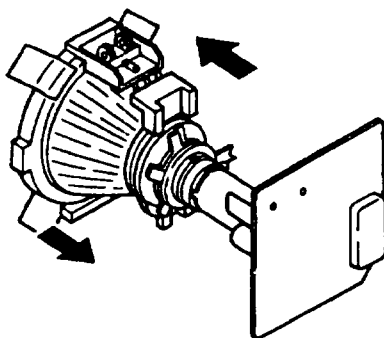


Fig. 3-1

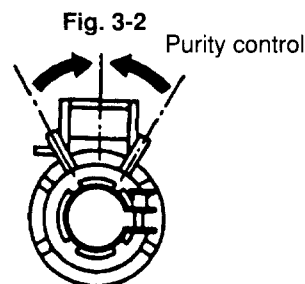


Fig. 3-3

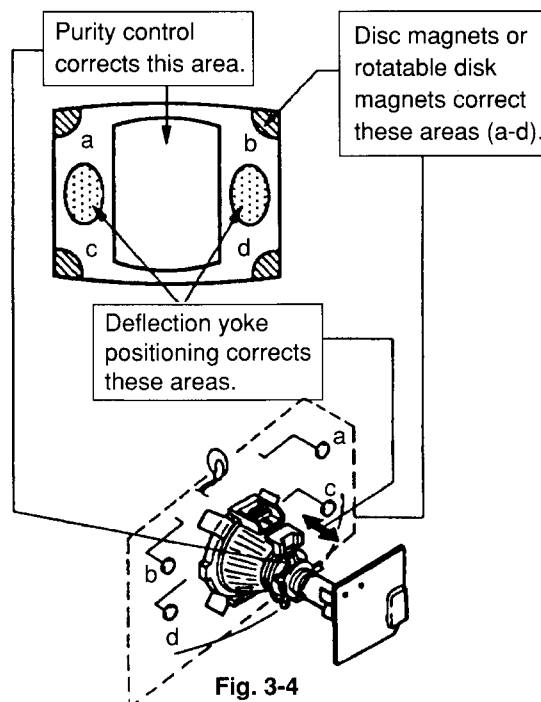
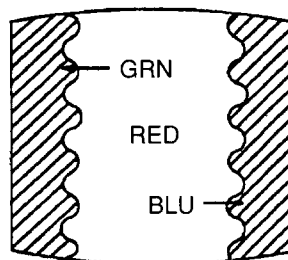



Fig. 3-4

3-2. CONVERGENCE

Preparation :


- Before starting this adjustment, adjust the focus, horizontal size, and vertical size.
- Minimize the brightness setting.
- Provide dot pattern.

(1) Horizontal and vertical static convergence

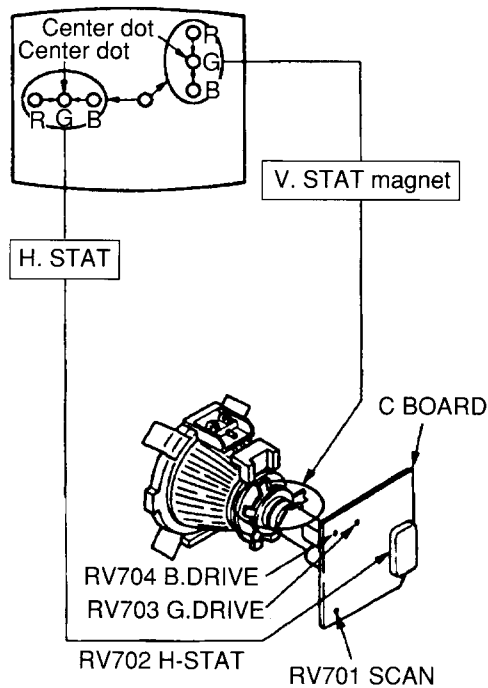


1. (Moving horizontally), adjust the H.STAT control so that the red, green, and blue points are on top of each other at the center of the screen.
2. (Moving vertically), adjust the V.STAT magnet so that the red, green, and blue points are on top of each other at the center of the screen.
3. If the H.STAT variable resistor cannot bring the red, green, and blue points together at the center of the screen, adjust the horizontal convergence with the H.STAT variable resistor and the V. STAT magnet in the manner given below.
(In this case, the H.STAT variable resistor and the V.STAT magnet influence each other.)


- Tilt the V.STAT magnet and adjust the static convergence by opening or closing the V.STAT magnet.

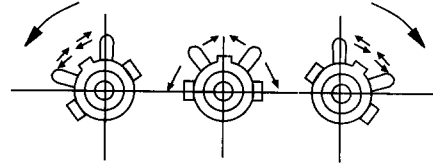


4. If the V.STAT magnet is moved in the direction of the ① and ② arrows, the red, green, and blue points move as shown below.

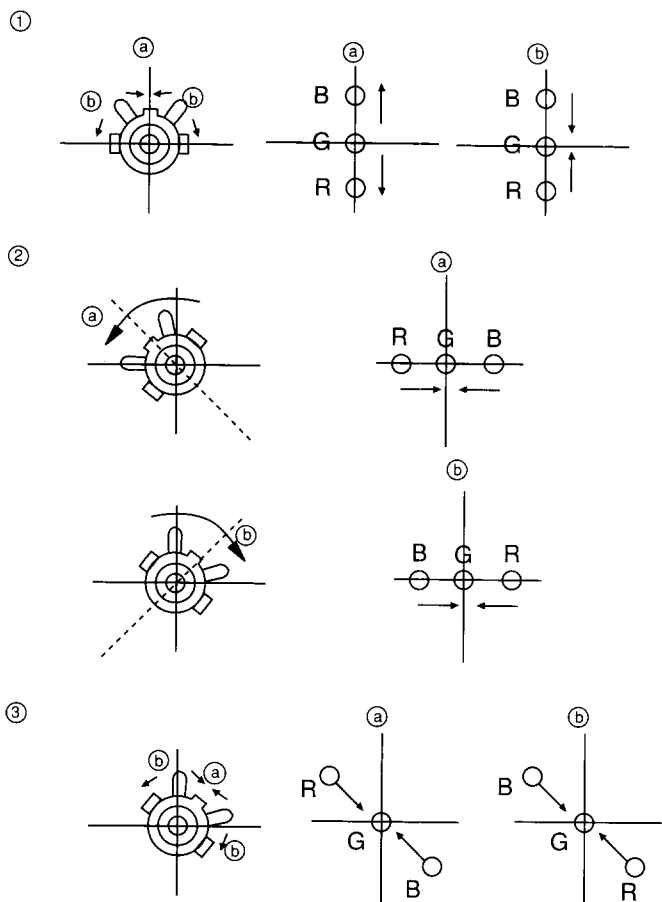

- Operation of BMC (Hexapole) Magnet

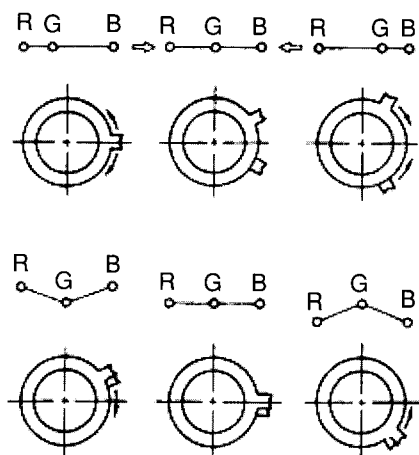


- The respective dot positions resulting from moving each magnet interact, so be sure to perform adjustment while tracking. Use the H.STAT VR to adjust the red, green, and blue dots so they coincide at the center of screen (by moving the dots in the horizontal direction).

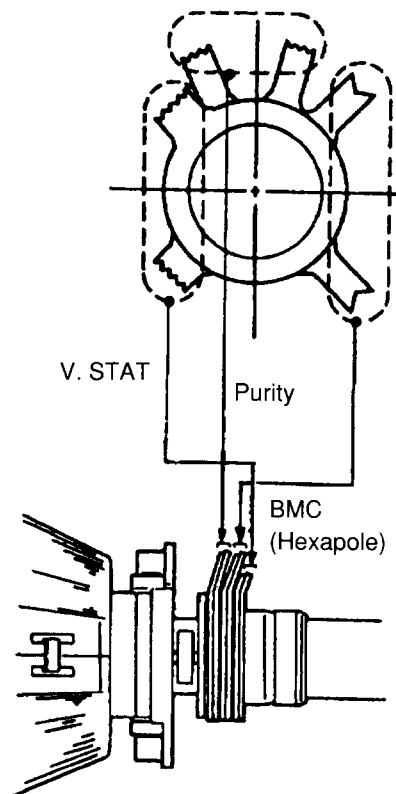


(2) Dynamic convergence adjustment


Preparations:

1. Slightly loosen the deflection yoke screws.
2. Remove the deflection yoke spacer.
3. Move the deflection yoke as shown in the figure below and optimize the convergence.
4. Tighten the deflection yoke screws.
5. Install the deflection yoke spacer.

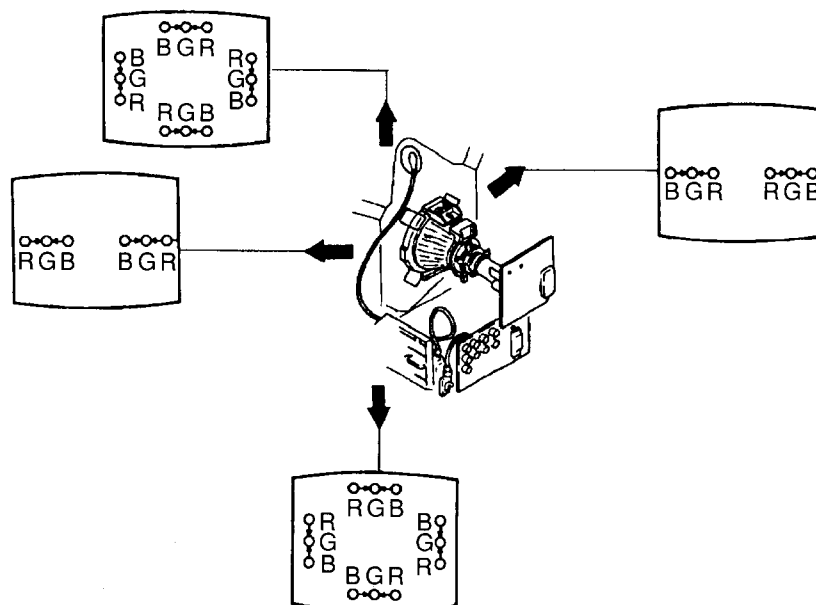

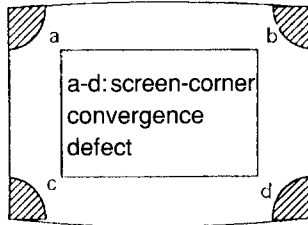(3) Screen corner convergence


Install the permalloy assembly for the section with faulty.

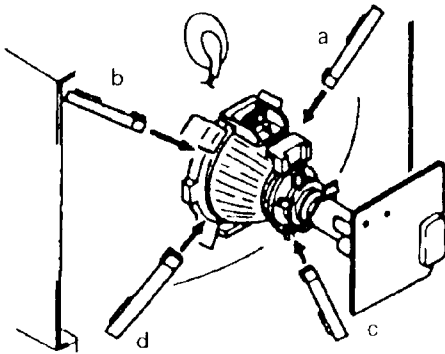

Permalloy ass'y, correction.

3-3. FOCUS

Adjust the focus to optimize the screen.

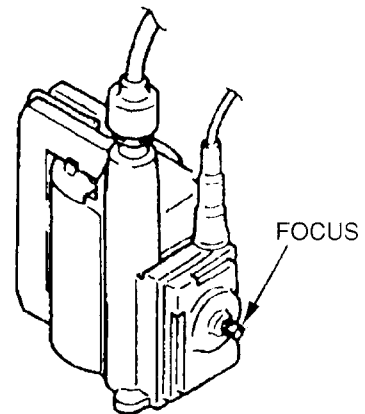**3-4. WHITE BALANCE****SCREEN G2 SETTING**

1. Input the dot signal from the pattern generator.
2. Set the picture brightness control to its lowest level.
3. Apply 170V DC to the R, G, and B cathodes with an external power supply.
4. While watching the picture, adjust G2 control RV701 (Screen) to the point just before the return lines disappear.


WHITE BALANCE ADJUSTMENT

1. Input an all-white signal from the pattern generator.
2. Set the picture brightness and color controls to their normal levels.
3. Use RV704 (B Drive) and RV703 (G Drive) to adjust white balance.

In the adjustments below, have the picture color and brightness settings at their normal levels unless there is a specific instruction to the contrary.

SECTION 4 CIRCUIT ADJUSTMENTS

4-1. A BOARD ADJUSTMENT

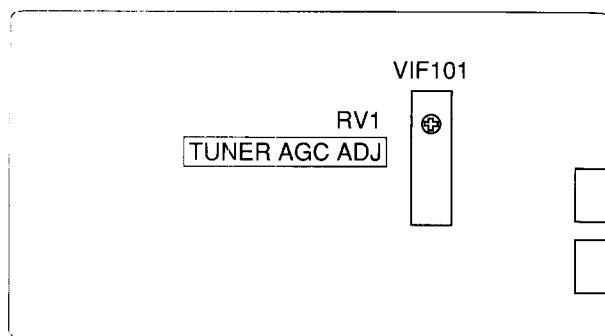


A BOARD (COMPONENT SIDE)

TUNER AGC ADJUSTMENT (VIF101, RV1)

1. Align with an appropriate signal between stations.
2. Adjust RV1 so that snow noise and cross modulation just disappear from the picture.

4-2. B BOARD ADJUSTMENTS

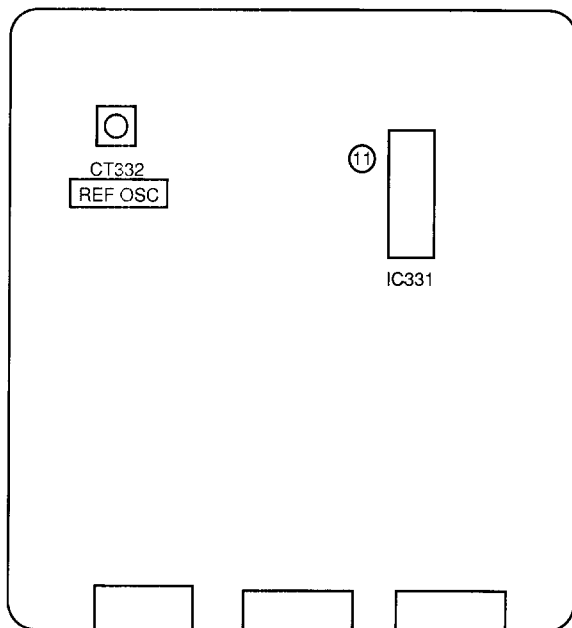


B BOARD (COMPONENT SIDE)

REFERENCE OSCILLATOR ADJUSTMENT (CT332 8.8MHz)

1. Input a PAL colour bar signal.
2. Ground pin (11) of the IC331.
3. Adjust CT332 to obtain synchronization.

4-3. D BOARD ADJUSTMENTS

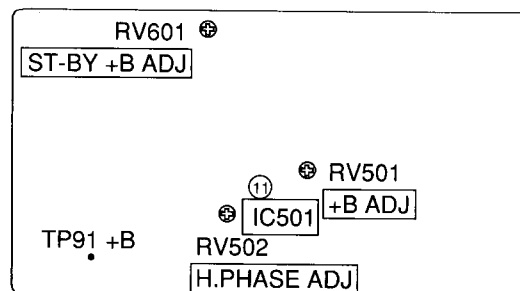

D BOARD (COMPONENT SIDE)

+B ADJUSTMENT (RV501)


1. Connect the digital multimeter to TP91.
2. Adjust RV501 to obtain $135 \pm 0.2V$.

ST-BY +B ADJUSTMENT (RV601)

1. Put the system into \cup standby mode (remote commander).
2. Connect the digital multimeter to TP91.
3. Adjust RV601 to obtain $135 \pm 3V$.
4. Take the system out of \cup standby mode (remote commander).

H.PHASE ADJUSTMENT (RV502)

1. Input a PAL colour bar signal.
2. Set the picture and brightness controls to their normal levels.
3. Set RV1508 (H.CENT) to its mechanical center.
4. Connect the oscilloscope to pin (11) (SCP) of IC501.
5. Rotate RV502 to adjust to $5.1 \pm 0.1\mu s$.

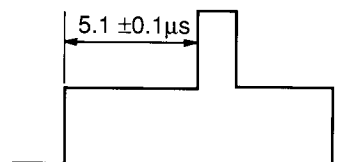


4-4. J1 BOARD ADJUSTMENTS


RV1506	RV1504	RV1501 PIN COR
RV1508		RV1502 PIN PHASE
RV1502	RV1505	RV1503 PIN AMP
RV1503	RV1501	RV1504 H.SIZE
RV1509		RV1505 CORNER COR
RV1507		RV1506 V.CENT
		RV1507 V.SIZE
		RV1508 H.CENT
		RV1509 V.ANGLE

J1 BOARD (COMPONENT SIDE)

 
RV1508
H.CENT (HORIZONTAL CENTER)



RV1504
H.SIZE (HORIZONTAL SIZE)

 


RV1506
V.CENT (VERTICAL CENTER)

 


RV1507
V.SIZE (VERTICAL SIZE)



 RV1509
V.ANGLE (VERTICAL ANGLE)



RV1503
PIN AMP (PINCUSHION AMPLIFIER)

 


RV1502
PIN PHASE (PINCUSHION PHASE)



RV1501
PIN. COR (PINCUSHION CORRECT)



RV1505
CORNER COR (CORNER CORRECT)

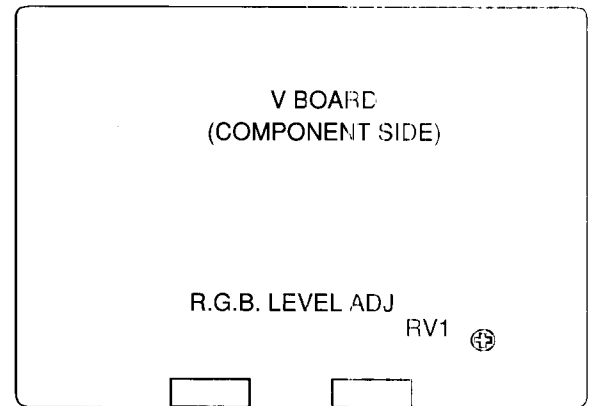**4-5. V BOARD ADJUSTMENT****RGB LEVEL ADJUSTMENT (RV01)**

1. Maximize the picture setting.
2. Adjust RV01 so that the RGB output is 0.75V.



4-6. SECONDARY ADJUSTMENTS

SUB BRIGHTNESS ADJUSTMENT


1. Set the system to receive a test pattern.
 2. Press → • ← on the remote commander to put the system into normal mode.
 3. Switch off the power.
 4. While depressing the adjusting buttons + and – simultaneously, turn on the power. (SUB mode is obtained)
 5. Minimize the ● contrast setting.
 6. Adjust the ☆ brightness control so that the gray scale 0 IRE section is cut off completely and the 20 IRE section is barely glowing.
 7. Depress the ◇ (store) button of the remote commander. (SUB mode is released)
- If there is no test colour pattern
1. Set the system to receive a colour pattern.
 2. Press → • ← on the remote commander to put the system into normal mode.
 - Set the ● colour to its normal state.
 - 3–5. Steps are the same as above.
 6. Since 20 IRE is nearly blue, adjust the e brightness control so that the blue barely glows.
 7. Same as step 7 above.
 8. Press → • ← on the remote commander to put the system into normal mode.

SUB COLOUR ADJUSTMENT

1. Set the system to receive colour bars.
2. Press → • ← on the remote commander to put the system into normal mode.
3. Cut off the power.
4. While depressing the adjustment buttons + and – simultaneously, turn on the power. (SUB mode is obtained).
5. Adjust the colour control so that the B out waveform (pin ⑤ of C board connector CNC72) is as shown in the figure below.
6. Depress the ◇ (store) button of the remote commander. (SUB mode is released)

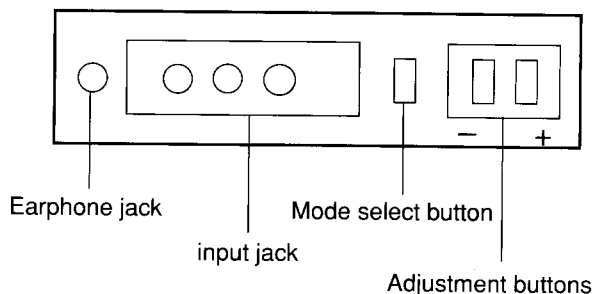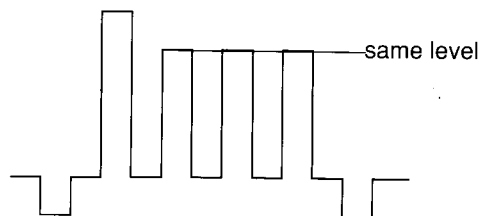

4-5. V BOARD ADJUSTMENT

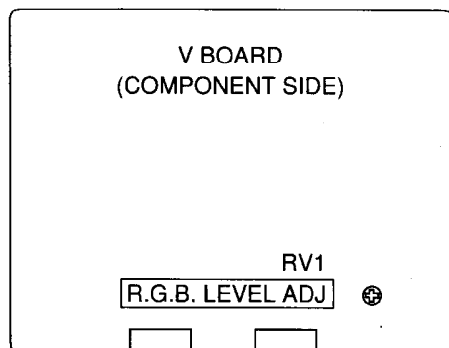

RGB LEVEL ADJUSTMENT (RV01)

1. Maximize the picture setting.
2. Adjust RV01 so that the RGB output is 0.75V.

SUB COLOR ADJUSTMENT

1. Set the system to receive color bars.
2. Press $\rightarrow \bullet \leftarrow$ on the remote commander to put the system into normal mode.
3. Cut off the power.
4. While depressing the adjustment buttons + and - simultaneously, turn on the power. (SUB mode is obtained).
5. Adjust the color control so that the B out waveform (pin ⑤ of C board connector CNC72) is as shown in the figure below.
6. Depress the \diamond (store) button of the remote commander. (SUB mode is released)



4-6. SECONDARY ADJUSTMENTS

SUB BRIGHTNESS ADJUSTMENT


1. Set the system to receive a test pattern.
2. Press $\rightarrow \bullet \leftarrow$ on the remote commander to put the system into normal mode.
3. Switch off the power.
4. While depressing the adjusting buttons + and - simultaneously, turn on the power. (SUB mode is obtained)
5. Minimize the \bullet contrast setting.
6. Adjust the \star brightness control so that the gray scale 0 IRE section is cut off completely and the 20 IRE section is barely glowing.
7. Depress the \diamond (store) button of the remote commander. (SUB mode is released)

If there is no test color pattern

1. Set the system to receive a color pattern.
2. Press $\rightarrow \bullet \leftarrow$ on the remote commander to put the system into normal mode.
Set the \oplus color to its normal state.
- 3-5. Steps are the same as above.
6. Since 20 IRE is nearly blue, adjust the \star brightness control so that the blue barely glows.
7. Same as step 7 above.
8. Press $\rightarrow \bullet \leftarrow$ on the remote commander to put the system into normal mode.

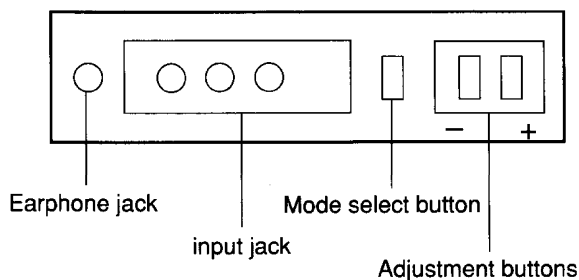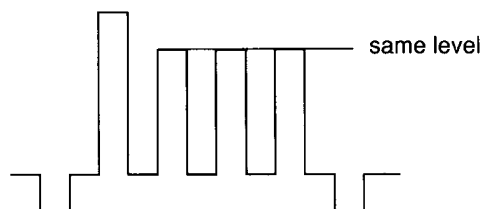

4-3. D BOARD ADJUSTMENTS

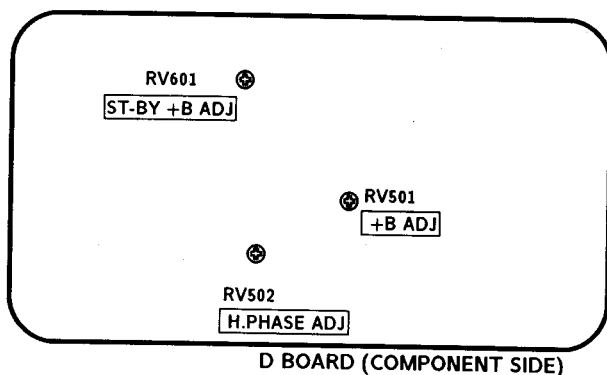

+B ADJUSTMENT (RV501)


1. Connect the digital multimeter to TP91.
2. Adjust RV501 to obtain $135 \pm 0.2V$.

ST-BY +B ADJUSTMENT (RV601)

1. Put the system into ⏻ standby mode (remote commander).
2. Connect the digital multimeter to TP91.
3. Adjust RV601 to obtain $135 \pm 3V$.
4. Take the system out of ⏻ standby mode (remote commander).

H.PHASE ADJUSTMENT (RV502)


1. Input a PAL color bar signal.
2. Set the picture and brightness controls to their normal levels.
3. Set RV1508 (H.CENT) to its mechanical center.
4. Connect the oscilloscope to pin ⑪ (SCP) of IC 501.
5. Rotate RV502 to adjust to $H \pm 0.1\mu s$.

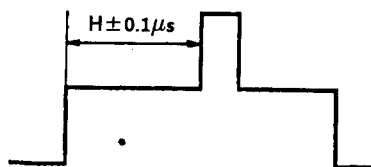

Standard of H. PHASE

Model Size	H
25 "	$5.1\mu s$
29 "	$5.5\mu s$


4-4. J1 BOARD ADJUSTMENTS

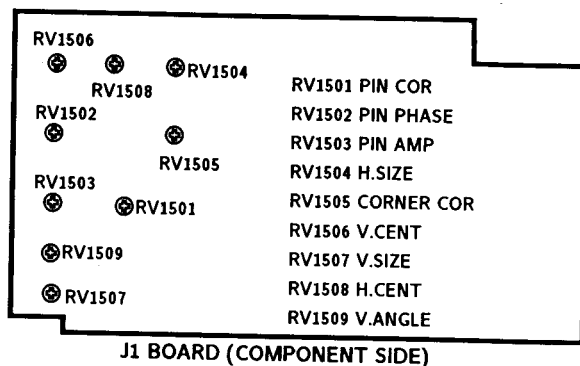


RV1508
H. CENT (HORIZONTAL CENTER)



 
RV1504
H. SIZE (HORIZONTAL SIZE)




RV1506
V. CENT (VERTICAL CENTER)

 


RV1507
V. SIZE (VERTICAL SIZE)

 


RV1509
V. ANGLE (VERTICAL ANGLE)

 

RV1503
PIN AMP (PINCUSHION AMPLIFIER)

 

RV1502
PIN PHASE (PINCUSHION PHASE)

 


RV1501
PIN. COR (PINCUSHION CORRECT)



RV1505
CORNER COR (CORNER CORRECT)



4-5. V BOARD ADJUSTMENTS

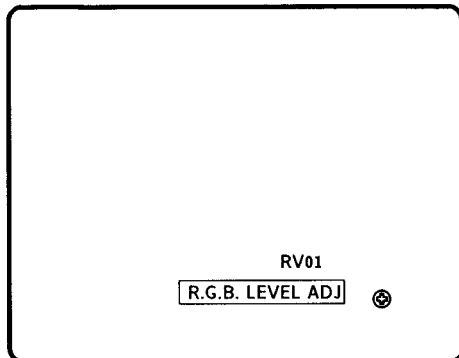

V BOARD (COMPONENT SIDE)

RGB LEVEL ADJUSTMENT (RV01)

1. Maximize the picture setting.
2. Adjust RV01 so that the RGB output is 0.75V.

4-6. SECONDARY ADJUSTMENTS

SUB BRIGHTNESS ADJUSTMENT



1. Set the system to receive a test pattern.
2. Press $\rightarrow \bullet \leftarrow$ on the remote commander to put the system into normal mode.
3. Switch off the power.
4. While depressing the adjusting buttons + and - simultaneously, turn on the power. (SUB mode is obtained)
5. Minimize the \bullet contrast setting.
6. Adjust the \odot brightness control so that the gray scale 0 IRE section is cut off completely and the 20 IRE section is barely glowing.
7. Depress the \diamond (store) button of the remote commander.
(SUB mode is released)

If there is no test color pattern


1. Set the system to receive a color pattern.
2. Press $\rightarrow \bullet \leftarrow$ on the remote commander to put the system into normal mode.
Set the \oplus color to its normal state.
- 3-5. Steps are the same as above.
6. Since 20 IRE is nearly blue, adjust the \odot brightness control so that the blue barely glows.
7. Same as step 7 above.
8. Press $\rightarrow \bullet \leftarrow$ on the remote commander to put the system into normal mode.

SUB COLOR ADJUSTMENT

1. Set the system to receive color bars.
2. Press $\rightarrow \bullet \leftarrow$ on the remote commander to put the system into normal mode.
3. Cut off the power.
4. While depressing the adjustment buttons + and - simultaneously, turn on the power. (SUB mode is obtained).
5. Adjust the color control so that the B out waveform (pin ⑤ of C board connector CNC72) is as shown in the figure below.
6. Depress the \diamond (store) button of the remote commander. (SUB mode is released)

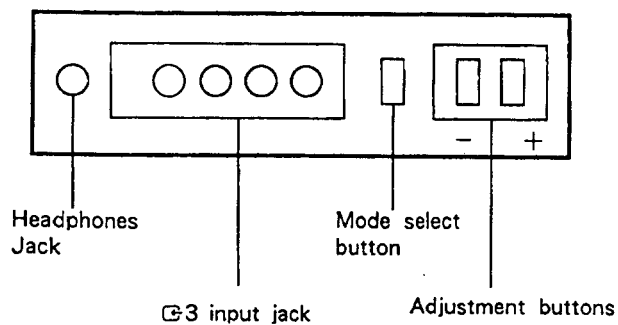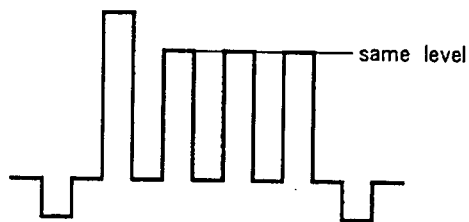

5-2. CIRCUIT BOARD LOCATION

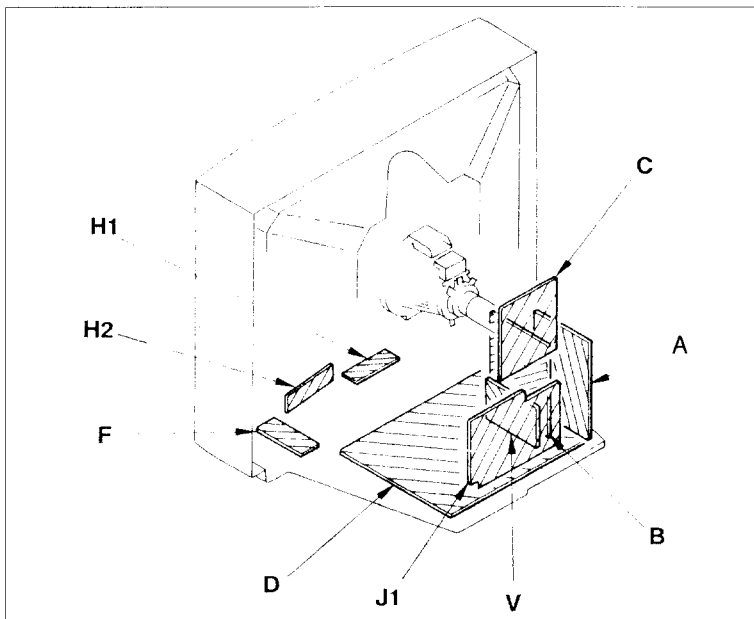

5-3. SCHEMATIC DIAGRAMS AND PRINTED WIRING BOARDS - Conductor Side -

Note :

- All capacitors are in μF unless otherwise noted. pF: μF 50WV or less are not indicated except for electrolytic and tantalums.
- All resistors are in ohms.
 $\text{k}\Omega = 1000\Omega$, $\text{M}\Omega = 1000\text{K}\Omega$
- Indication of resistance, which does not have one for rating electrical power, is as follows.

Pitch : 5 mm
Rating electrical power $\frac{1}{4}$ W

- : nonflammable resistor.
- : internal component.
- : panel designation, or adjustment for repair.
- All variable and adjustable resistors have characteristic curve B, unless otherwise noted.
- : earth - ground.
- : earth - chassis.
- : no mounted.



- Readings are taken with a colour-bar signal input.
- Readings are taken with 10M Ω digital multimeter.
- Voltages are dc with respect to ground unless otherwise noted.
- Voltage variations may be noted due to normal production tolerances.
- All voltages are in V.
- Circled numbers are waveform references.
- : B+ bus.
- : signal path. (RF)


Reference information

RESISTOR	: RN	METAL FILM
	: RC	SOLID
	: FPRD	NONFLAMMABLE CARBON
	: FUSE	NONFLAMMABLE FUSIBLE
	: RS	NONFLAMMABLE METAL OXIDE
	: RB	NONFLAMMABLE CEMENT
COIL	: RW	NONFLAMMABLE WIREWOUND
	:	ADJUSTABLE RESISTOR
	: LF-8L	MICRO INDUCTOR
CAPACITOR	: TA	TANTALUM
	: PS	STYROL
	: PP	POLYPROPYLENE
	: PT	MYLAR
	: MPS	METALIZED POLYESTER
	: MPP	METALIZED POLYPROPYLENE
	: ALB	BIPOLAR
	: ALT	HIGH TEMPERATURE
	: ALR	HIGH RIPPLE


Note : The components identified by shading and marked are critical for safety. Replace only with part number specified.

  5-1. BLOCK DIAGRAM (1)



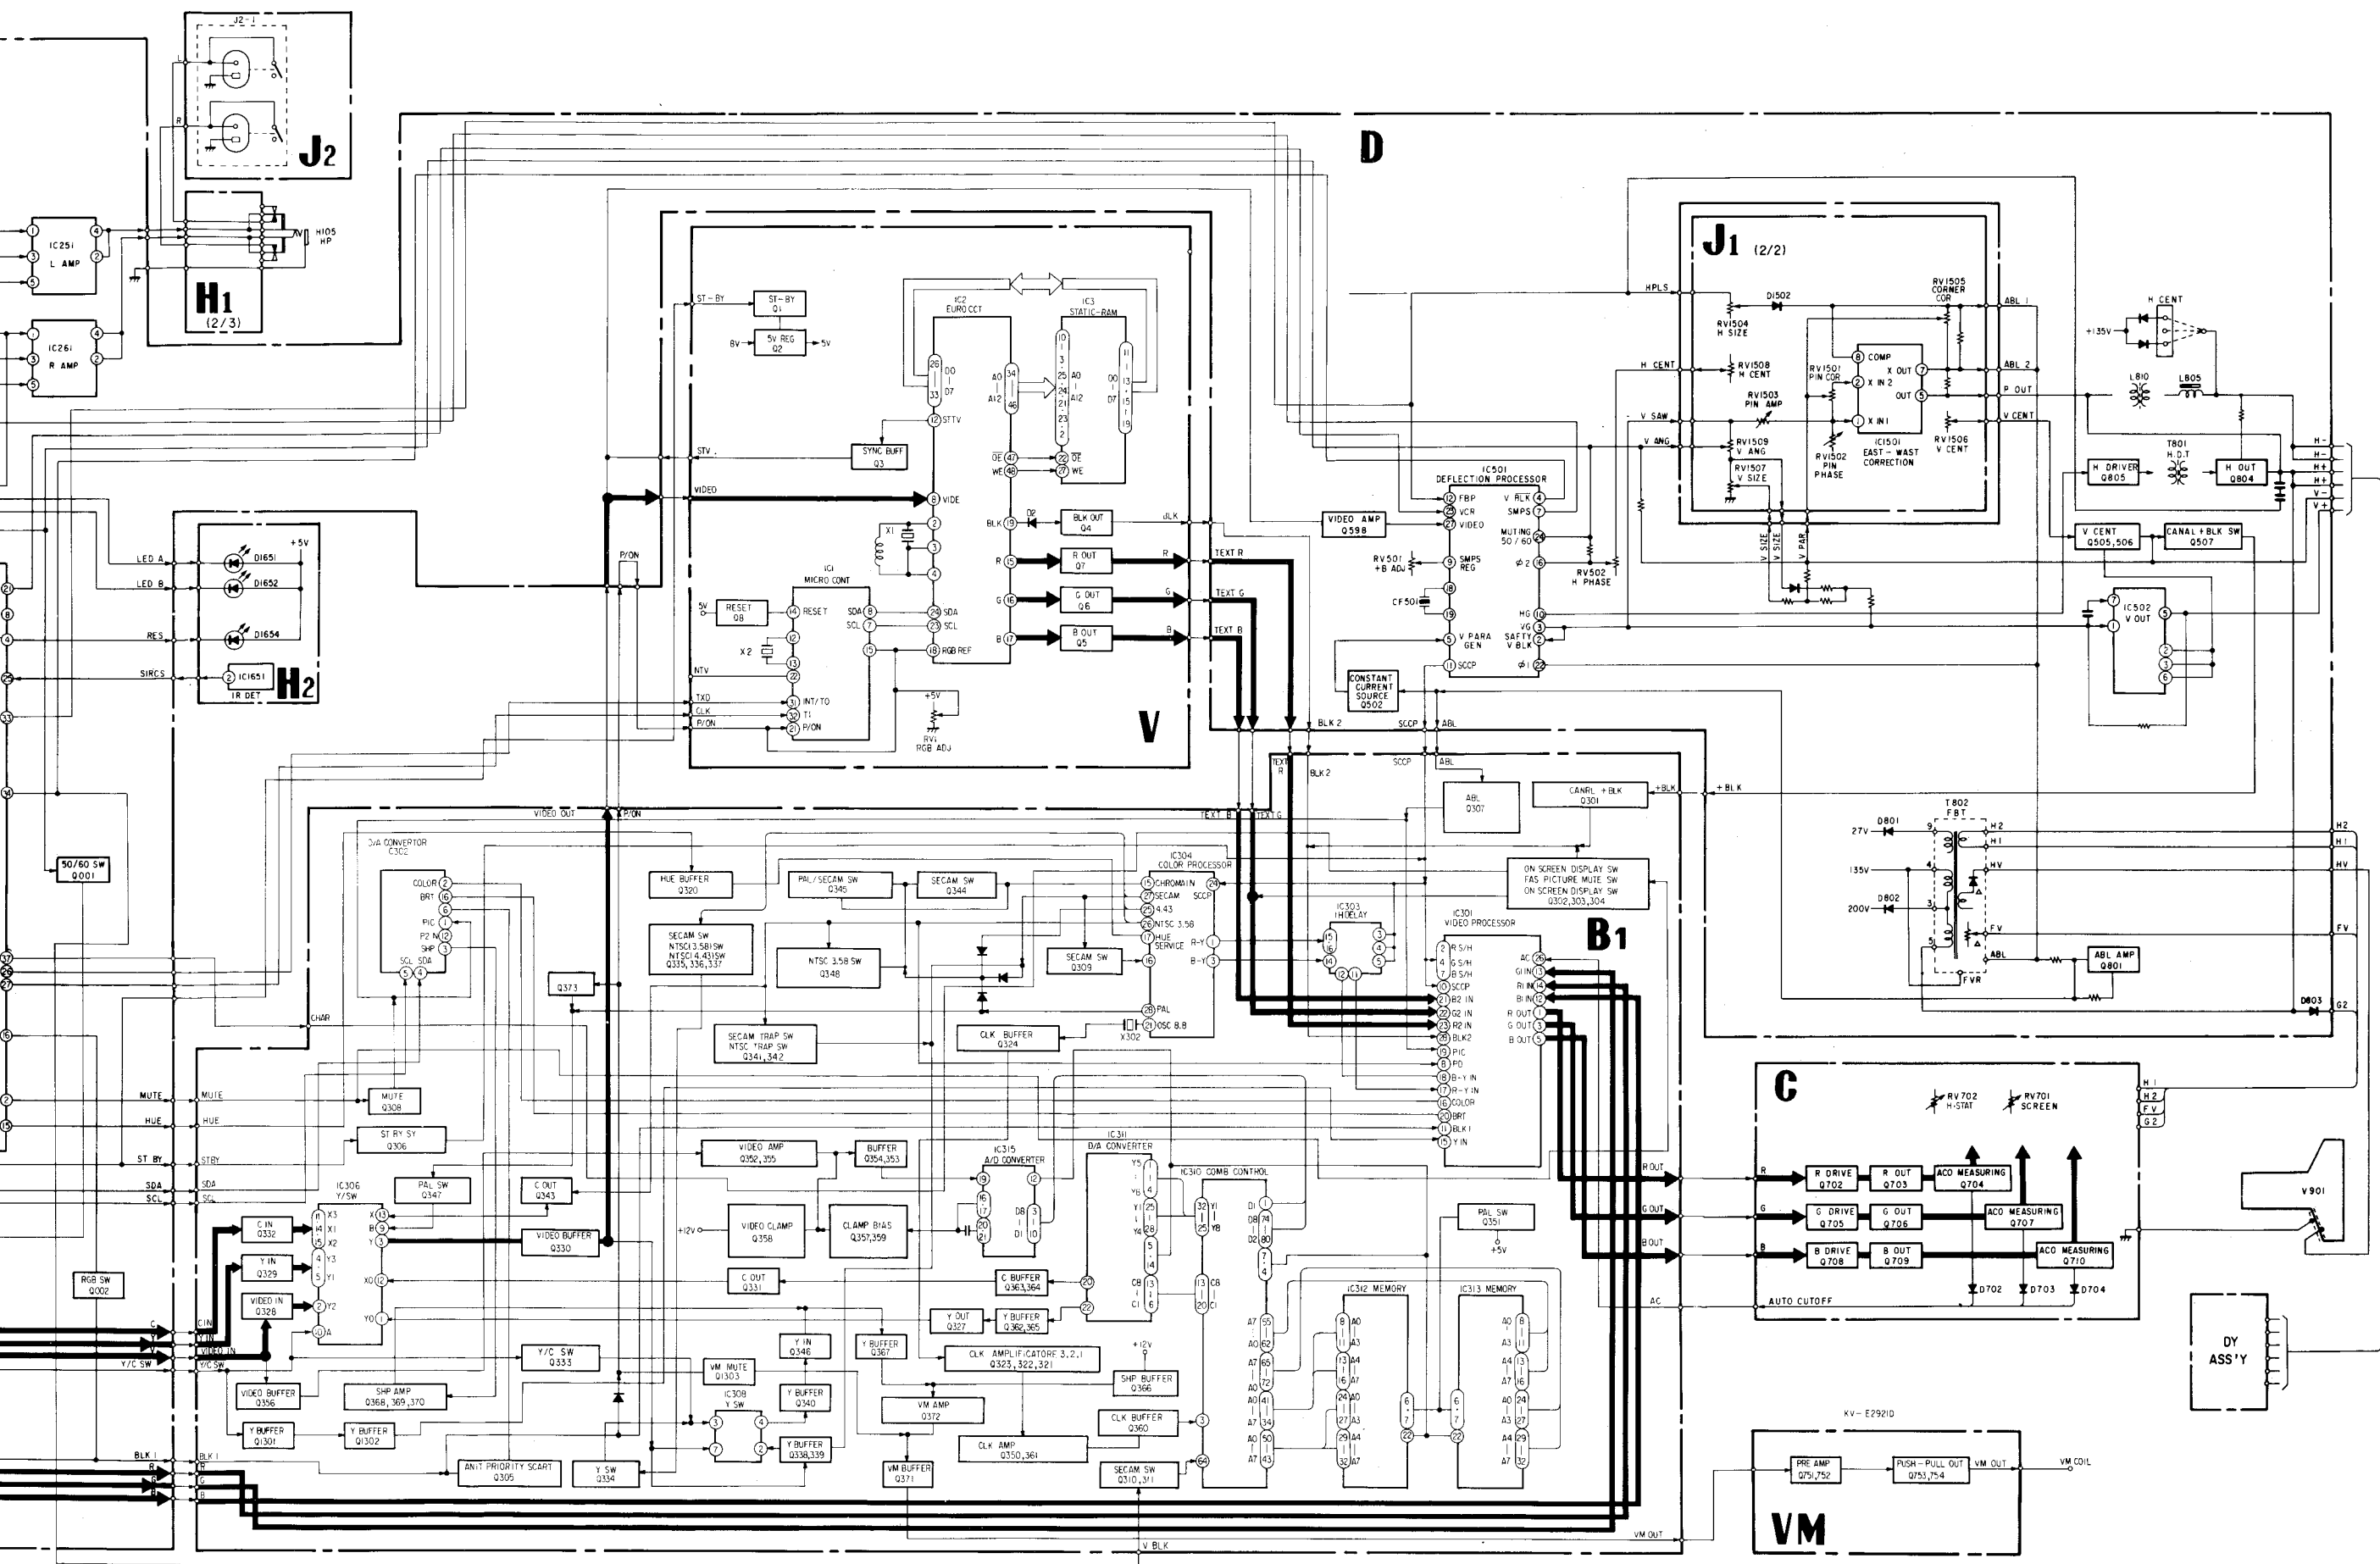


5-2. CIRCUIT BOARDS LOCATION

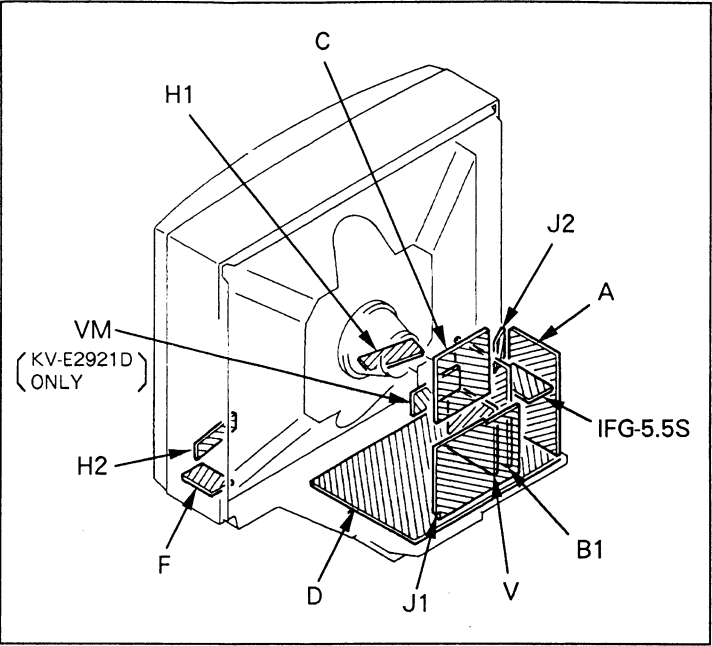


 



5-3. SCHEMATIC DIAGRAM AND PRINTED WIRING BOARDS

Note: The components identified by shading and mark  are critical for safety. Replace only with part number specified.

Note :

- All capacitors are in μF unless otherwise noted.
pF: μF 50WV or less are not indicated except for electrolytics.
- Indication of resistance, which does not have one for rating electrical power, is as follows.

Pitch : 5mm
Rating electrical power : 1/4W


- Chip resistor is in 1/10W.
- All resistors are in ohms. $k\Omega = 1000\Omega$, $M\Omega = 1000k\Omega$
-  : nonflammable resistor.
-  : fusible resistor.
- \triangle : internal component.
-  : panel designation and adjustment for repair.
- All variable and adjustable resistors have characteristic curve B, unless otherwise noted.
- All voltages are in V.
- Readings are taken with a $10M\Omega$ digital multimeter.
- Readings are taken with a color-bar signal input.
- Voltage variations may be noted due to normal production tolerances.
-  : B + line.
-  : signal path. (RF)

Reference information


RESISTOR	: RN	METAL FILM
	: RC	SOLID
	: FPRD	NONFLAMMABLE CARBON
	: FUSE	NONFLAMMABLE FUSIBLE
	: RS	NONFLAMMABLE METAL OXIDE
	: RB	NONFLAMMABLE CEMENT
	: RW	NONFLAMMABLE WIREWOUND
	: *	ADJUSTMENT RESISTOR
COIL	: LF-8L	MICRO INDUCTOR
CAPACITOR	: TA	TANTALUM
	: PS	STYROL
	: PP	POLYPROPYLENE
	: PT	MYLAR
	: MPS	METALIZED POLYESTER
	: MPP	METALIZED POLYPROPYLENE
	: ALB	BIPOLAR
	: ALT	HIGH TEMPERATURE
	: ALR	HIGH RIPPLE

A [TUNER, SIF, VIF] **F** [AC IN, POWER SW] **J1** [AUDIO CONTROL, AV INPUT, Y/C INPUT, SCART VIDEO OUT, EAST-WEST CORRECTION] **J2** [SPEAKER TERMINAL] **VM** [V.C. MOTOR]

-A BOARD-

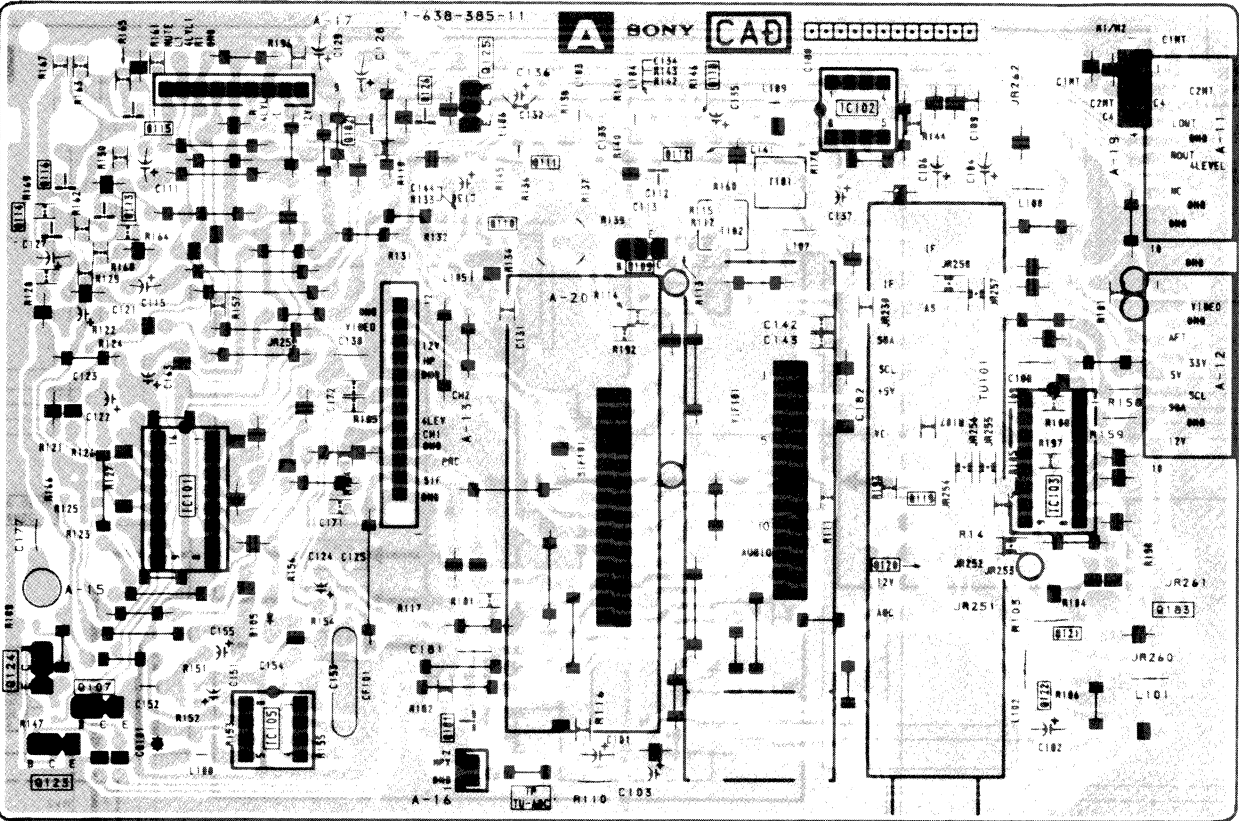


-F BOARD-

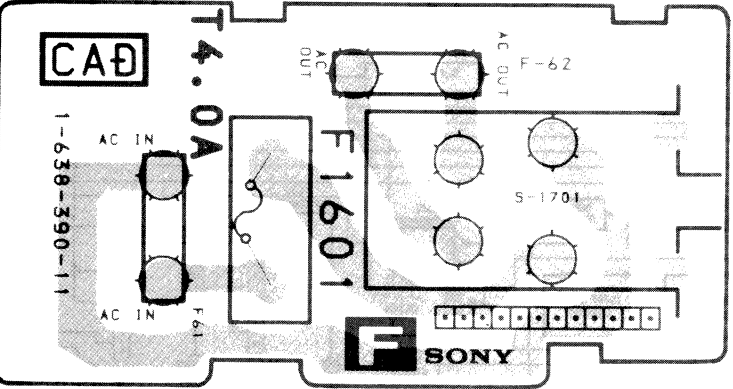


30

5-2. CIRCUIT BOARDS LOCATION

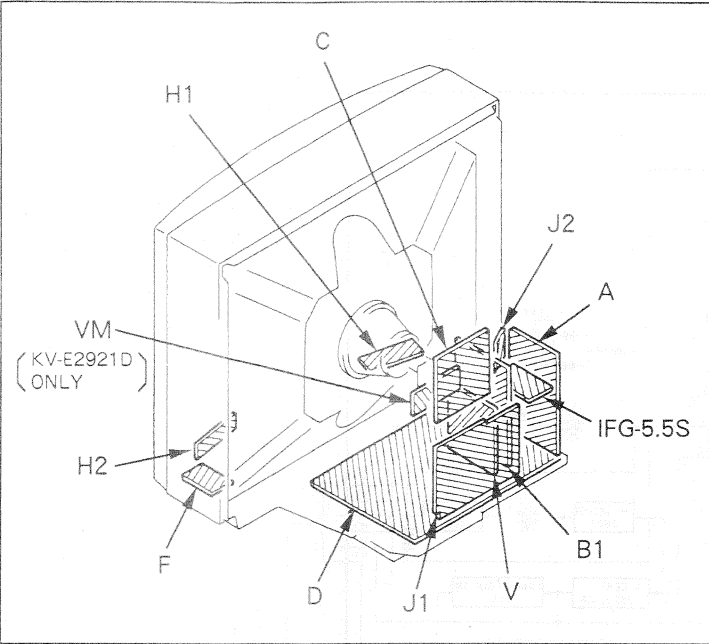






5-3. SCHEMATIC DIAGRAM AND PRINTED WIRING BOARDS

Note: The components identified by shading and mark  are critical for safety. Replace only with part number specified.

Note :

  - All capacitors are in μF unless otherwise noted.
pF: μF 50WV or less are not indicated except for electrolytics.
- Indication of resistance, which does not have one for rating electrical power, is as follows.

Pitch : 5mm
Rating electrical power: 1/4W


- Chip resistor is in 1/10W.
- All resistors are in ohms. $k\Omega = 1000\Omega$, $M\Omega = 1000k\Omega$
-  : nonflammable resistor.
-  : fusible resistor.
- \triangle : internal component.
-  : panel designation and adjustment for repair.
- All variable and adjustable resistors have characteristic curve B, unless otherwise noted.
- All voltages are in V.
- Readings are taken with a $10M\Omega$ digital multimeter.
- Readings are taken with a color-bar signal input.
- Voltage variations may be noted due to normal production tolerances.
-  : B+ line.
-  : signal path. (RF)

Reference information


RESISTOR	: RN	METAL FILM
	: RC	SOLID
	: FPRD	NONFLAMMABLE CARBON
	: FUSE	NONFLAMMABLE FUSIBLE
	: RS	NONFLAMMABLE METAL OXIDE
	: RB	NONFLAMMABLE CEMENT
COIL	: RW	NONFLAMMABLE WIREWOUND
	: *	ADJUSTMENT RESISTOR
	: LF-8L	MICRO INDUCTOR
CAPACITOR	: TA	TANTALUM
	: PS	STYROL
	: PP	POLYPROPYLENE
	: PT	MYLAR
	: MPS	METALIZED POLYESTER
	: MPP	METALIZED POLYPROPYLENE
	: ALB	BIPOLAR
	: ALT	HIGH TEMPERATURE
	: ALR	HIGH RIPPLE

A [TUNER, SIF, VIF] **F** [AC IN, POWER SW] **J1** [AUDIO CONTROL, AV INPUT, Y/C INPUT, SCART VIDEO OUT, EAST-WEST CORRECTION] **J2** [SPEAKER TERMINAL] **VM** [TV]

—A BOARD—

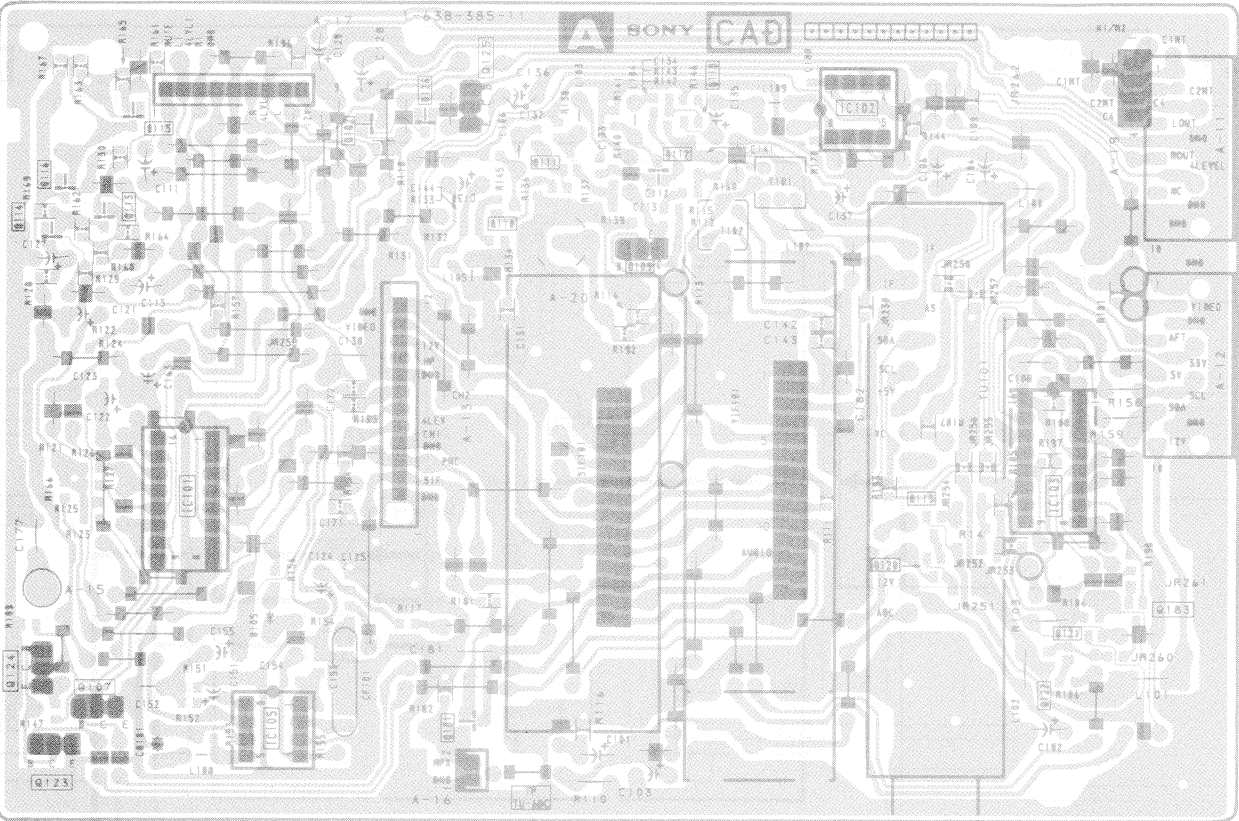


—F BOARD—

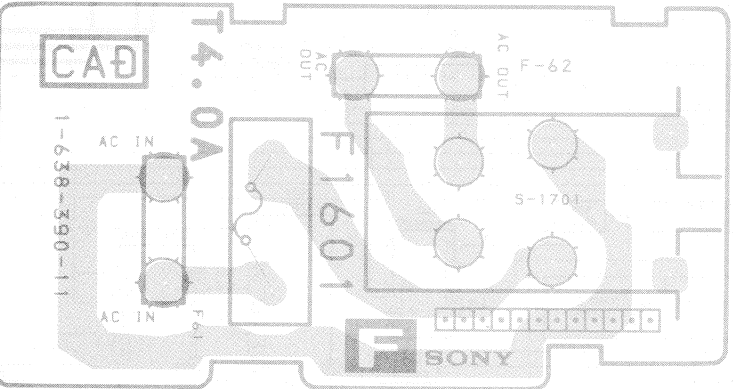


30

[SIRCS, RECEIVER,
INDICATOR]

-VM BOARD- (KV-E2921D ONLY)




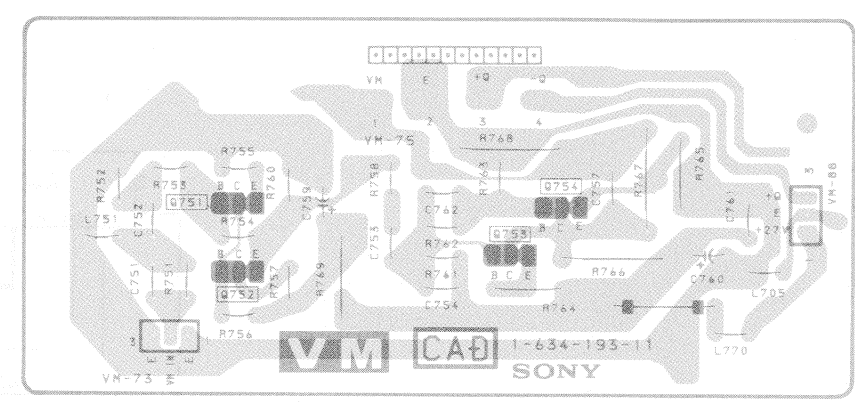


A
B
C
D
E
F
G
H
I
J
K
L
M
N
O

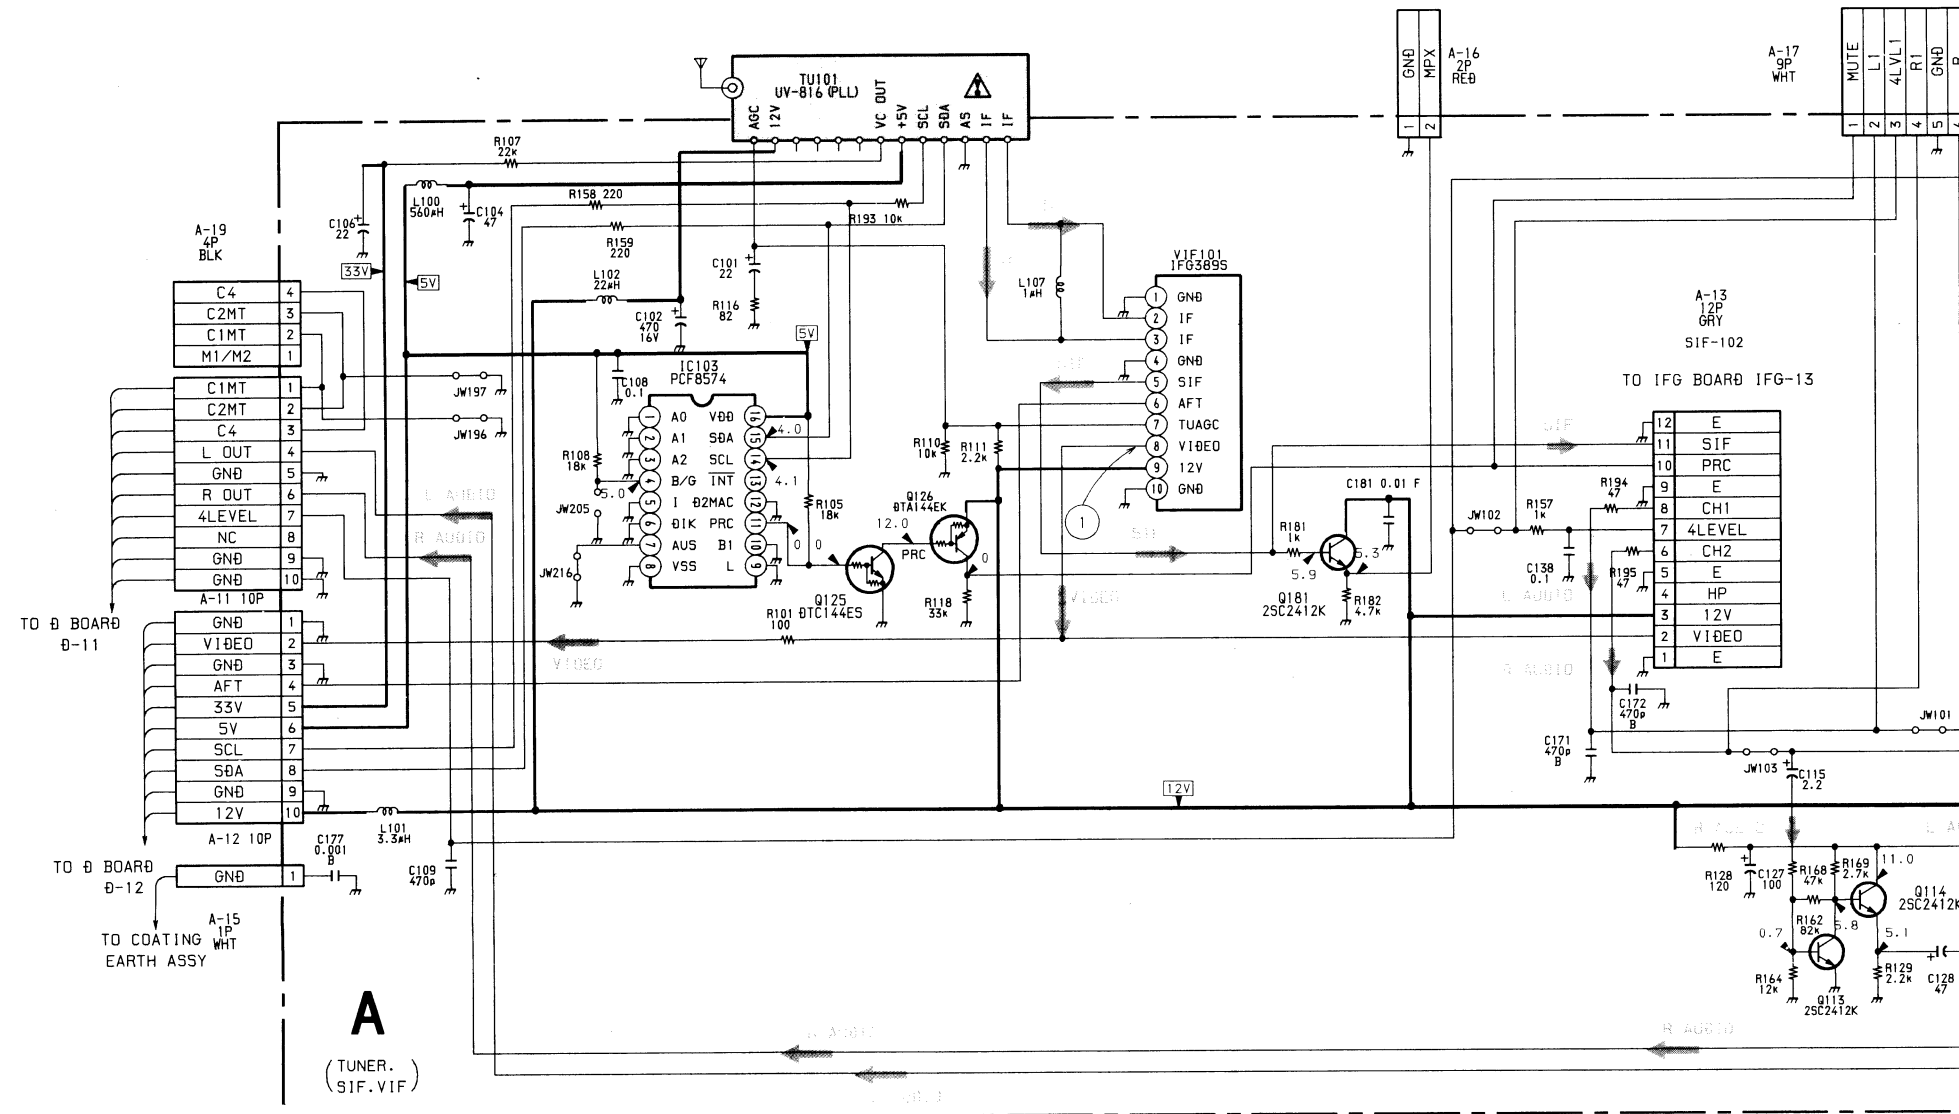

A BOARD

IC103	PCF8574
Q113	2SC2412K
Q114	2SC2412K
Q115	2SC2412K
Q116	2SC2412K
Q125	DTC144ES
Q126	DTA144EK
Q181	2SC2412K

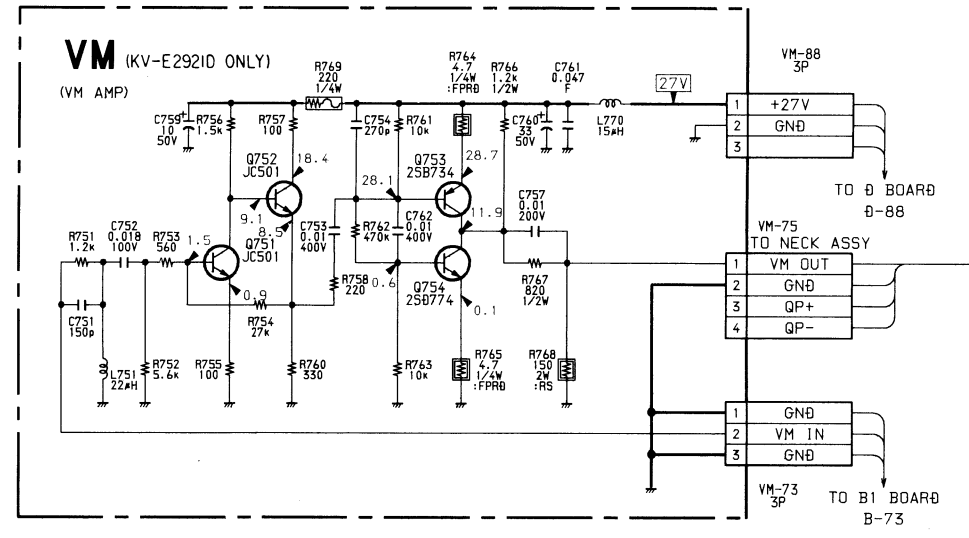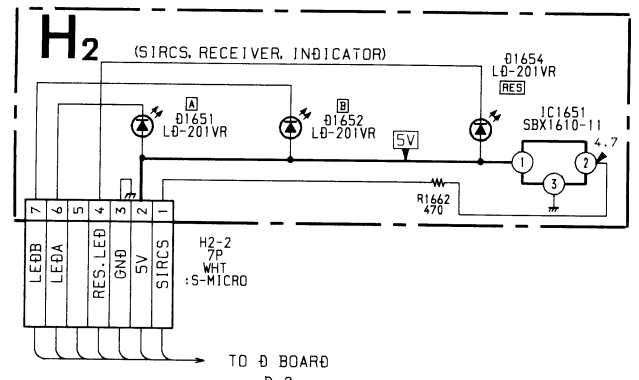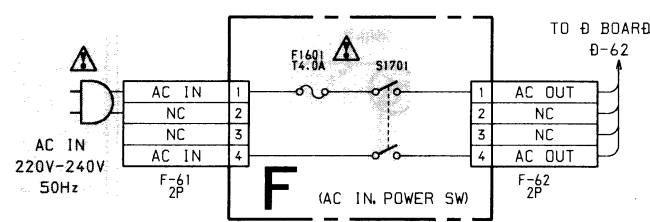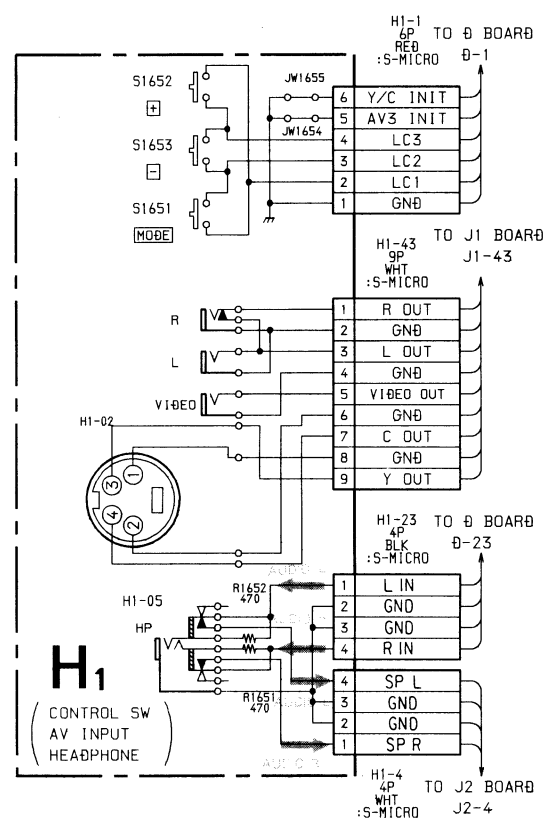


H2 BOARD

IC1651	SBX1610-11	INFRARED RECIVER
Q1651	LQ-201VR	AUDIO CHANNEL A INDICATOR
Q1652	LQ-201VR	AUDIO CHANNEL B INDICATOR
Q1654	LQ-201VR	RESET

VM BOARD (KV-E2921D ONLY)


Q751	JC501	RE
Q752	JC501	RE
Q753	2SB734	PU
Q754	2SB774	PU

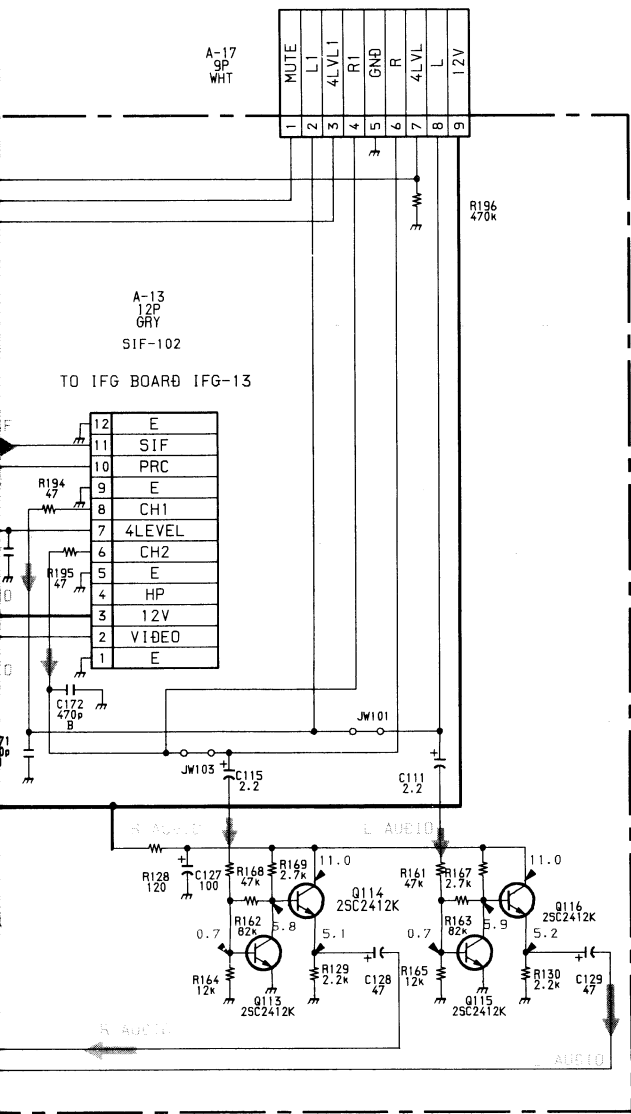

A BOARD


IC103	PCF8574	EXPANDER
Q113	2SC2412K	AUDIO AMP
Q114	2SC2412K	AUDIO AMP
Q115	2SC2412K	AUDIO AMP
Q116	2SC2412K	AUDIO AMP
Q125	0TC144ES	MUTE SW
Q126	0TA144EK	MUTE SW
Q181	2SC2412K	NICAM BUFFER

WAVEFORMS A BOARD

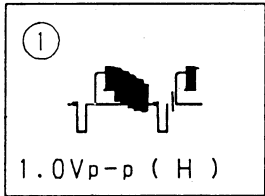


TO 0 BOARD
0-62


OUT
OUT

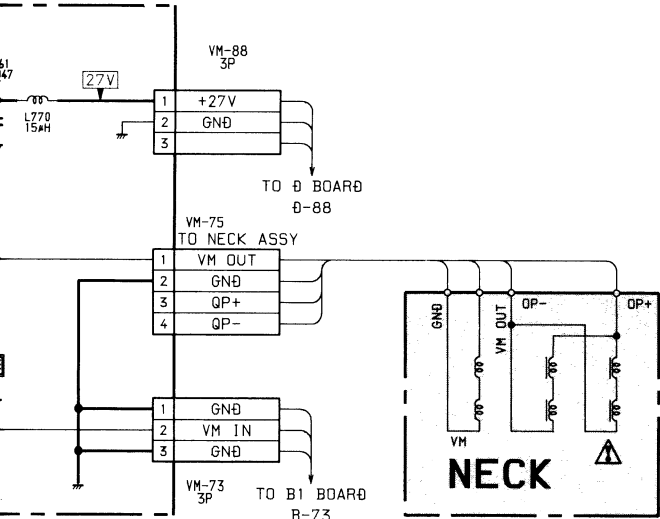


VM BOARD (KV-E2921D ONLY)

Q751	JC501	REF AMP
Q752	JC501	REF AMP
Q753	2SB734	PUSH-PULL OUT
Q754	2SB774	PUSH-PULL OUT

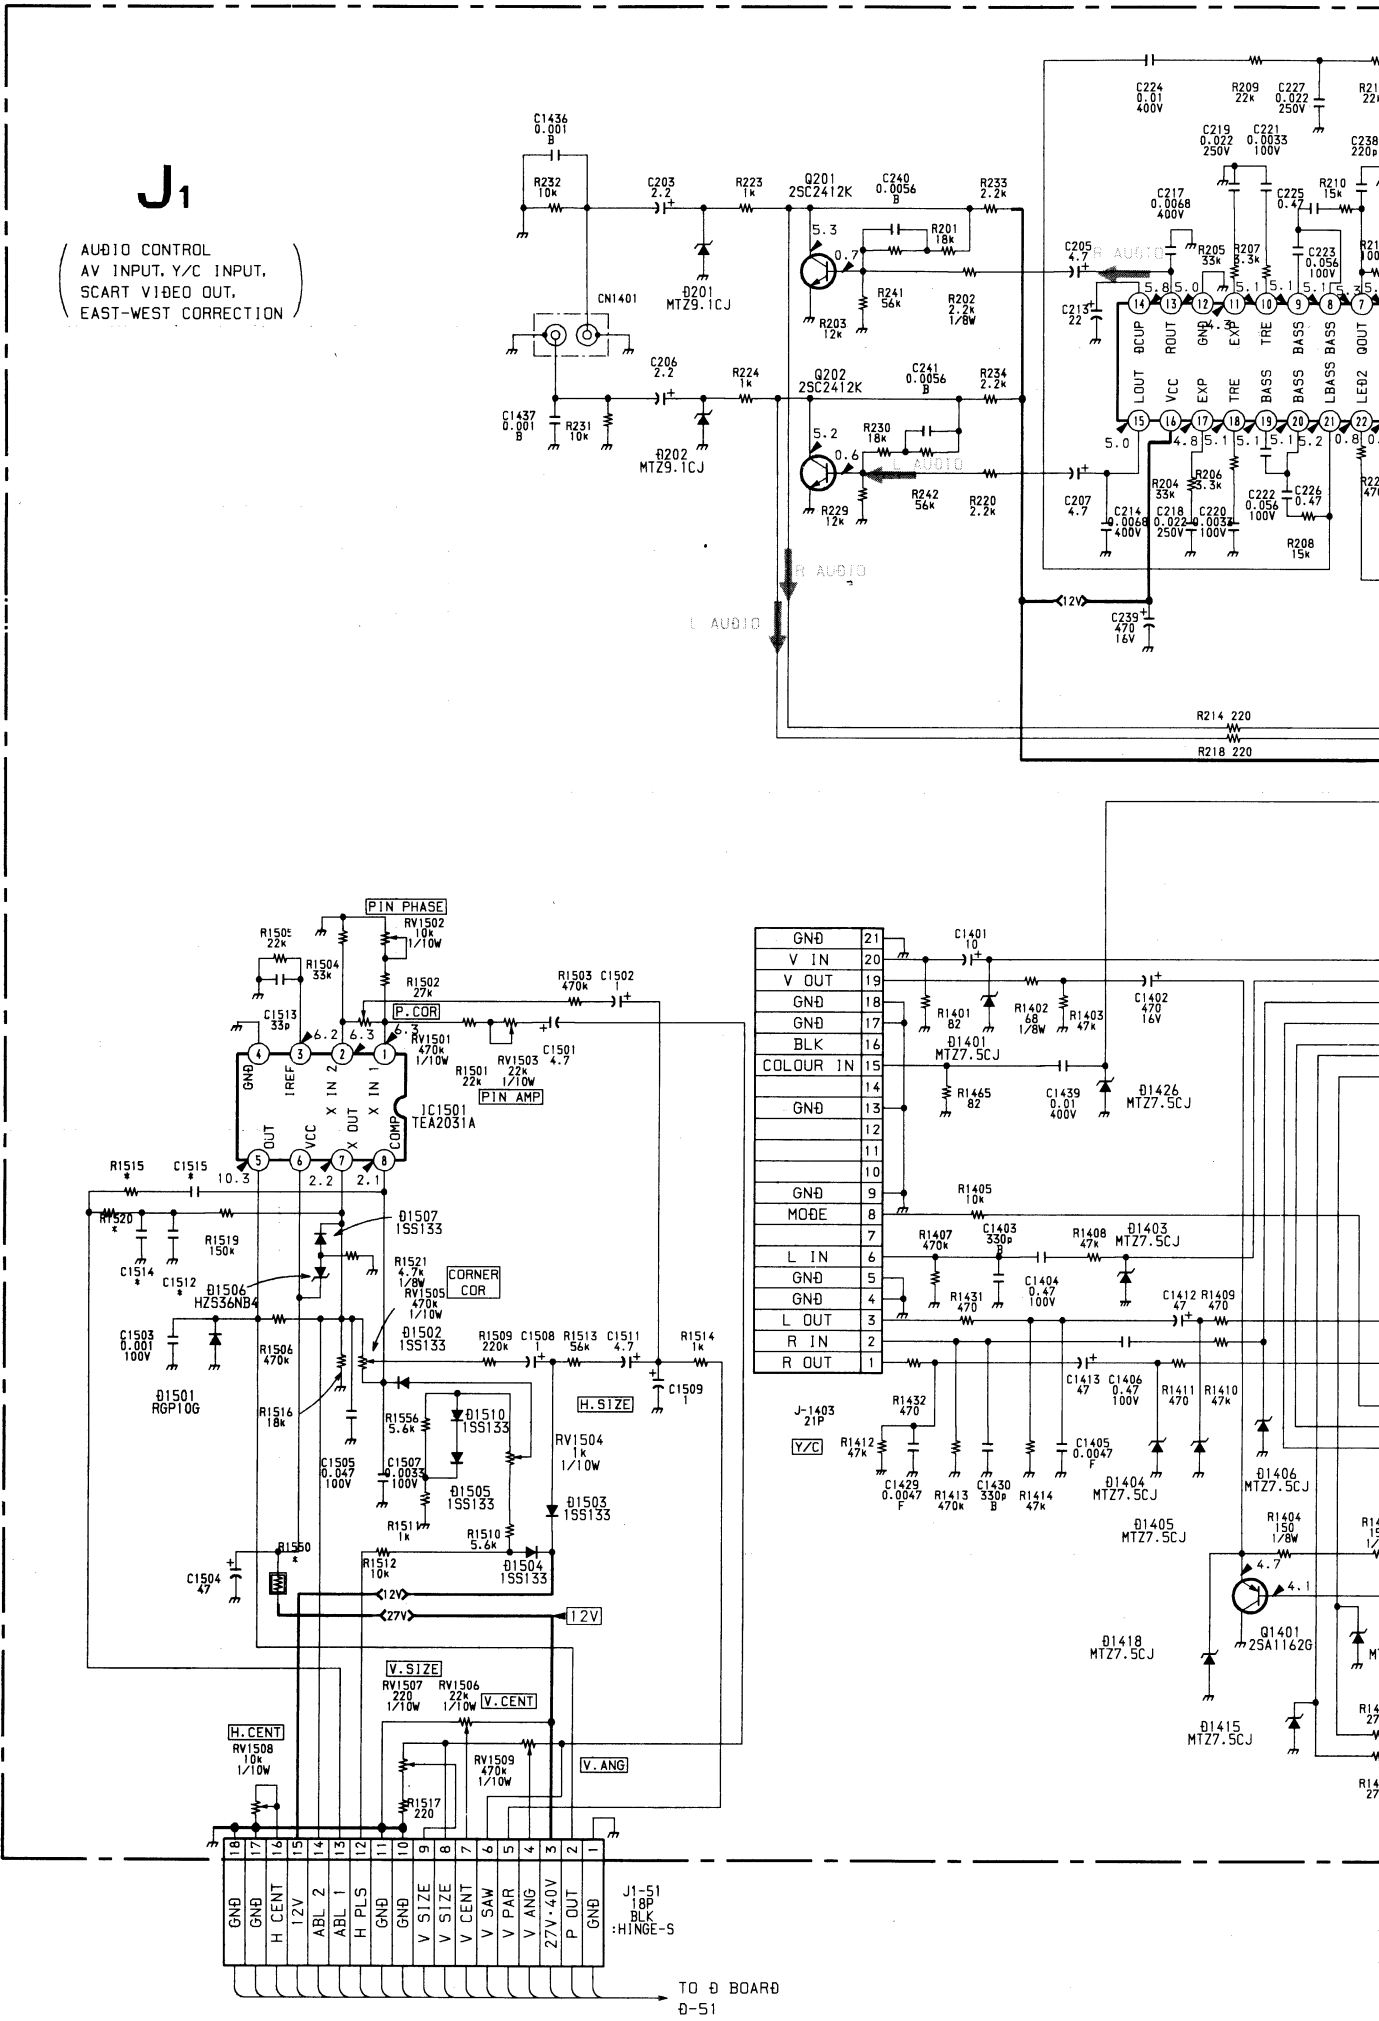

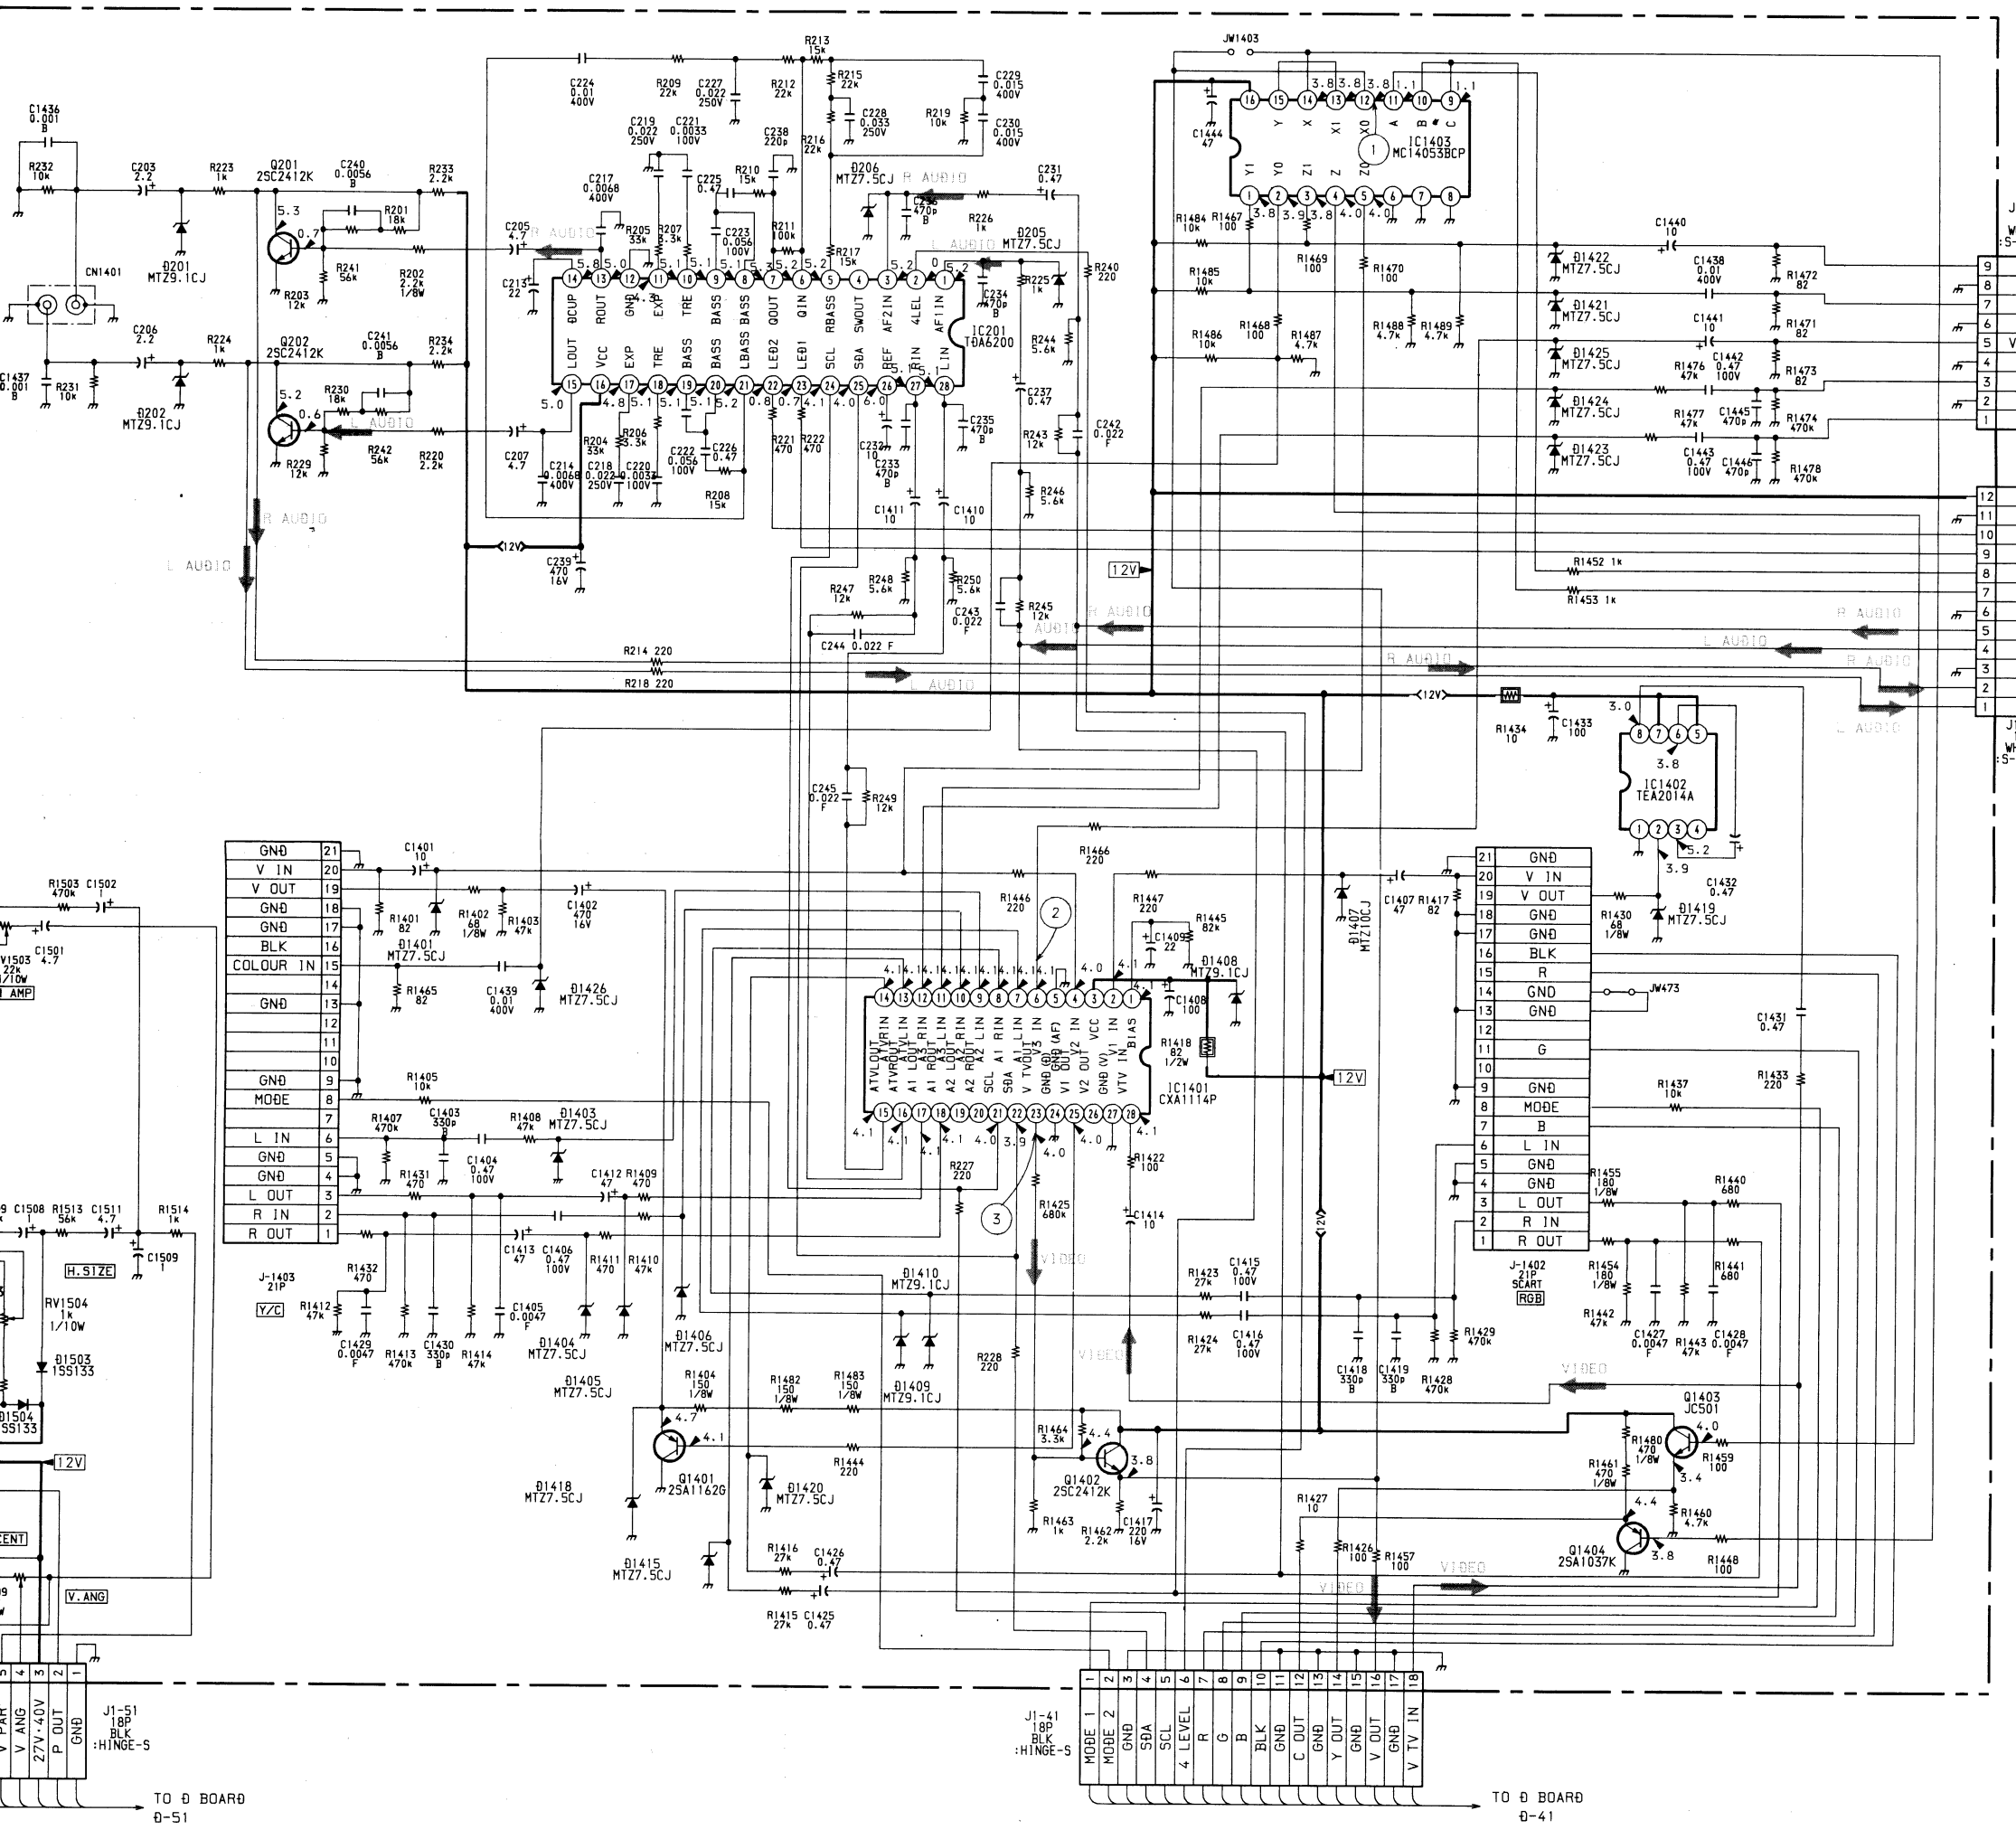


A BOARD IC103 PCF8574

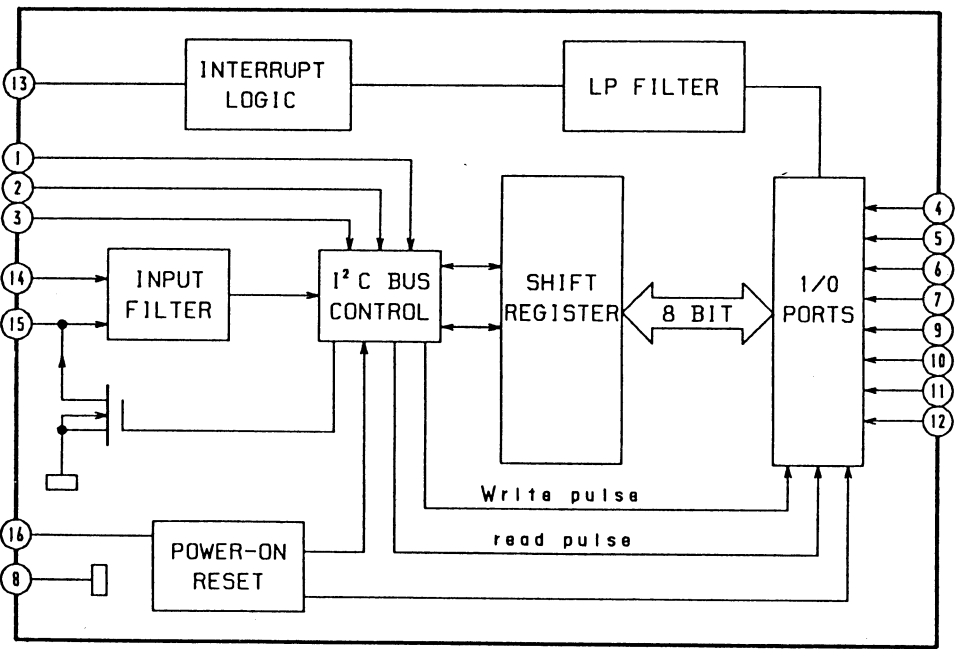


J1 BOARD *MARK

	KV-E2521D	K
C1512	0.0068MF 400V	
C1514	0.022MF 250V	
C1515	820PF 50V	
R1515	680K 1/10W:CHIP	390
R1520	470K 1/10W:CHIP	390
R1550	JW	11W


H2 BOARD IC1651 SBX1610-11

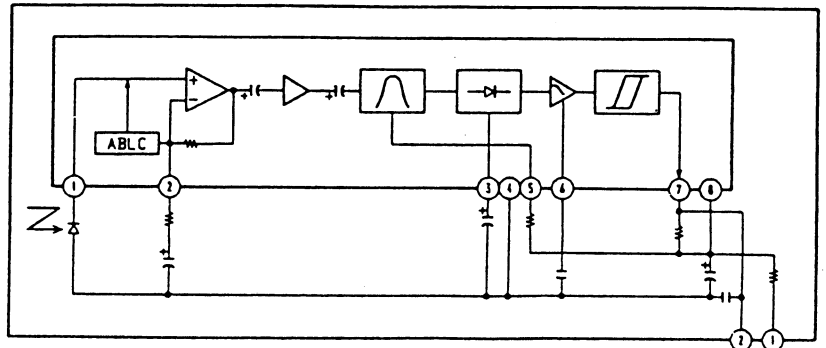


• WAVEFORMS J1 BOARD

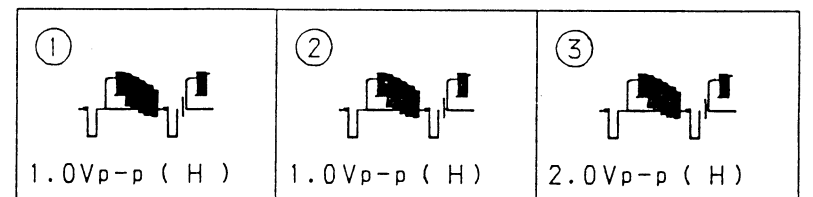


J1 BOARD IC1401 CXA1114P

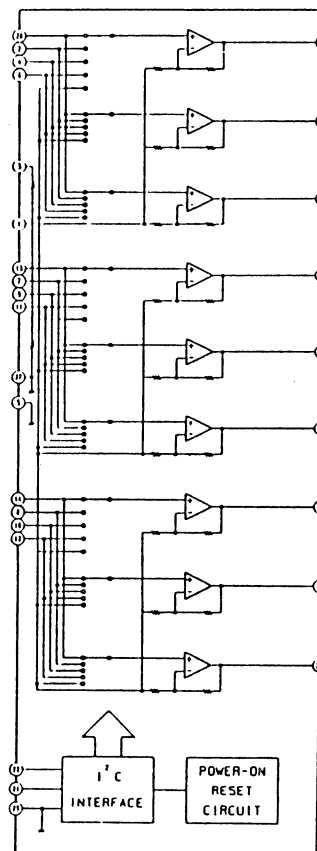


J1 BOARD IC1402 TEA2014A

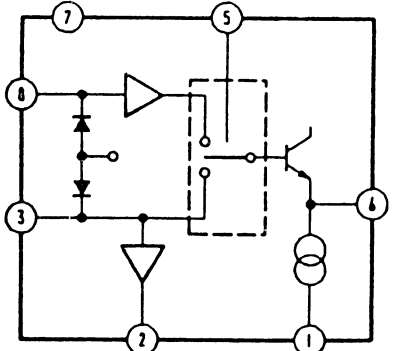

J1 BOARD IC1403 MC14053BCP

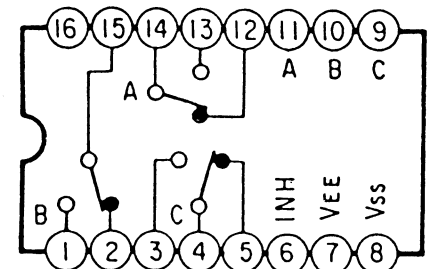

J1 BOARD IC1501 TEA2031A

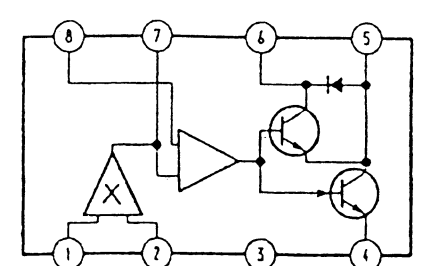

The circuit diagram shows a 10-bit digital-to-analog converter (DAC) implemented using an A/D converter and a DAC. The circuit is powered by a 5V supply and a 0V ground. The A/D converter is a 10-bit device with a resolution of 10 bits. The DAC is a 10-bit device with a resolution of 10 bits. The circuit is configured as follows:

- The 5V supply is connected to the V_{CC} pin of the A/D converter and the V_{CC} pin of the DAC.
- The 0V ground is connected to the GND pin of the A/D converter and the GND pin of the DAC.
- The A/D converter is configured to convert the 10-bit digital input into a 10-bit digital output.
- The DAC is configured to convert the 10-bit digital output into a 10-bit analog output.
- The 10-bit digital output of the A/D converter is connected to the 10-bit digital input of the DAC.
- The 10-bit analog output of the DAC is connected to the 10-bit digital input of the A/D converter.

	KV-E2521D	KV-E2921D
C1512	0.0068MF 400V	———
C1514	0.022MF 250V	———
C1515	820PF 50V	———
R1515	680K 1/10W:CHIP	———
R1520	470K 1/10W:CHIP	390K 1/10W:CHIP
R1550	JW	11W : RS

— NOT MOUNTED

① PAL 5.4Vp-p (H)	① SECAM 4.8Vp-p (H)	① NTSC3.58/ NTSC4.43 5.6Vp-p (H)	② PAL 5.4Vp-p (H)
② SECAM 4.8Vp-p (H)	② NTSC3.58/ NTSC4.43 5.6Vp-p (H)	③ PAL 5.4Vp-p (H)	③ SECAM 5.0Vp-p (H)
③ NTSC3.58/ NTSC4.43 6.2Vp-p (H)	④ 10.5Vp-p (H)	⑤ PAL 0.4Vp-p (H)	⑤ SECAM 0.3Vp-p (H)
⑤ NTSC3.58/ NTSC4.43 0.6Vp-p (H)	⑥ PAL/SECAM 1.1Vp-p (H)	⑥ NTSC3.58/ NTSC4.43 1.2Vp-p (H)	⑦ PAL/SECAM 1.4Vp-p (H)
⑦ NTSC3.58/ NTSC4.43 1.4Vp-p (H)	⑧ PAL 0.4Vp-p (H)	⑧ SECAM 1.0Vp-p (H)	⑧ NTSC3.58/ NTSC4.43 0.8Vp-p (H)
⑨ PAL 0.7Vp-p (H)	⑨ SECAM 1.4Vp-p (H)	⑨ NTSC3.58/ NTSC4.43 0.85Vp-p (H)	⑩ SECAM 0.2Vp-p (H)
⑪ SECAM 1.2Vp-p (H)	⑫ PAL 0.16Vp-p (H)	⑫ SECAM 0.2Vp-p (H)	⑫ NTSC3.58/ NTSC4.43 0.3Vp-p (H)
⑬ PAL 1.0Vp-p (H)	⑬ SECAM 0.8Vp-p (H)	⑬ NTSC3.58 0.9Vp-p (H)	⑬ NTSC4.43 0.95Vp-p (H)
⑭ PAL 0.8Vp-p (H)	⑭ SECAM 0.7Vp-p (H)	⑭ NTSC3.58 0.6Vp-p (H)	⑭ NTSC4.43 0.8Vp-p (H)
⑮ PAL 0.7Vp-p (H)	⑮ SECAM 0.1Vp-p (H)	⑮ NTSC3.58 0.5Vp-p (H)	⑮ NTSC4.43 0.6Vp-p (H)
⑯ PAL/SECAM 0.9Vp-p (H)	⑯ NTSC3.58 0.7Vp-p (H)	⑯ NTSC4.43 0.8Vp-p (H)	⑰ PAL 1.9Vp-p (H)
⑰ NTSC3.58 0.4Vp-p (H)	⑰ NTSC4.43 0.2Vp-p (H)	⑱ PAL 0.2Vp-p (H)	⑱ SECAM 0.8Vp-p (H)
⑲ PAL 0.6Vp-p (H)	⑲ SECAM 0.8Vp-p (H)	⑲ NTSC3.58/ NTSC4.43 0.9Vp-p (H)	

As to the voltage value shown by the mark ※ on the Schematic Diagram, see the another list.

IC・NO	PIN・NO	PAL	SECAM	NTSC 3.38	NTSC 4.43
IC301	(5)	6.7	4.8	4.8	4.8
	(15)	8.9	7.0	7.0	7.0
	(19)	3.4	3.4	3.8	3.4
	(24)	6.6	6.6	6.0	6.3
IC304	(1)	0.1	6.8	6.9	6.8
	(5)	9.9	0	9.9	9.9
	(7)	4.6	0	4.6	4.6
	(8)	3.4	3.0	3.4	3.4
	(9)	3.4	3.0	3.4	3.4
	(10)	4.6	3.4	4.6	4.6
	(11)	2.3	3.1	3.1	2.3
	(12)	5.6	5.6	5.6	7.4
	(13)	7.5	7.5	5.7	5.7
	(15)	0.1	0.1	0.1	6.0
	(16)	0.1	0.1	6.0	0.1
	(17)	0.1	6.0	0.1	0.1
	(18)	6.0	0.1	0.1	0.1
	(19)	6.0	0.1	0.1	0.1

Q・NO	PAL	SECAM	NTSC 3.38	NTSC 4.43
Q338	B 2.4	3.9	3.9	3.9
	E 3.0	4.6	4.6	4.6
Q339	B 3.0	4.6	4.6	4.6
	E 2.4	3.9	3.9	3.9
Q341	B 0	0.6	0.4	0.1
	C 11.6	0	11.6	11.6
Q342	B 0	0	0.4	0
	C 11.7	0	11.7	11.7
Q343	B 3.4	5.4	5.3	5.3
	E 2.8	4.7	4.7	4.7
Q344	B 0	5.4	1.0	0.1
	E 4.4	4.8	1.5	4.5
Q345	B 5.0	0.1	1.9	5.0
	E 4.4	4.4	1.4	4.4
Q347	B 0.6	0	0	0
	C 0.1	11.9	11.9	11.9
Q348	B 0.1	0.1	1.0	0.1
	C 1.3	0.2	0.2	0.4


B1 BOARD


IC301	TDA4580-V4	VIDEO PROCESSOR
IC302	TDA8442-N3	D/A CONVERTOR
IC303	TDA4660T	1H DELAY
IC304	TDA4650WP	COLOR PROCESSOR
IC305	μPC24M05HF	REGULATOR
IC306	HCF4052BM1	Y/C SW
IC308	CX20061	Y INTERRUPT
IC310	CXB2011Q	COMB CONTROL
IC311	MB40968PF	D/A CONVERTER
IC312	CXK1202Q	MEMORY
IC313	CXK1202Q	MEMORY
IC315	CXB1175AM	A/D CONVERTER
Q301	2SC2412K	CANRL +BLK
Q302	2SC2412K	ON SCREEN DISPLAY SW
Q303	2SC2412K	FAS PICTURE MUTE SW
Q304	2SC2412K	ON SCREEN DISPLAY SW
Q305	DTA144EK	ANIT PRIORITY SCART
Q306	2SC2412K	STBY SW
Q307	2SC2412K	ABL
Q308	DTC124EK	MUTE
Q310	DTC124EK	SECAM SW
Q311	DTC124EK	SECAM SW
Q320	2SC2412K	HUE BUFFER
Q321	2SA1037K	CLK AMP3
Q322	2SA1037K	CLK AMP2
Q323	2SC2412K	CLK AMP1
Q324	2SC2412K	CLK BUFFER
Q327	2SA1037K	Y OUT
Q328	2SA1037K	VIDEO IN
Q329	2SA1037K	Y IN
Q330	2SC2412K	VIDEO BUFFER
Q331	2SA1037K	C OUT
Q332	2SA1037K	C IN
Q333	DTC124EK	Y/C SW
Q334	DTC124EK	Y SW
Q335	2SC2412K	SECAM SW
Q336	2SC2412K	NTSC (3.58) SW
Q337	2SC2412K	NTSC (4.43) SW
Q338	2SA1037K	Y BUFFER
Q339	2SC2412K	Y BUFFER
Q340	2SC2412K	Y BUFFER
Q341	2SC2412K	SECAM TRAP SW
Q342	2SC2412K	NTSC TRAP SW
Q343	2SC2412K	C OUT
Q344	2SC2412K	SECAM SW
Q345	2SC2412K	PAL/SECAM SW
Q346	2SC2412K	Y IN
Q347	2SC2412K	PAL SW
Q348	DTC124EK	NTSC (3.58) SW
Q350	2SA1037KQR	CLK AMP
Q352	2SC2412K	VIDEO AMP
Q353	2SA1037KQR	BUFFER
Q354	2SA1037KQR	BUFFER
Q355	2SA1037KQR	VIDEO AMP
Q356	2SC2412K	VIDEO BUFFER
Q357	2SC2412K	CLAMP BIAS
Q358	2SA1037KQR	VIDEO CLAMP
Q359	2SC2412K	CLAMP BIAS
Q360	2SA1037KQR	CLK BUFFER
Q361	2SA1037KQR	CLK AMP
Q362	2SA1037KQR	Y BUFFER
Q363	2SA1037KQR	C BUFFER
Q364	2SC2412K	C BUFFER
Q365	2SC2412K	Y BUFFER
Q366	2SC2412K	SHP BUFFER
Q367	2SC2412K	Y BUFFER
Q368	2SC2412K	SHP AMP
Q369	2SC2412K	SHP AMP
Q370	2SC2412K	SHP AMP
Q371	2SC2412K	VM BUFFER
Q372	2SC2412K	VM AMP
Q373	DTC124EK	
Q1301	DTC124EK	Y BUFFER
Q1302	2SC2412K	Y BUFFER
Q1303	2SC2412K	VM MUTE
Q301	1MN10	ACO AT ATBY
Q304	QAN212K	PROTECT
Q305	QAN212K	PROTECT
Q307	MA3110M	PROTECT
Q308	QAN212K	PROTECT
Q309	QAN212K	PROTECT
Q310	MA3110M	PROTECT
Q311	MA3110M	PROTECT
Q312	MA3110M	PROTECT
Q314	QAN204K	PROTECT
Q318	QAN204K	PROTECT
Q319	QAN204K	PROTECT
Q320	QAN204K	PROTECT
Q321	MA3056	REG
Q322	QAN212K	PROTECT
Q330	QAN212K	BIAS
Q331	QAN202K	Y/C SW
Q333	1MN10	SYSTEM SW
Q336	QAN202K	CORRECT SW
Q340	QAN204K	VIDEO AMP
Q341	QAN212K	VIDEO AMP

B1 BOARD *MARK


	KV-E2521D	KV-E2921D
R343	560 Ω 1/10W	2.2k 1/10W
R1308	0 Ω 1/10W	4.7k 1/10W
B-73	OPEN	3P



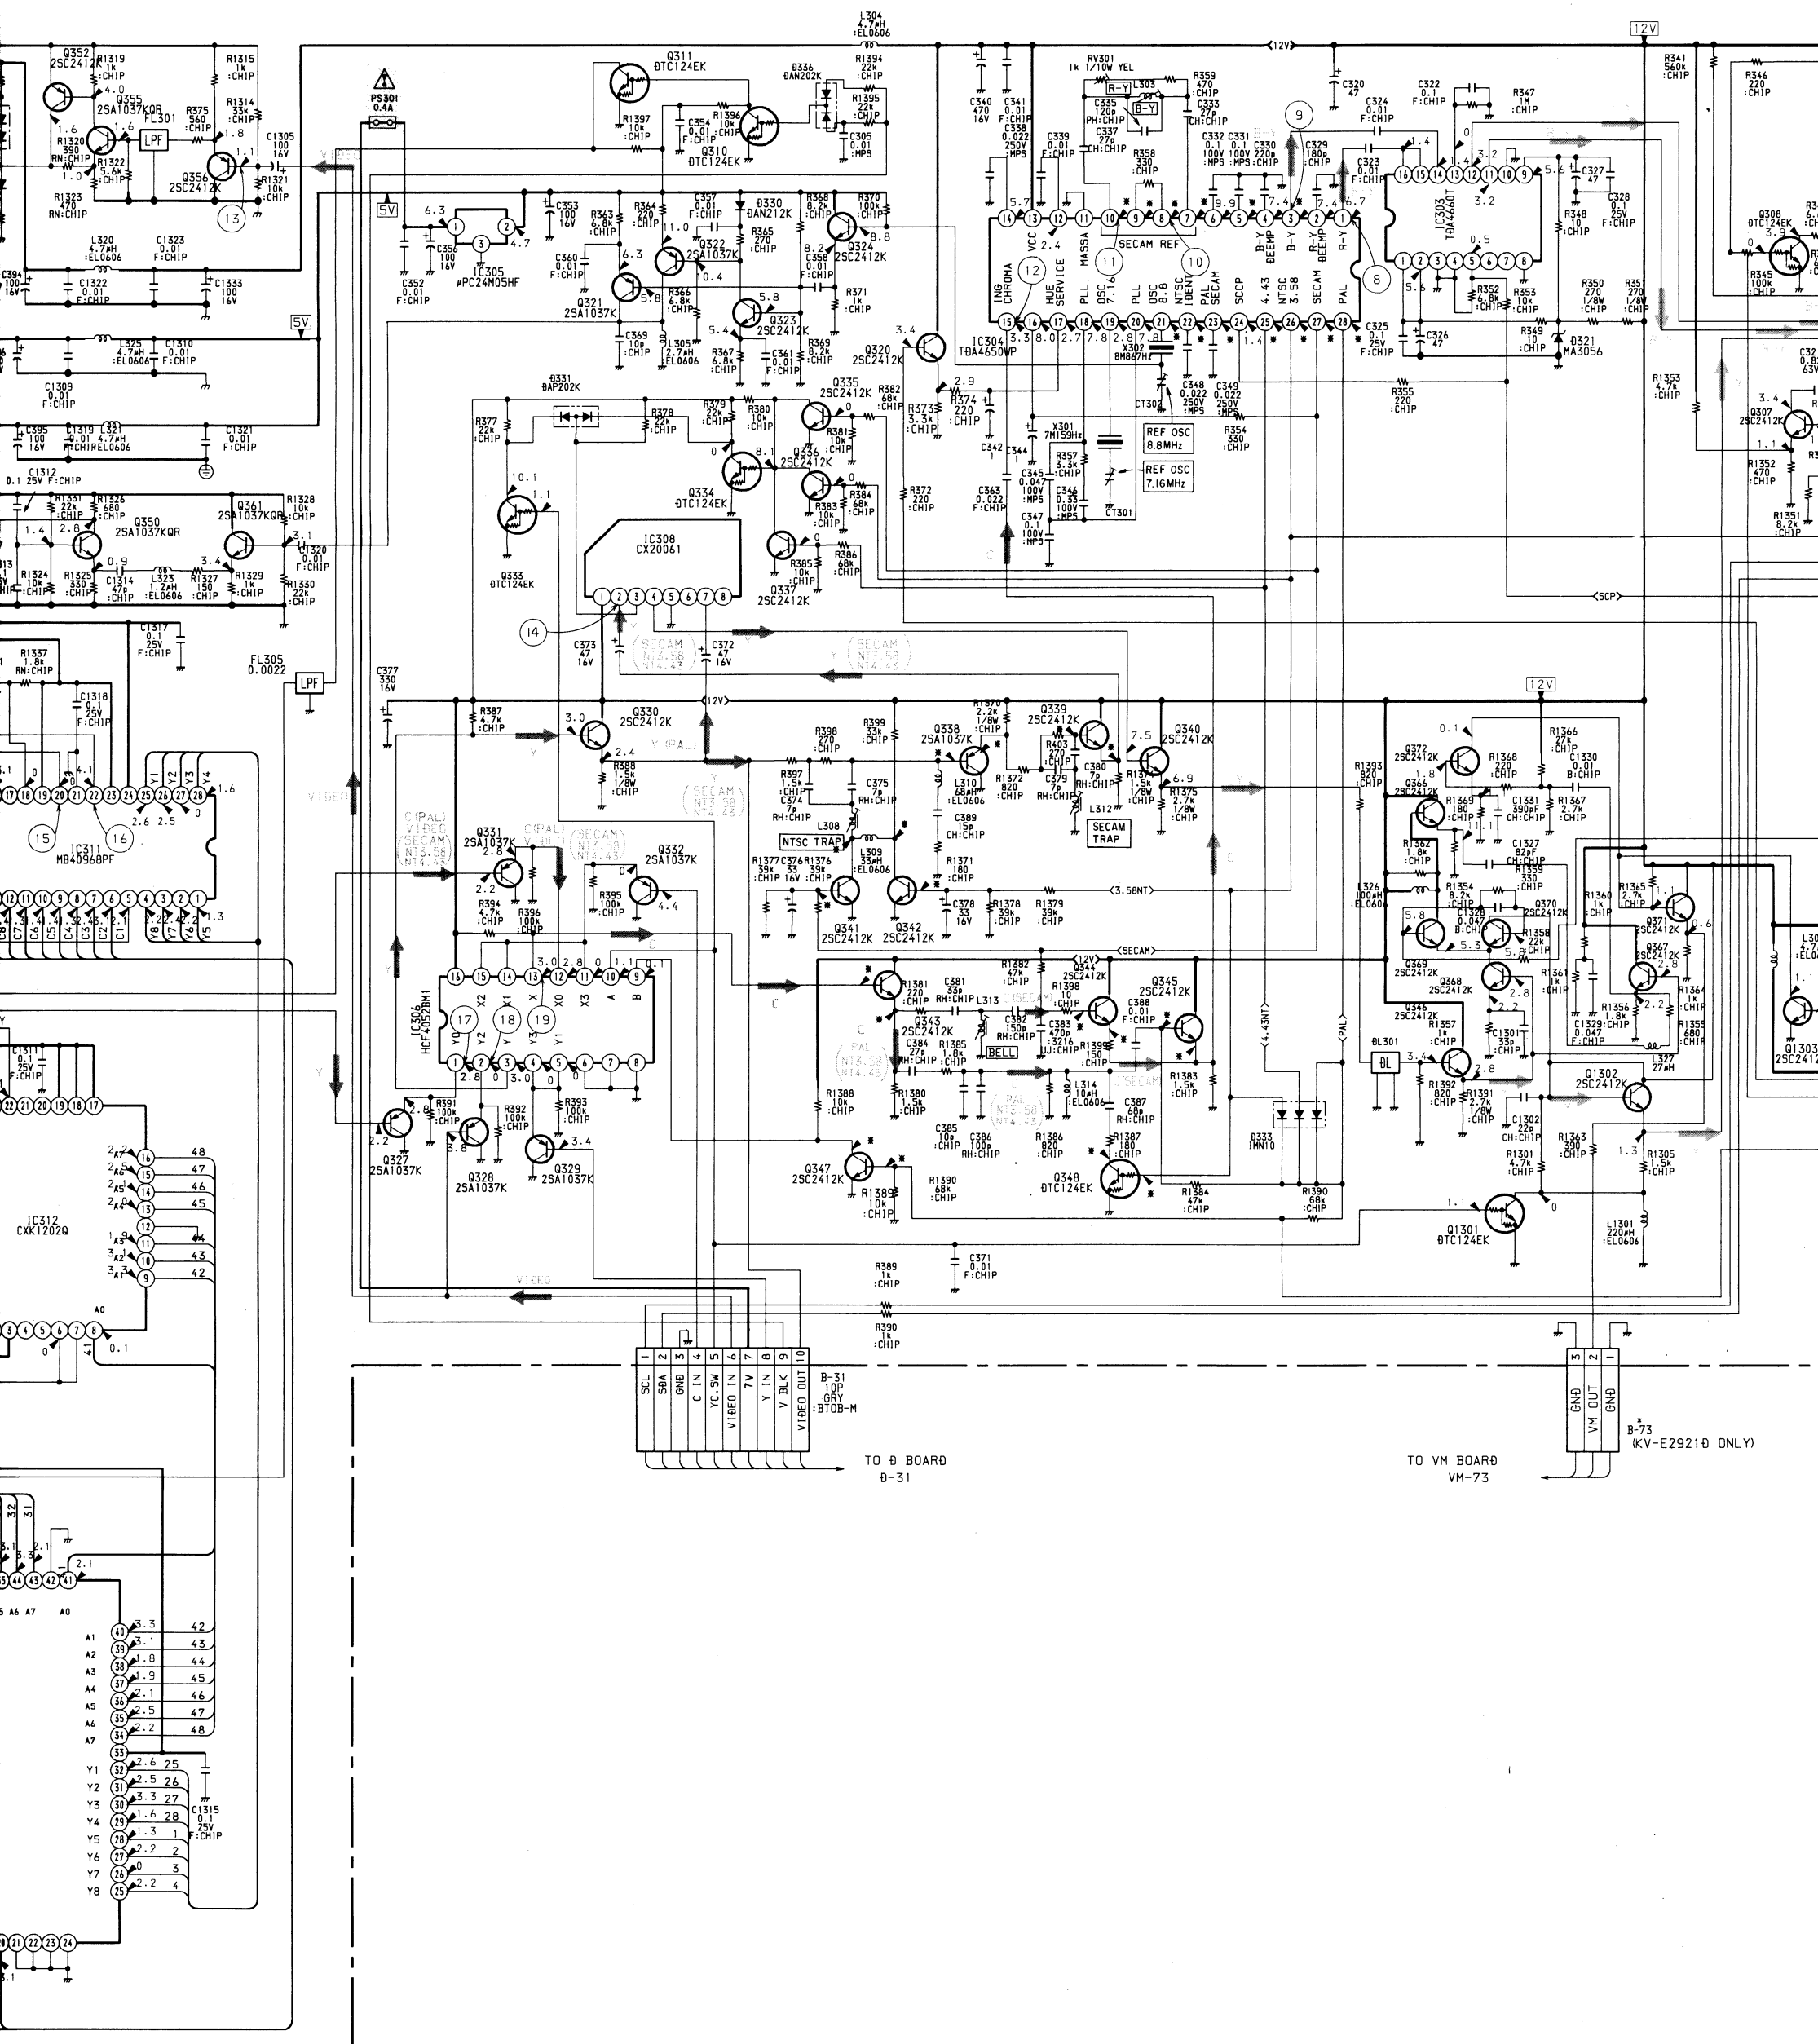


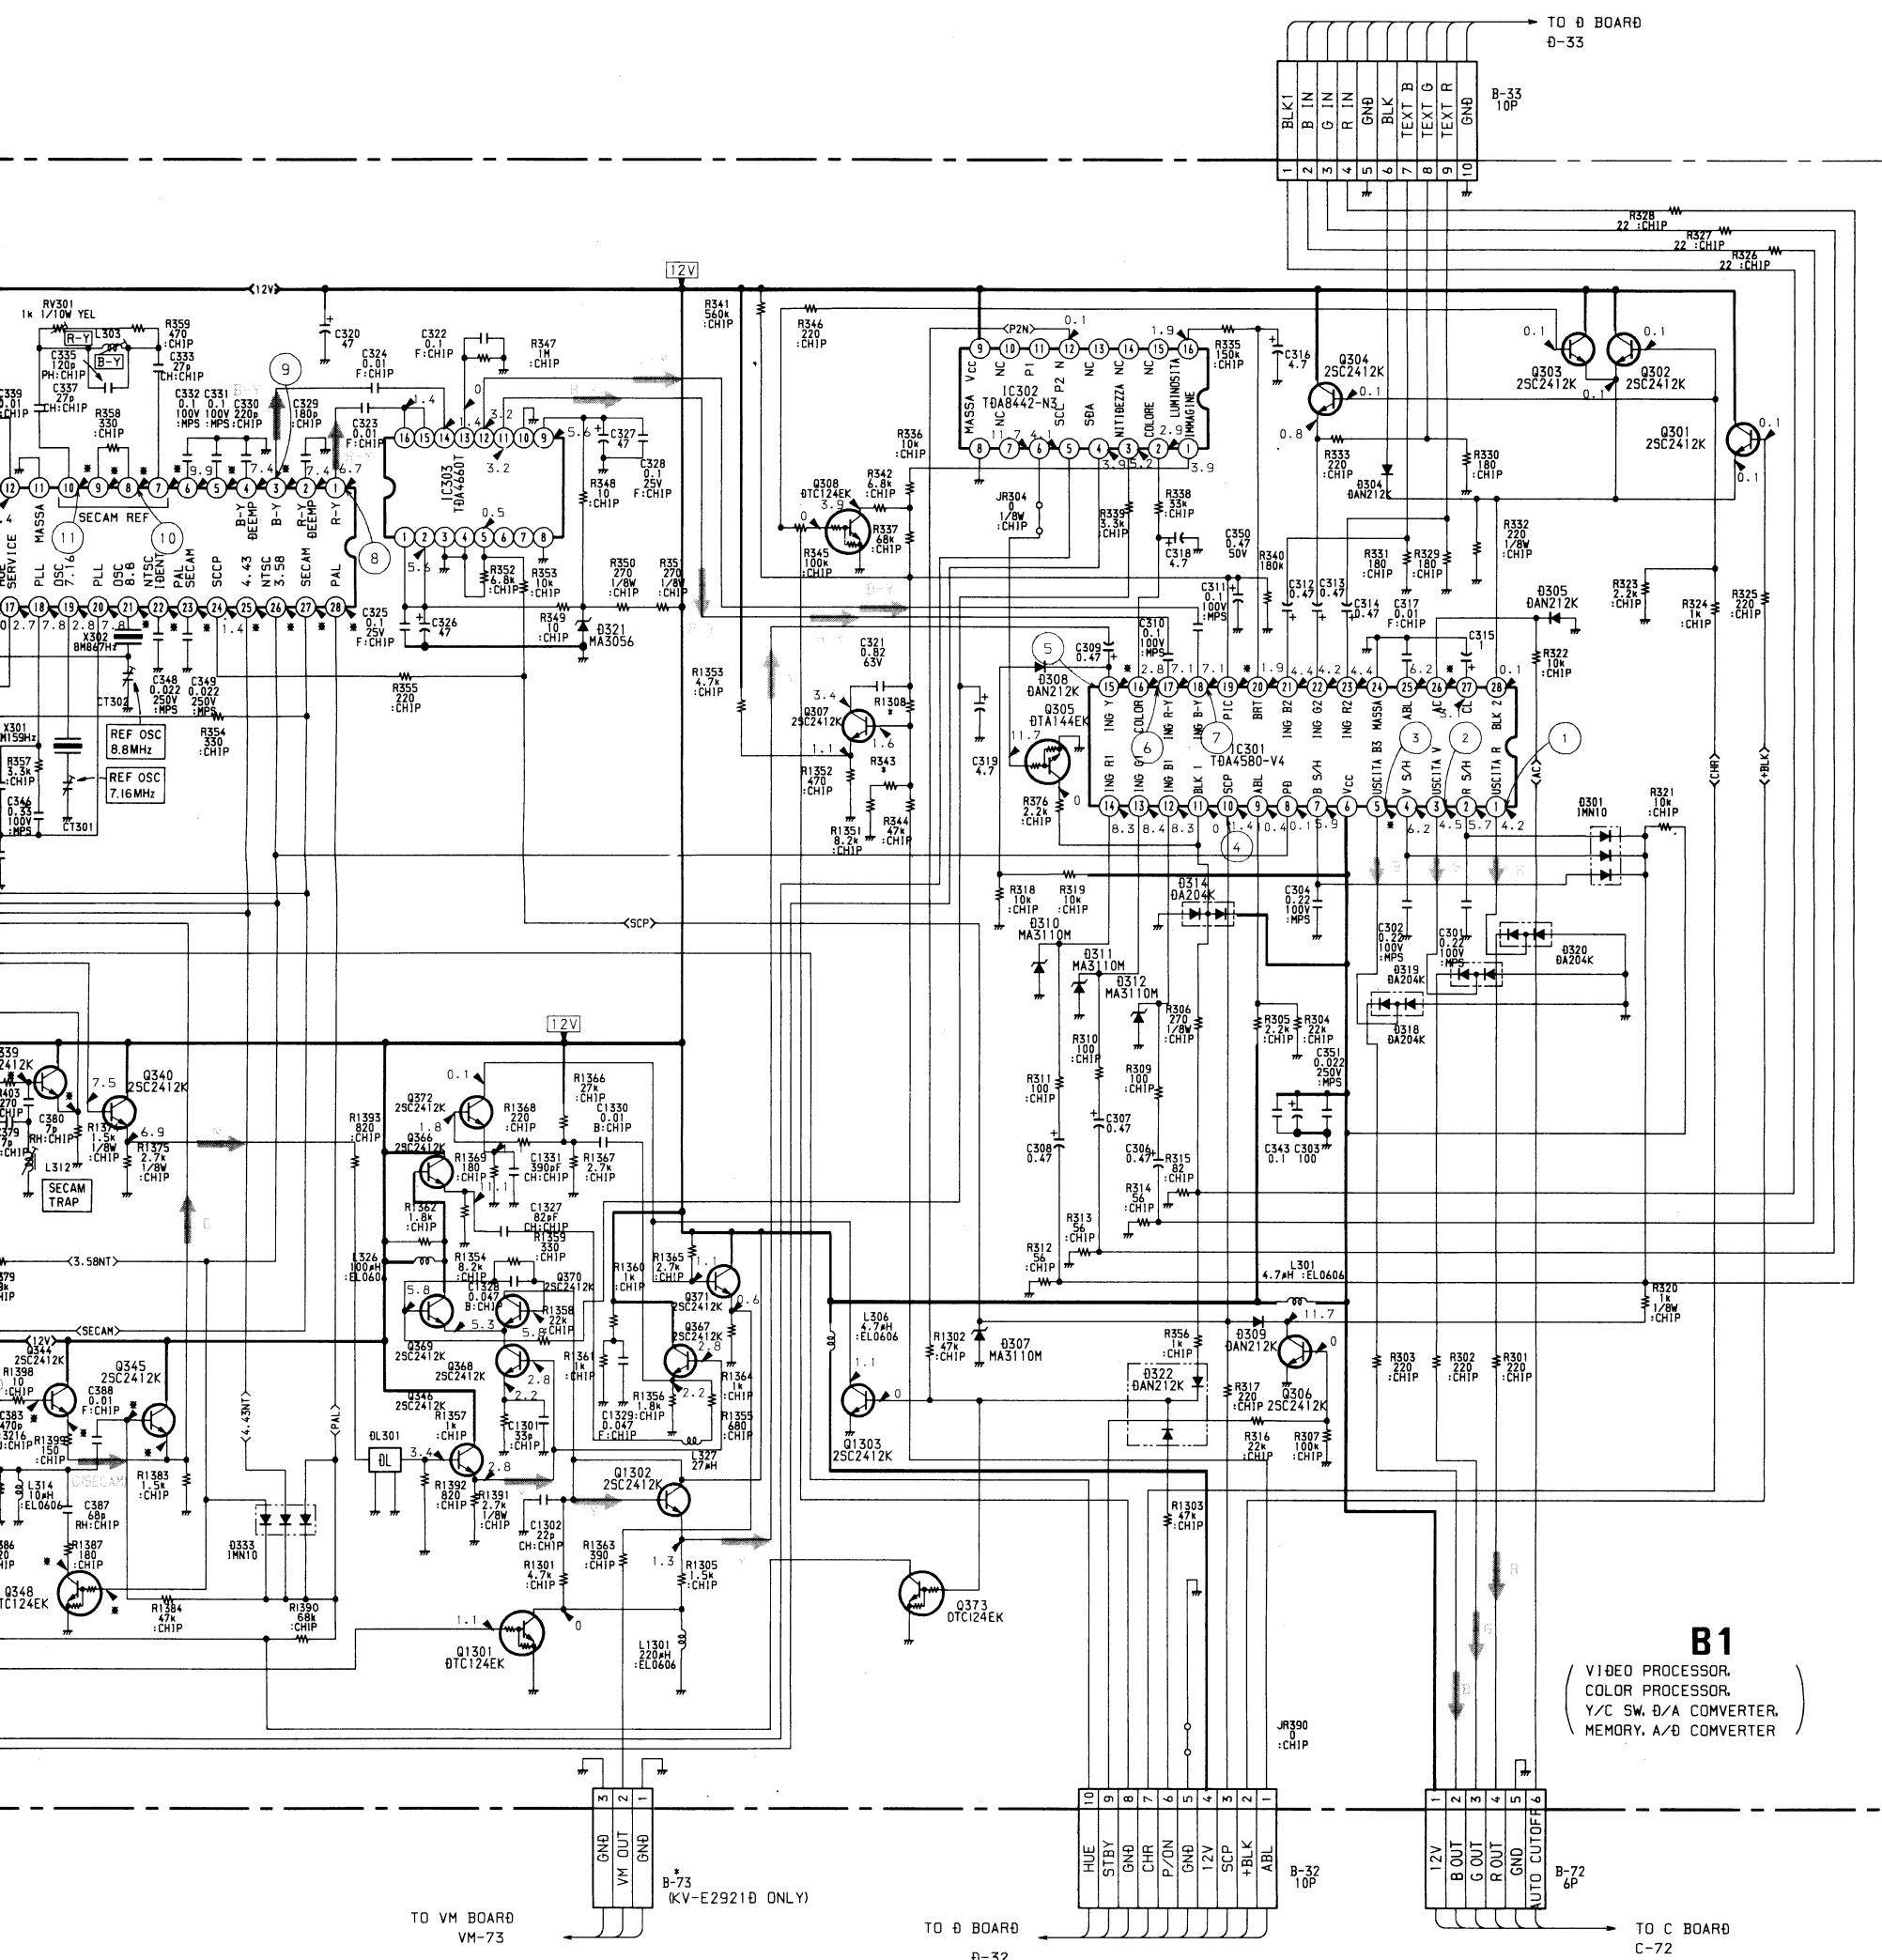


D BOARD IC251/261 TDA2050

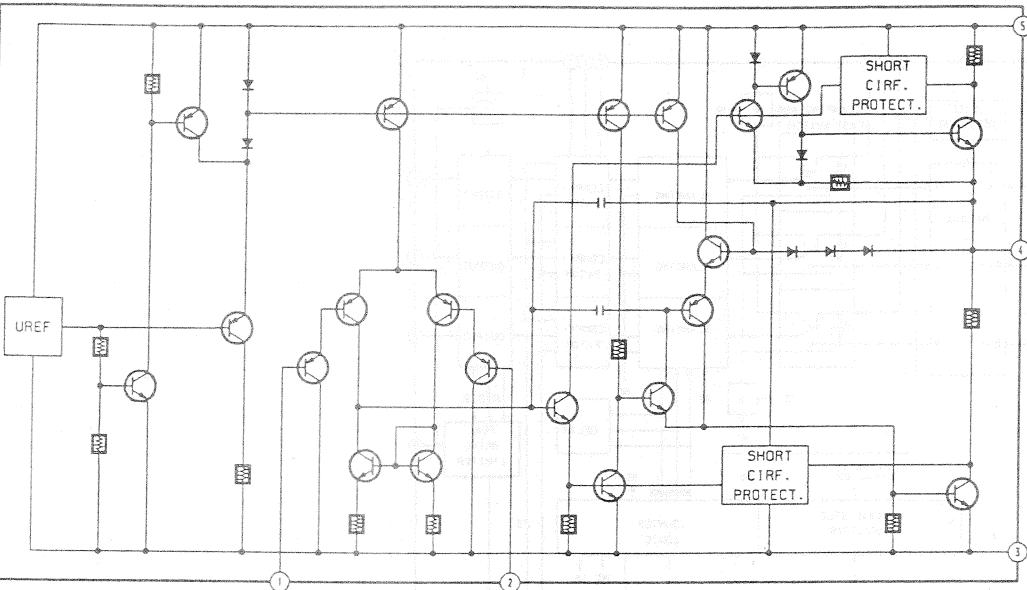


D BOARD IC501 TEA2028B

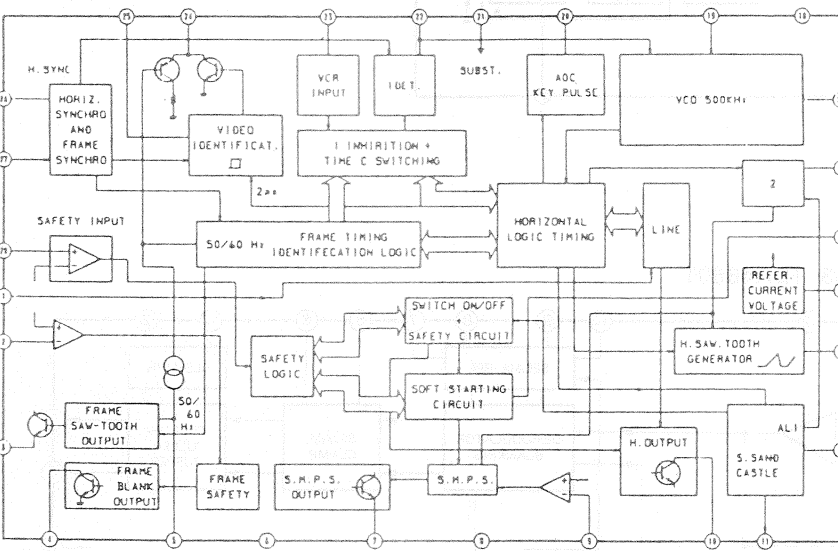

D BOARD IC502 TDA8170

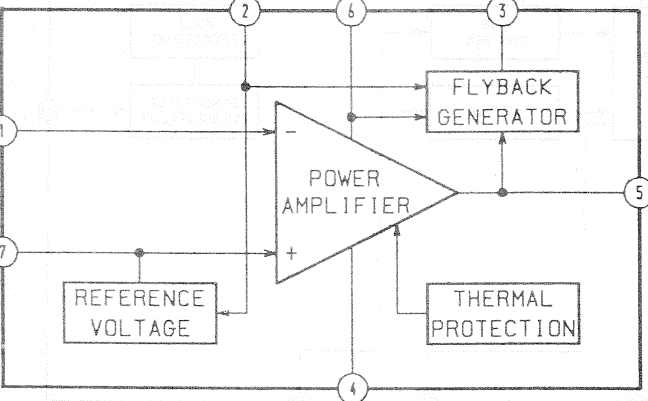


D BOARD IC601 TEA2260

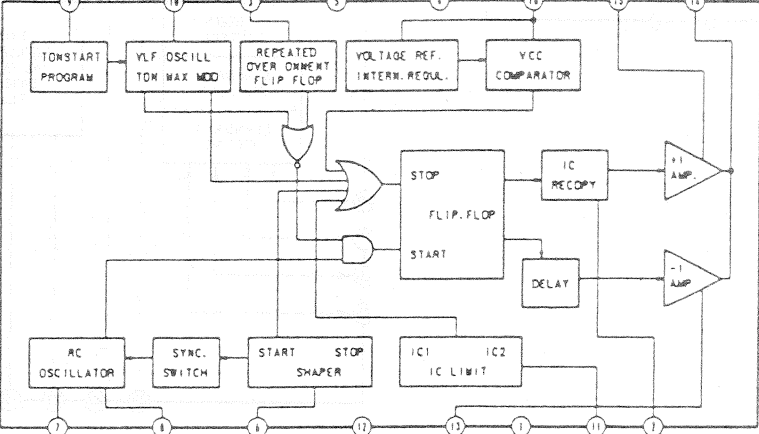


D [TUNING CONTROL, POWER CONTROL, AUDIO OUT, H/V OUT]

IC		D010	I-2
IC001	B-2	D011	I-2
IC002	E-2	D012	D-2
IC003	D-1	D013	E-2
IC005	H-2	D271	C-6
IC251	G-5	D501	I-8
IC261	D-5	D504	F-6
IC501	H-7	D506	H-7
IC502	G-7	D508	J-6
IC601	A-8	D509	F-7
IC604	A-5	D511	G-7
IC608	B-3	D512	G-7
TR		D513	G-7
Q001	E-2	D514	G-6
Q002	E-3	D515	F-6
Q003	E-1	D601	A-8
Q004	F-2	D602	C-8
Q005	C-2	D603	A-7
Q006	C-1	D604	A-7
Q007	H-2	D605	C-8
Q008	H-2	D606	C-8
Q009	D-3	D607	B-8
Q010	A-2	D608	C-9
Q251	G-5	D609	B-8
Q261	E-5	D610	C-5
Q271	D-6	D611	E-7
Q502	H-7	D612	B-5
Q505	F-7	D613	A-6
Q506	F-7	D614	A-6
Q507	J-6	D616	E-6
Q598	I-2	D617	B-7
Q601	B-4	D618	E-6
Q602	C-10	D619	B-8
Q603	B-5	D620	E-6
Q604	A-7	D621	B-8
Q605	E-7	D622	E-6
Q606	D-5	D623	B-5
Q607	D-6	D624	C-5
Q608	D-6	D630	E-7
Q609	C-5	D801	G-10
Q801	J-6	D802	H-12
Q804	G-13	D803	I-13
Q805	G-9	D804	F-9
D		D805	F-9
D003	B-3	D806	F-12
D005	I-2	D807	F-12
D006	G-1	D808	E-11
D007	B-2	VR	
D009	F-1	RV501	G-6
		RV502	I-8
		RV601	A-8

-D BOARD-

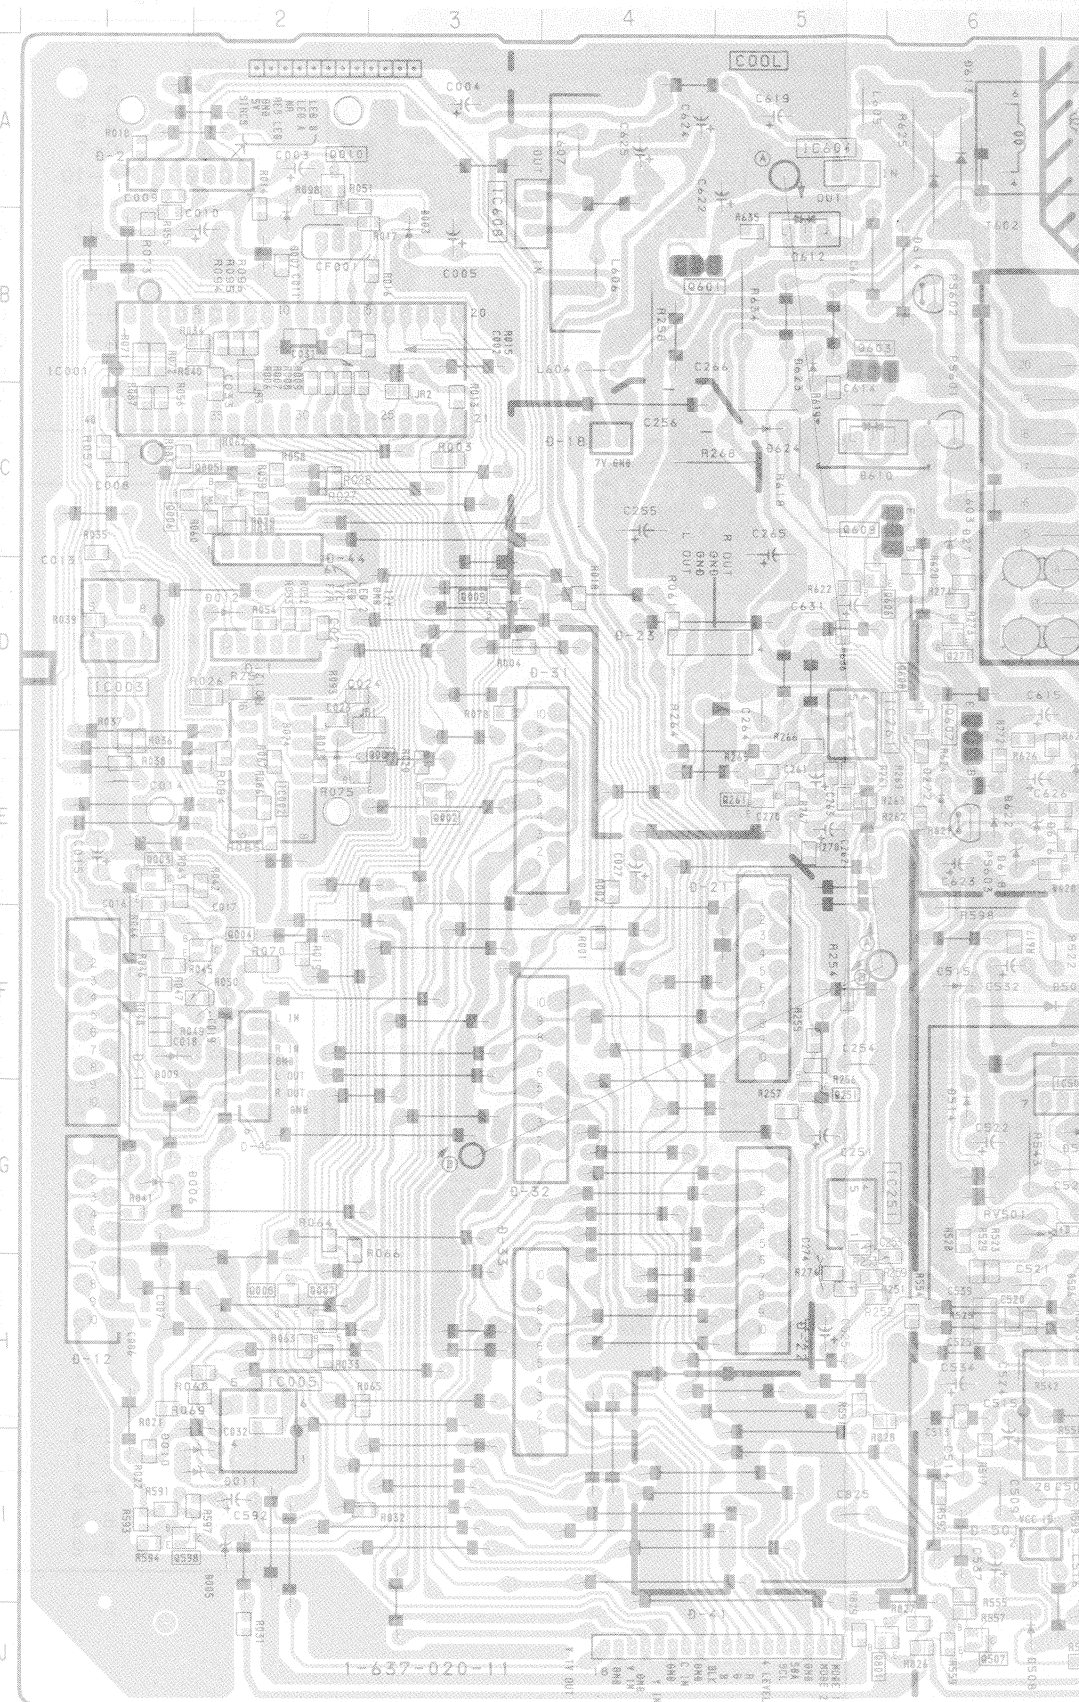


D [TUNING CONTROL, POWER CONTROL, AUDIO OUT, H/V OUT]

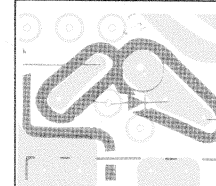

NOTE:
The circuit indicated as left contains high voltage of over 600 Vp-p. Care must be paid to prevent an electric shock in inspection or repairing.

-D BOARD-

IC		D010		I-2	
IC001	B-2	D011	I-2	D012	I-2
IC002	E-2	D013	E-2	D014	E-2
IC003	D-1	D271	C-6	D272	E-6
IC005	H-2	D501	I-8	D504	F-6
IC261	G-5	D506	H-7	D508	J-6
IC501	H-7	D509	F-7	D511	G-7
IC502	G-7	D512	G-7	D513	G-7
IC601	A-8	D514	G-6	D515	F-6
IC604	A-5	D601	A-8	D602	C-8
IC608	B-3	D603	A-7	D604	A-7
TR		D605	C-8	D606	C-8
Q001	E-2	D607	B-8	D608	C-9
Q002	E-3	D609	B-8	D610	C-5
Q003	E-1	D611	E-7	D612	B-5
Q004	F-2	D613	A-6	D614	A-6
Q005	C-2	D616	E-6	D617	B-7
Q006	C-1	D618	E-6	D619	B-8
Q007	H-2	D620	E-6	D621	B-8
Q008	H-2	D622	E-6	D623	B-5
Q009	D-3	D624	C-5	D630	E-7
Q010	A-2	D801	G-10	D802	H-12
Q251	G-5	D803	I-13	D804	F-9
Q261	E-5	D805	F-9	D806	F-12
Q271	D-6	D807	F-12	D808	E-11
Q502	H-7	VR			
Q505	F-7	RV501	G-6	RV502	I-8
Q506	F-7	RV601	A-8		
Q507	J-6				
Q598	I-2				
Q601	B-4				
Q602	C-10				
Q603	B-5				
Q604	A-7				
Q605	E-7				
Q606	D-5				
Q607	D-6				
Q608	D-6				
Q609	C-5				
Q801	J-6				
Q804	G-13				
Q805	G-9				
D		VR			
D003	B-3	RV501	G-6		
D005	I-2	RV502	I-8		
D006	G-1	RV601	A-8		
D007	B-2				
D009	F-1				

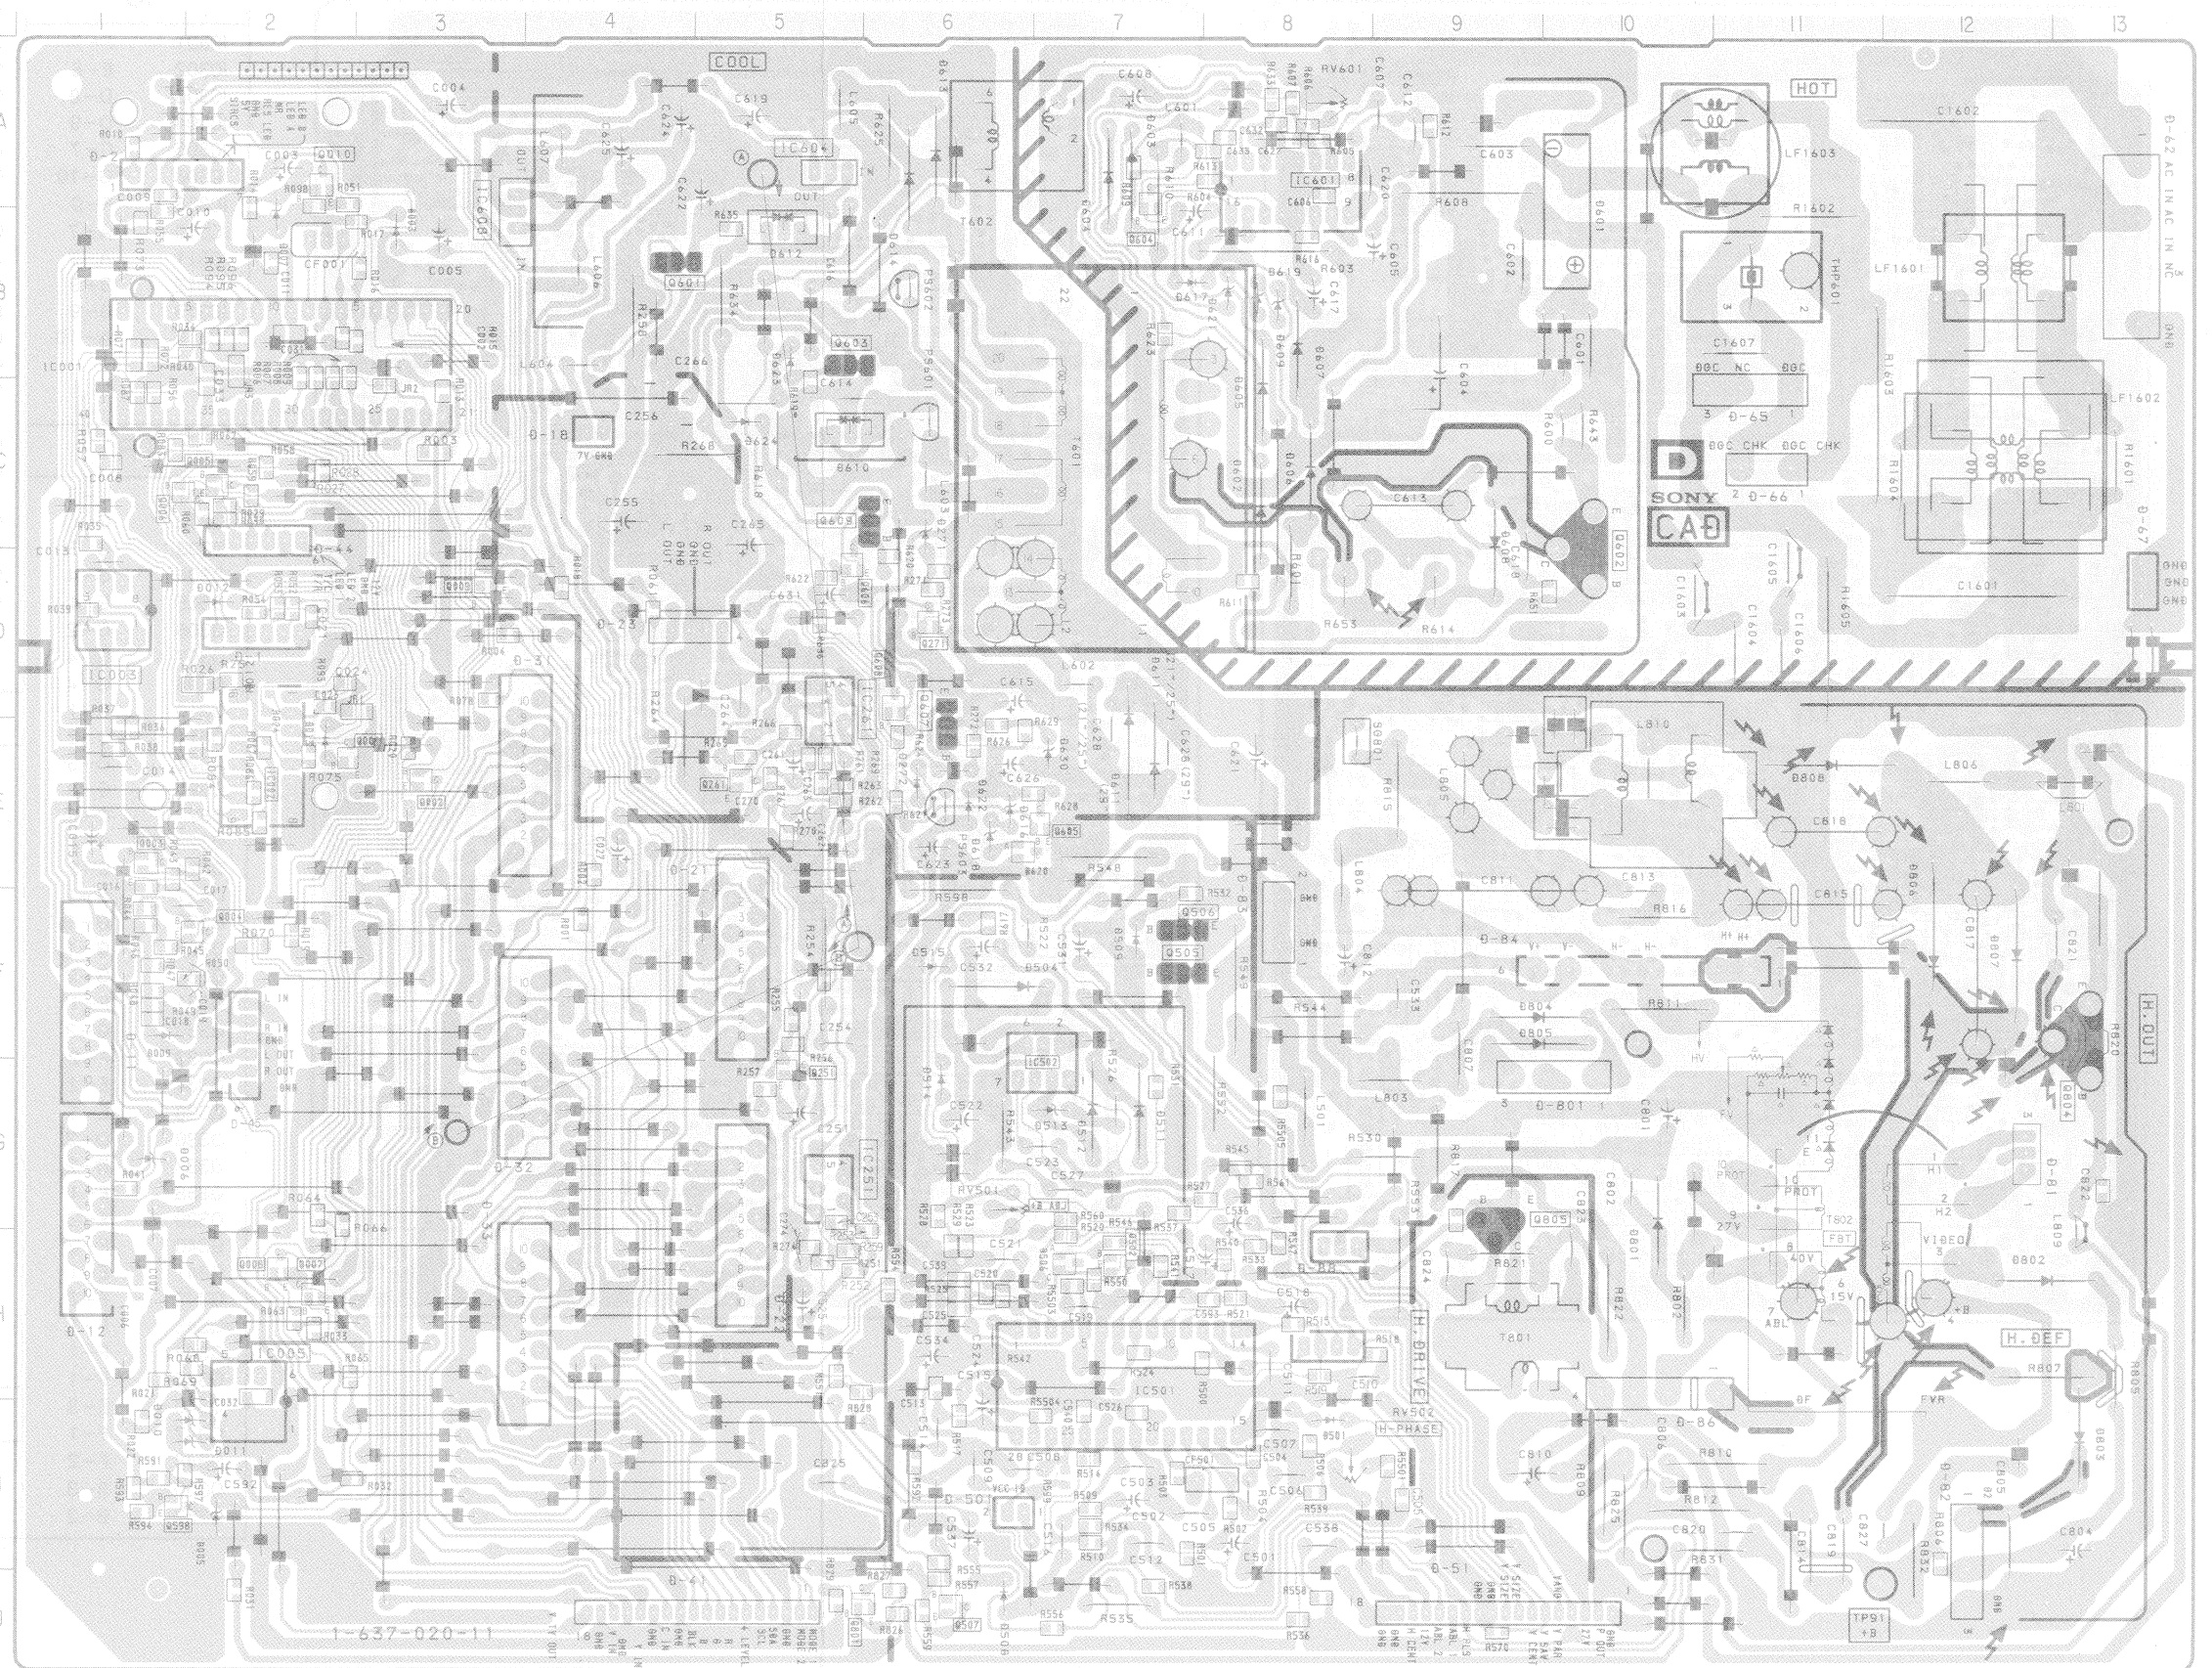



B1

VIDEO PROCESSOR, COLOR PROCESSOR,
Y/C SW, D/A CONVERTER, MEMORY,
A/D CONVERTER

-B1 BOARD-


Note :

- : Pattern from the side which enables seeing.
- : Pattern of the rear side.

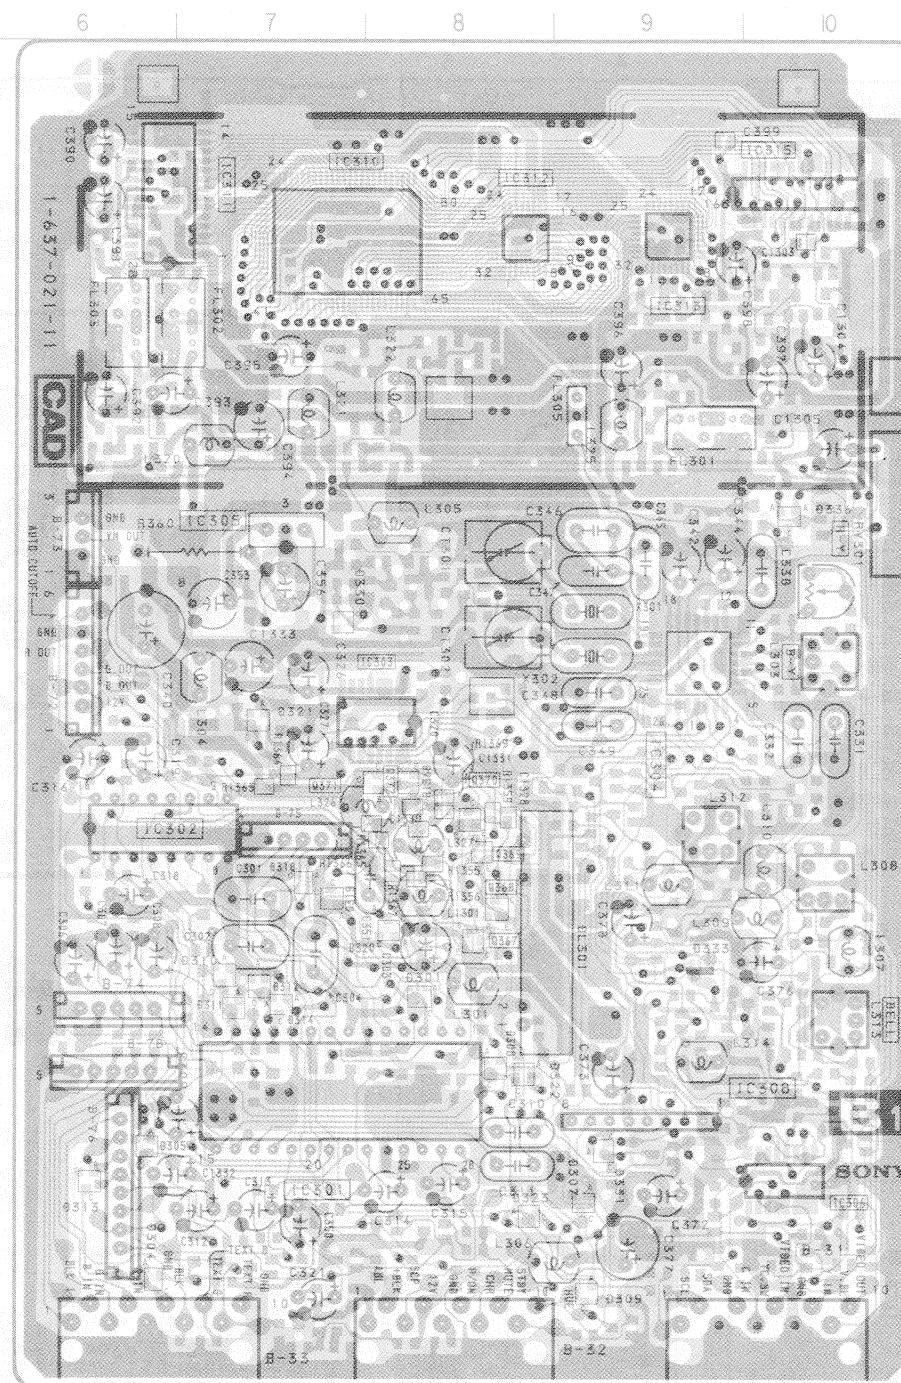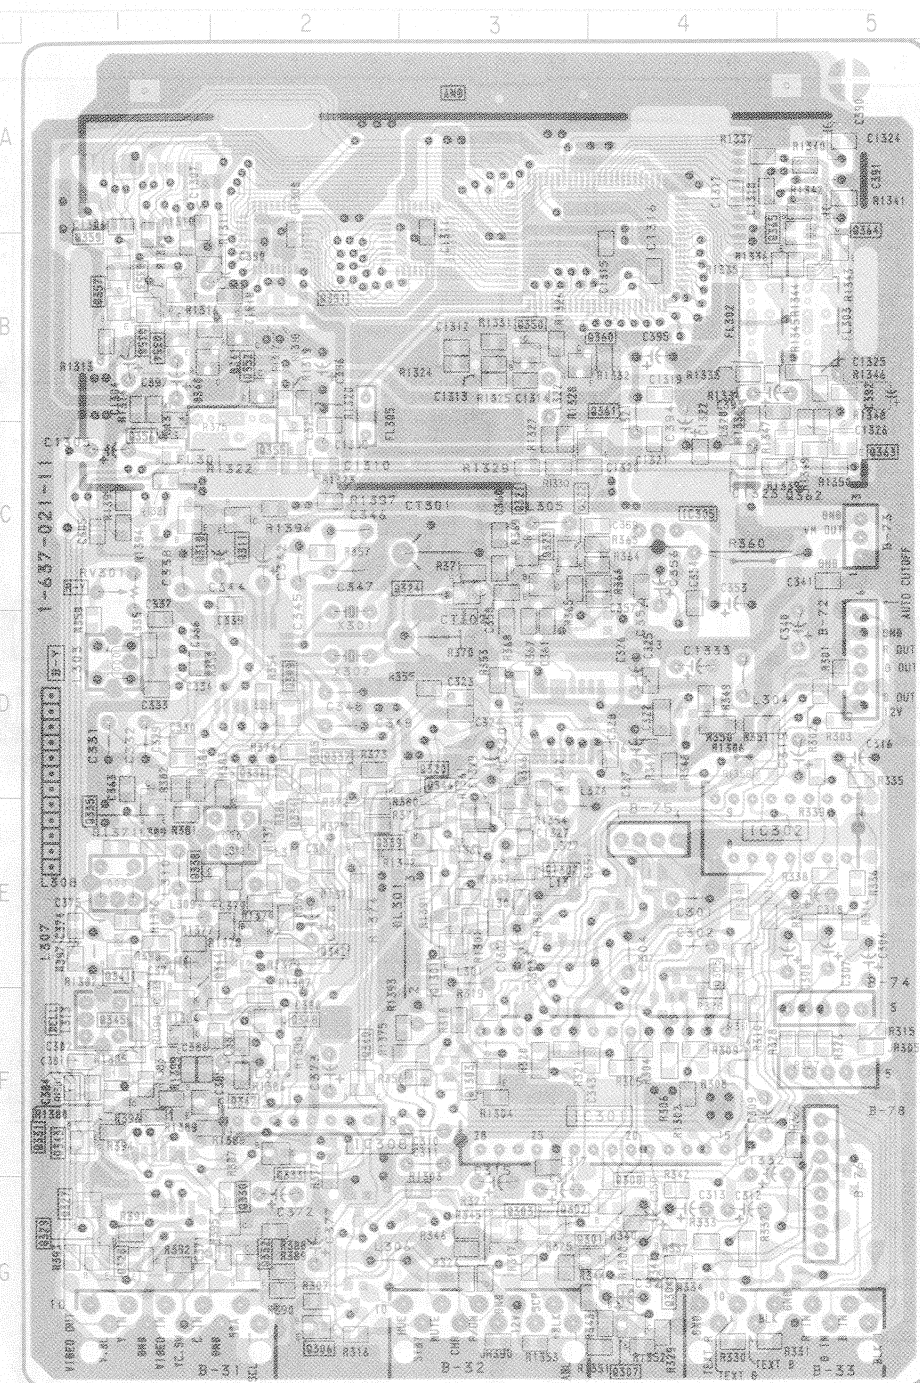


IC			
IC301	F-7	Q353	B-1
IC302	E-6	Q354	B-1
IC303	D-8	Q355	C-2
IC304	D-9	Q356	C-1
IC305	C-7	Q357	B-1
IC306	G-10	Q358	B-1
IC308	F-9	Q359	B-1
IC310	A-7	Q360	B-3
IC311	A-7	Q361	C-4
IC312	B-8	Q362	C-5
IC313	B-9	Q363	C-5
IC315	A-10	Q364	B-5
		Q365	A-5
		Q366	D-3
		Q367	E-8
		Q368	E-8
		Q369	E-8
		Q370	E-8
		Q371	D-8
		Q372	D-8
		Q373	
		Q1301	E-3
		Q1302	E-3
		Q1303	F-3
TR			
Q301	G-3		
Q302	G-3		
Q303	G-3		
Q304	G-4		
Q305	E-4		
Q306	G-2		
Q307	G-4		
Q308	G-4		
Q310	C-1		
Q311	C-2		
Q320	D-3		
Q321	C-3		
Q322	C-3		
Q323	C-3		
Q324	C-3		
Q327	G-1		
Q328	G-1		
Q329	G-1		
Q330	G-2		
Q331	F-1		
Q332	G-2		
Q333	F-2		
Q334	E-2		
Q335	E-1		
Q336	D-2		
Q337	D-2		
Q338	E-1		
Q339	E-2		
Q340	F-2		
Q341	E-1		
Q342	E-2		
Q343	F-1		
Q344	F-1		
Q345	F-1		
Q346	E-3		
Q347	F-1		
Q348	F-2		
Q350	B-3		
Q352	B-2		
		D	
		D301	F-8
		D304	G-6
		D305	F-6
		D307	G-9
		D308	F-8
		D309	G-9
		D310	E-7
		D311	F-7
		D312	E-7
		D314	F-7
		D318	E-7
		D319	E-7
		D320	E-8
		D321	D-7
		D322	F-8
		D330	D-7
		D331	F-9
		D333	E-9
		D336	C-10
		D340	B-1
		D341	B-2
		VR	
		RV301	C-10

B1 BOARD IC301 TDA4580-V4

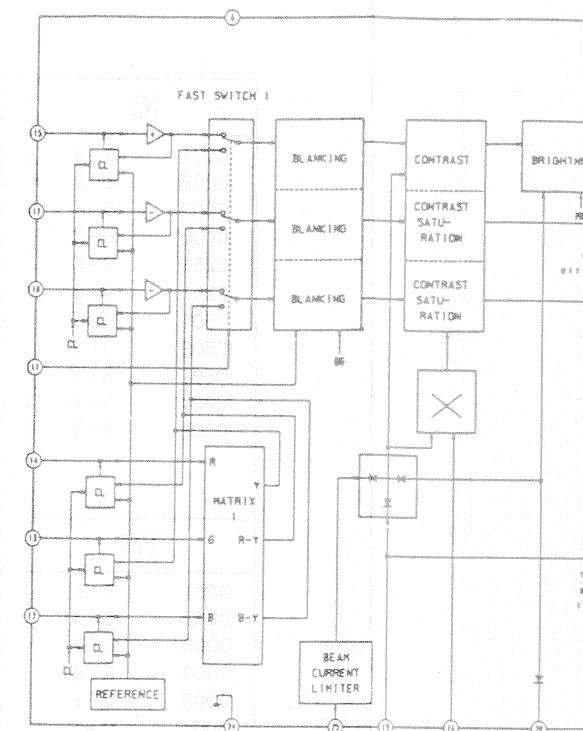


B1 BOARD IC302 TDA8442-N3

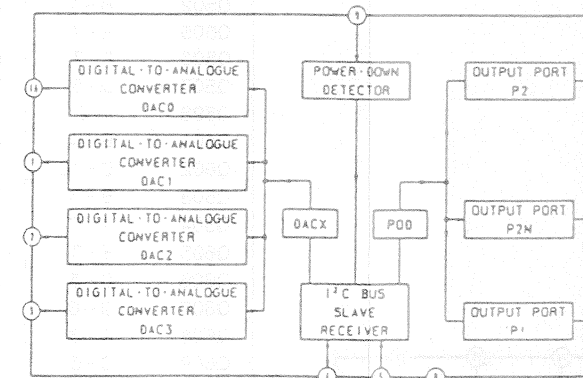


Note:

- Pattern from the side which enables seeing.
- Pattern of the rear side.

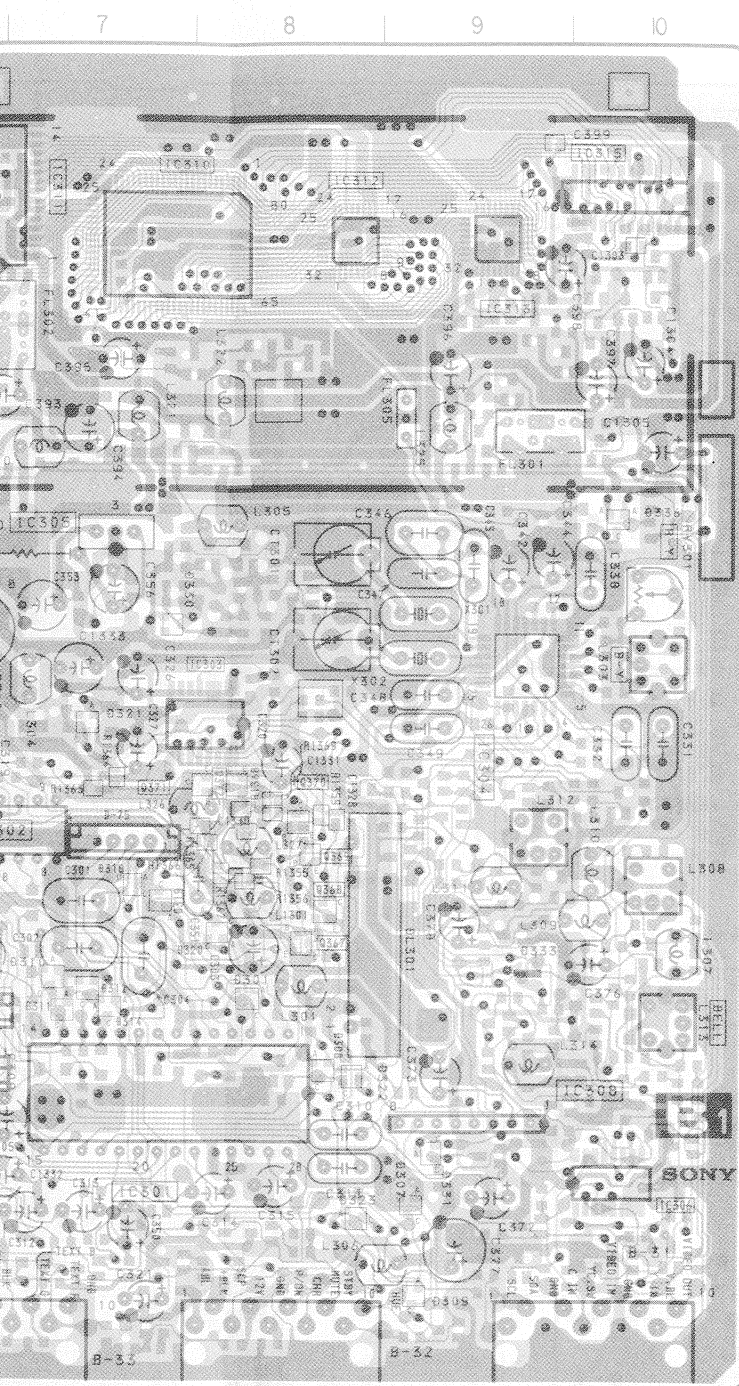


IC			
IC301	F-7	Q353	B-1
IC302	E-6	Q354	C-2
IC303	D-8	Q355	C-1
IC304	D-9	Q356	B-1
IC305	C-7	Q357	B-1
IC306	G-10	Q358	B-1
IC308	F-9	Q359	B-1
IC310	A-7	Q360	B-3
IC311	A-8	Q361	C-4
IC312	B-8	Q362	C-5
IC313	B-9	Q363	C-5
IC315	A-10	Q364	B-5
		Q365	A-5
		Q366	D-3
		Q367	E-8
		Q368	E-8
		Q369	E-8
		Q370	E-8
		Q371	D-8
		Q372	D-8
		Q373	
		Q1301	E-3
		Q1302	E-3
		Q1303	F-3
TR			
Q301	G-3		
Q302	G-3		
Q303	G-3		
Q304	G-4		
Q305	E-4		
Q306	G-2		
Q307	G-4		
Q308	G-4		
Q310	C-1		
Q311	C-2		
Q320	D-3		
Q321	C-3		
Q322	C-3		
Q323	C-3		
Q324	C-3		
Q327	G-1		
Q328	G-1		
Q329	G-1		
Q330	G-2		
Q331	F-1		
Q332	G-2		
Q333	F-2		
Q334	E-2		
Q335	E-1		
Q336	D-2		
Q337	D-2		
Q338	E-1		
Q339	E-2		
Q340	F-2		
Q341	E-1		
Q342	E-2		
Q343	F-1		
Q344	F-1		
Q345	F-1		
Q346	E-3		
Q347	F-1		
Q348	F-2		
Q350	B-3		
Q352	B-2		
		D	
		D301	F-8
		D304	G-6
		D305	F-6
		D307	G-9
		D308	F-8
		D309	G-9
		D310	E-7
		D311	F-7
		D312	E-7
		D314	F-7
		D318	E-7
		D319	E-7
		D320	E-8
		D321	D-7
		D322	F-8
		D330	D-7
		D331	F-9
		D333	E-9
		D336	C-10
		D340	B-1
		D341	B-2
		VR	
		RV301	C-10


B1 BOARD IC301 TDA4580-V4

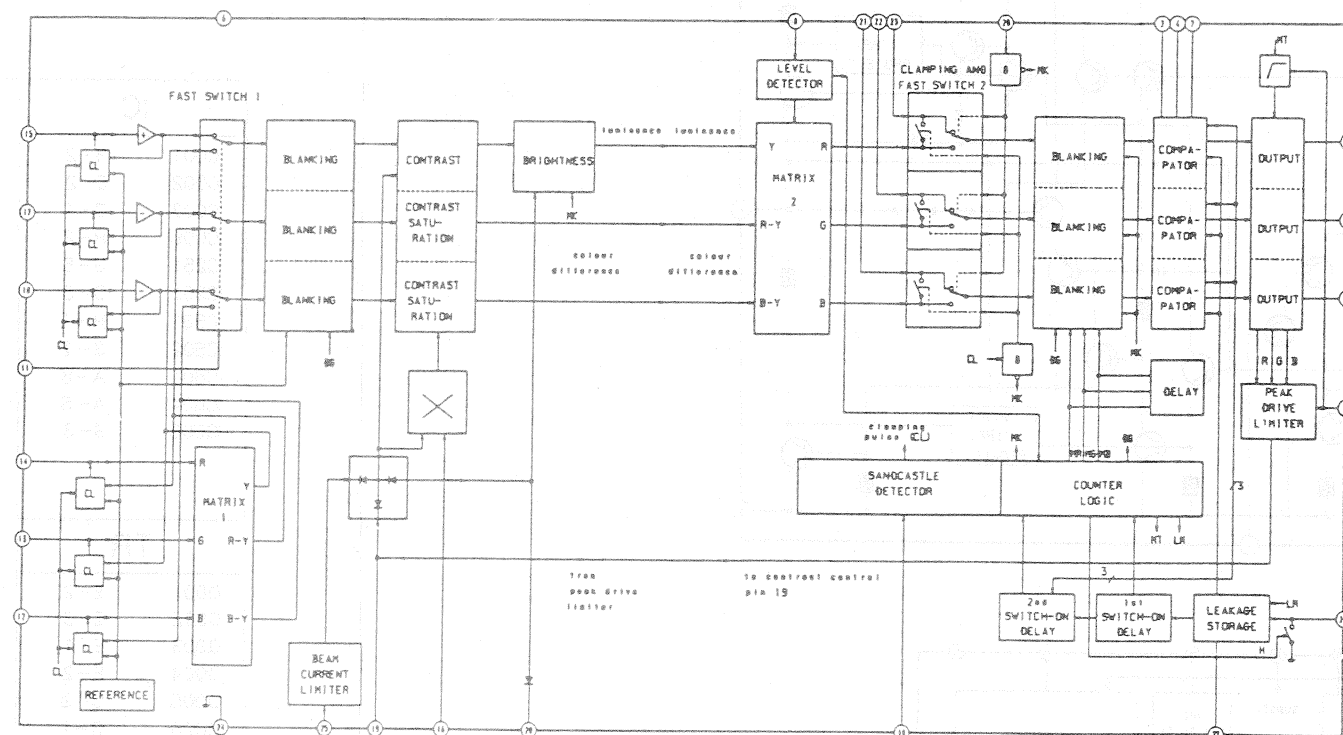


B1 BOARD IC302 TDA8442-N3

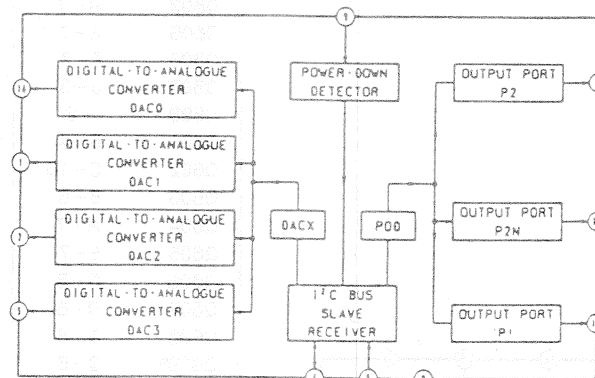

B1 BOARD IC303 TDA4660T


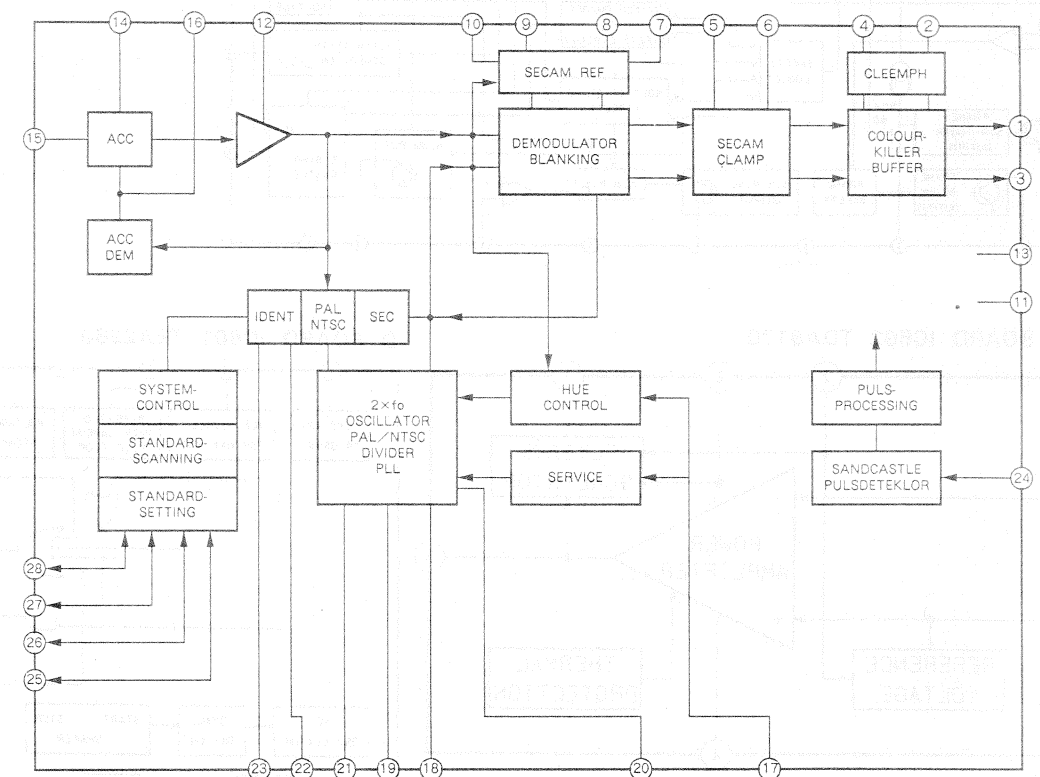


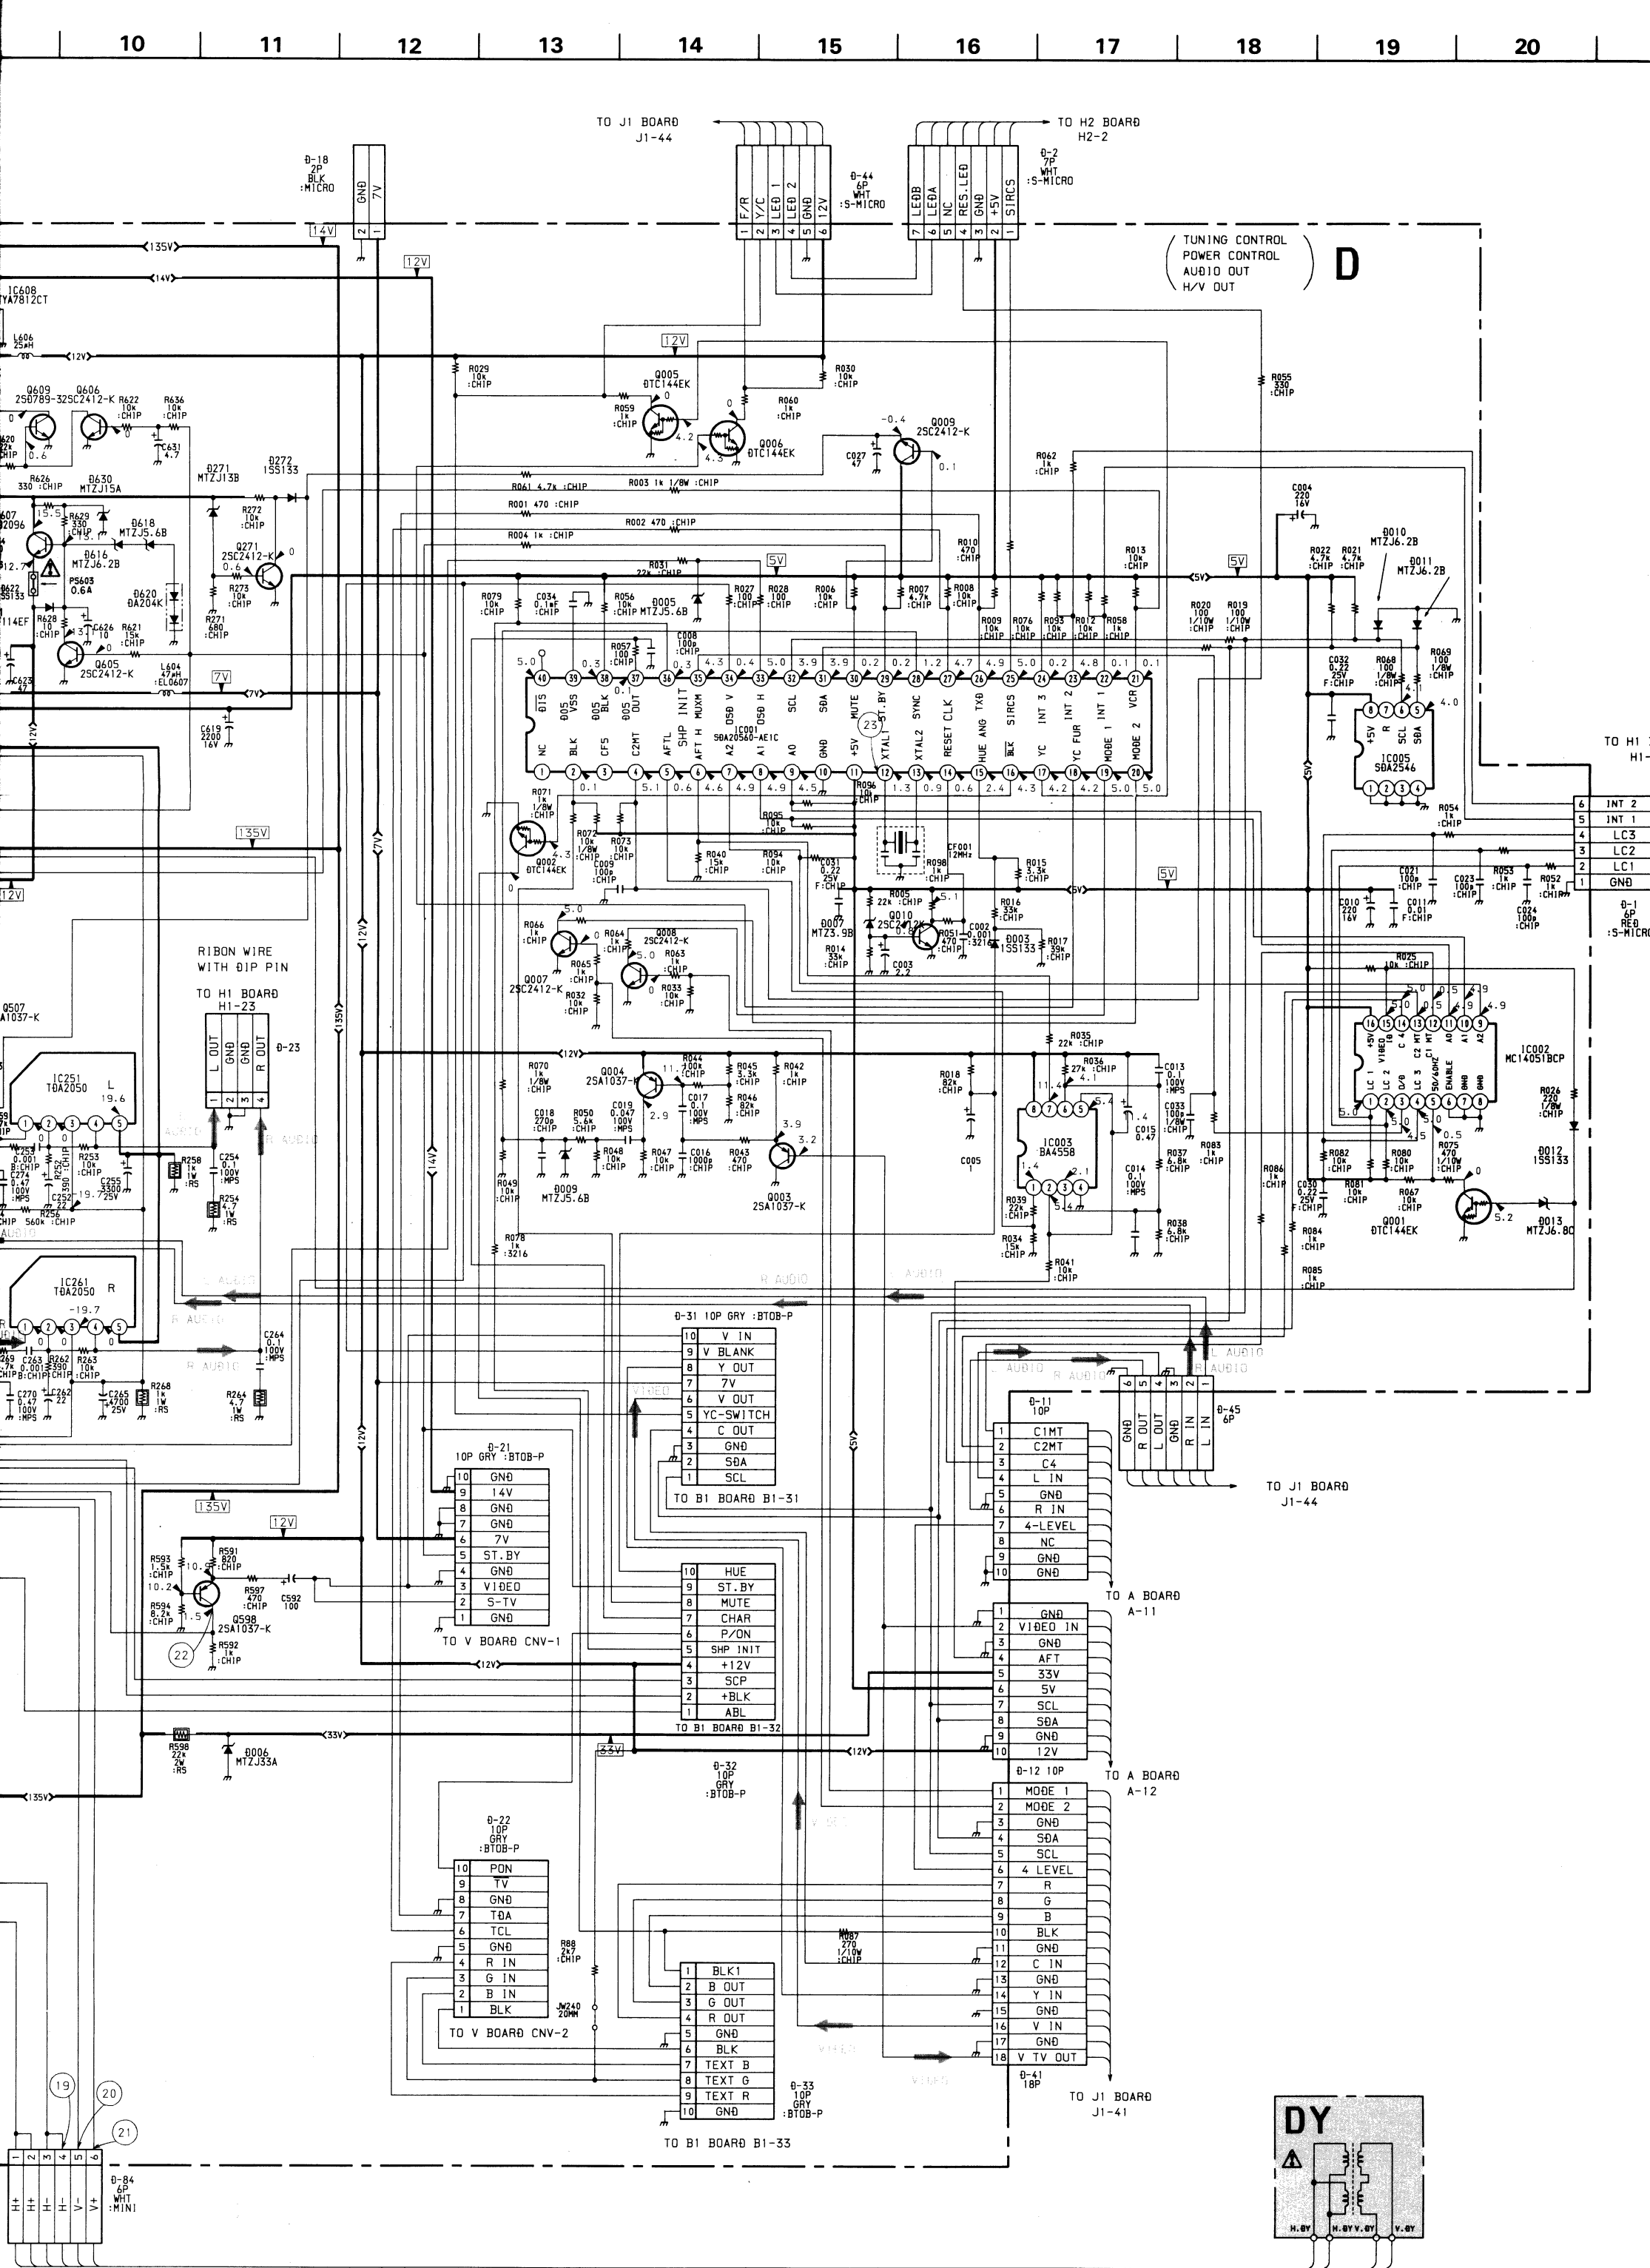

D-2
7P
WHT
S-MICRO

(TUNING CONTROL
POWER CONTROL
AUDIO OUT
H/V OUT

D

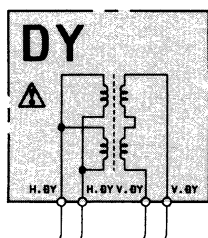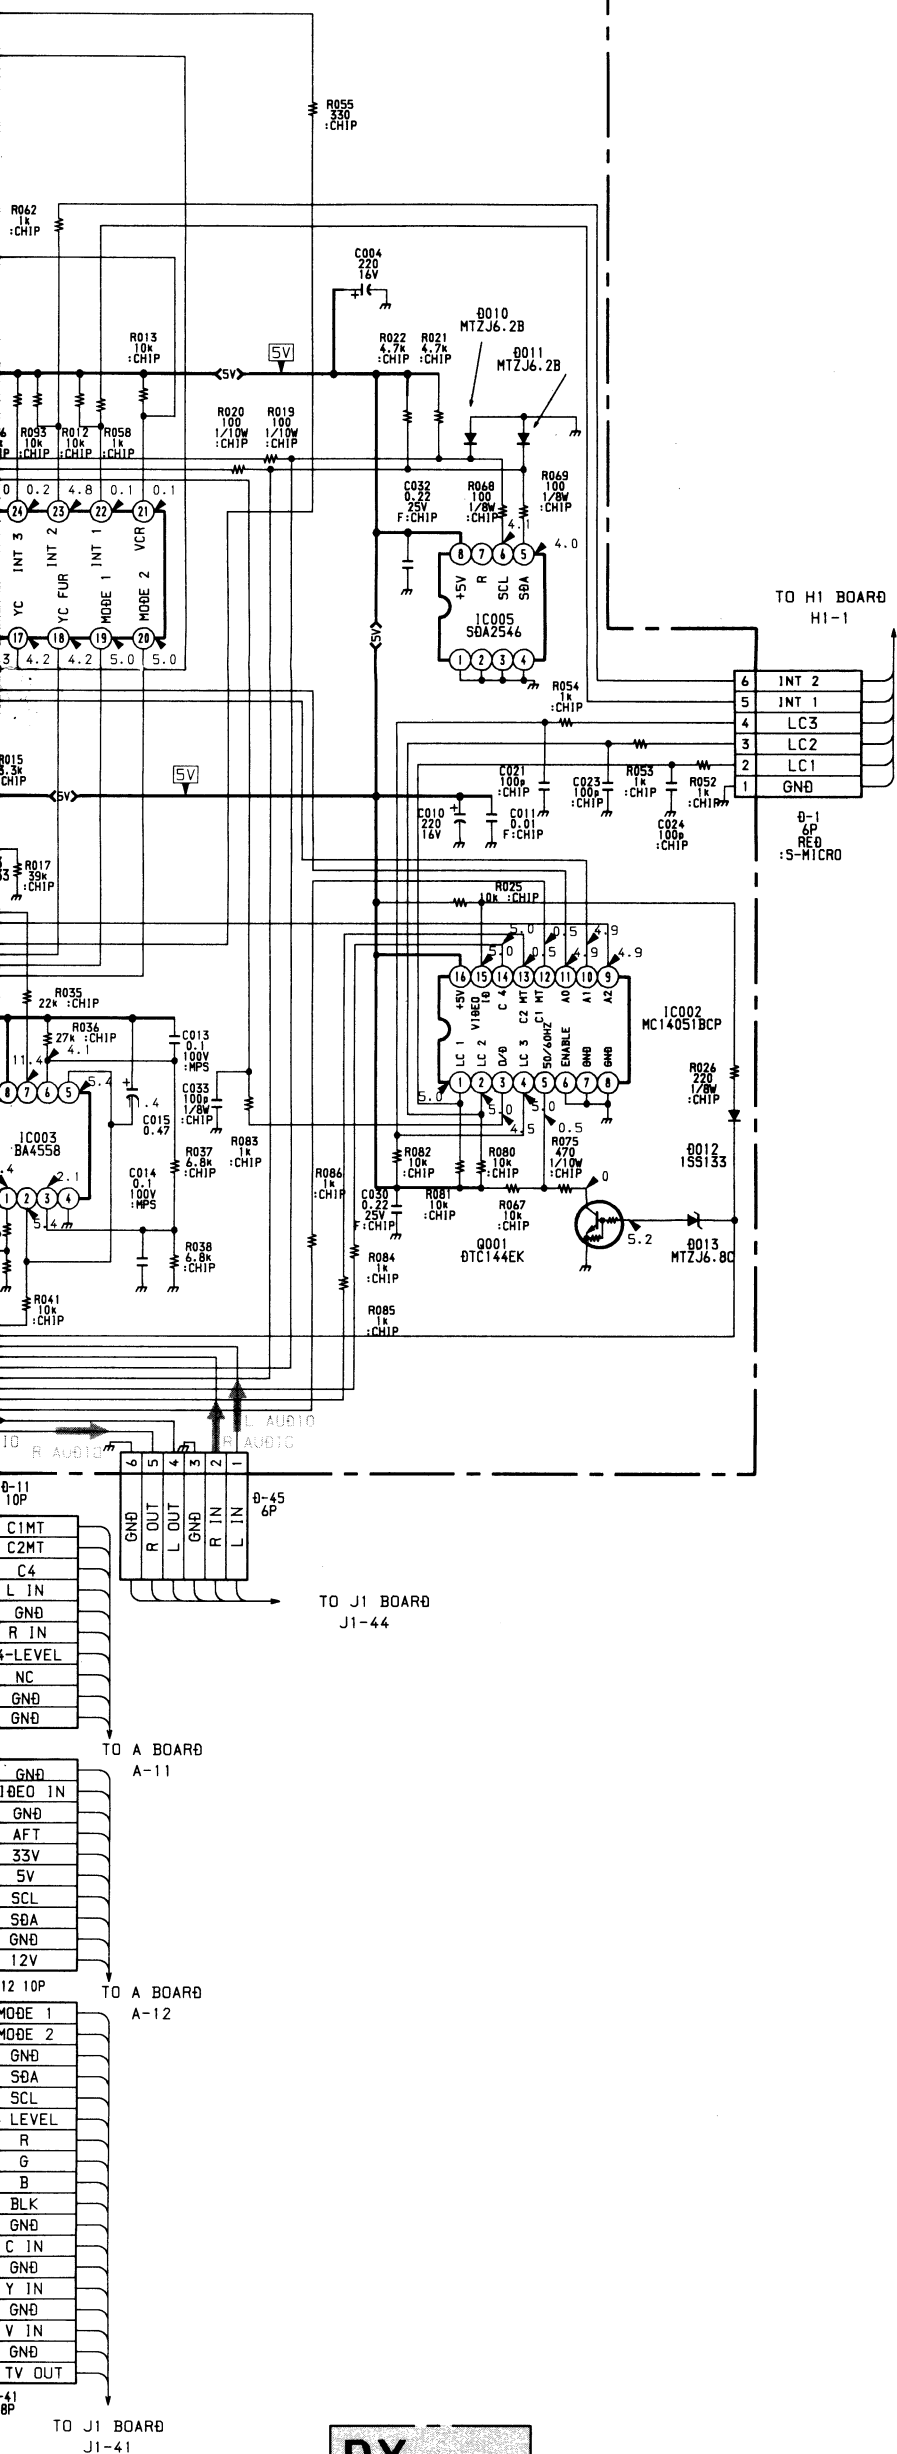

D BOARD

IC001	SDA20560	TUNING CTL
IC002	MC14051BCP	ON SCREEN DISPLAY
IC003	BA4558	AFT COMPARATOR
IC005	SBA2546	MY MEMORY
IC251	TDA2050	AUDIO OUT (L)
IC261	TDA2050	AUDIO OUT (R)
IC501	TEA2028B	DEFLECTION PROCESSOR
IC502	TDA8170	V OUT
IC601	TEA2260	PRIMARY SMRS CTL
IC604	TEA7605	+5V REG
IC608	TYA7812CT	+12V REG
Q001	DTC144EK	50/60Hz SW
Q002	DTA144EK	REG SW
Q003	2SA1037-K	SYNC SEPARATOR
Q004	2SA1037-K	SYNC SEPARATOR
Q005	DTC144EK	Y/C SW
Q006	DTC144EK	FRONT/REAR SW
Q007	2SC2412-K	MODE 2 SWITCH
Q008	2SC2412-K	MODE 1 SWITCH
Q009	2SC2412-K	MUTE SW
Q010	2SC2412-K	RESET
Q251	2SC2412-K	AUDIO MUTO
Q261	2SC2412-K	AUDIO MUTO
Q271	2SC2412-K	VOLTAGE DETECT
Q502	2SA1037-K	CONSTANT CURRENT SOURCE
Q505	2SD774	V CENT
Q506	2SB734	V CENT
Q507	2SA1037-K	CANAL +BLK
Q598	2SA1037-K	VIDEO AMP
Q601	2SB1357T114EF	STBY SW
Q602	SD1545	REG OUT
Q603	2SB1357T114EF	STBY SW
Q604	2SA1037-K	FAST ON/OFF
Q605	2SC2412-K	STBY SW
Q606	2SC2412-K	STBY SW
Q607	2SD2096-EF	+12V REG
Q608	2SC2412K	STBY SW
Q609	2SD789-3	STBY SW
Q801	2SC2412-K	ABL AMP
Q804	BU508	H OUT
Q805	2SC2688	H DRIVER
D003	1SS133	HUE CTL
D005	MTZJ5.6B	PROT
D006	MTZJ33A	VC VOLTAGE REGULATION
D007	MTZJ3.9B	PLOT RESET
D009	MTZJ5.6B	CLIPPING SYNC LEVEL
D010	MTZJ6.2B	PROT
D011	MTZJ6.2B	PROT
D012	1SS133	PROT
D013	MTZJ6.8C	PROT
D271	MTZJ13B	VOLTAGE DETECT
D272	1SS133	DECOUPING MUTE AUDIO
D501	1SS133	START
D504	GP080PKG23	V PULSE OUT
D506	DA204K	CURRENT (KV-E25210 ONLY)
D508	1SS133	CANAL +BLK LEVEL
D509	1SS133	V LIN
D511	GP080PKG23	PROT
D512	GP080PKG23	PROT
D513	MTZJ4.7B	PROT
D514	1SS133	PROT (KV-E29210 ONLY)
D515	1SS133	PROT (KV-E29210 ONLY)
D601	D4SB60L-F	AC RECT
D602	RGP10GPKG23	REF RECT
D603	GP080PKG23	SMPS DRIVE 1
D604	GP080PKG23	SMPS DRIVE 2
D605	GP080PKG23	SMPS DRIVE 3
D606	RGP10GPKG23	+12V RECT
D607	RGP10GPKG23	REF RECT
D608	ERC25-06S	PLUSE CLIPPER
D609	MTZJ33A	FAST ON/OFF
D610	CTU-12S	+14V RECT
D611	ER029-08J	+135VRECT
D612	CTU-12S	+7V RECT
D613	RGP15JPKG23	AF V RECT-1
D614	RGP15JPKG23	AF V RECT-2
D616	MTZJ6.2B	+12V REG
D617	1SS133	PROT
D618	MTZJ5.6B	+12V REF
D619	MTZJ33A	FAST ON/OFF-2
D620	DA204K	+12V REF
D621	MTZJ33A	FAST ON/OFF-3
D622	1SS133	PROT
D623	1SS133	DECOUPING STBY
D624	1SS133	DECOUPING DTBY
D630	MTZJ15A	+12V REF
D801	RGP10GPKG23	+27V REF
D802	RGP10GPKG23	+200V REF
D803	RGP02-17	G2 REF
D804	GP080PKG23	H CENTER-1
D805	GP080PKG23	H CENTER-2
D806	ERC06-15S	H DAMPER-1
D807	ERC06-15S	H DAMPER-2
D808	ER029-08J	PIN DAMPER

BOARD

A20560	TUNING CTL
14051BCP	ON SCREEN DISPLAY
4558	AFT COMPARE
A2546	MY MEMORY
A2050	AUDIO OUT (L)
A2050	AUDIO OUT (R)
A2028B	DEFLECTION PROCESSOR
A8170	V OUT
A2260	PRIMARY SMRS CTL
A7605	+5V REG
A7812CT	+12V REG
C144EK	50/60Hz SW
A144EK	REG SW
A1037-K	SYNC SEPARATOR
A1037-K	SYNC SEPARATOR
C144EK	Y/C SW
C144EK	FRONT/REAR SW
C2412-K	MODE 2 SWITCH
C2412-K	MODE 1 SWITCH
C2412-K	MUTE SW
C2412-K	RESET
C2412-K	AUDIO MUTO
C2412-K	AUDIO MUTO
C2412-K	VOLTAGE DETECT
A1037-K	CONSTANT CURRENT SOURCE
Ø774	V CENT
B734	V CENT
A1037-K	CANAL +BLK
A1037-K	VIDEO AMP
B1357T114EF	STBY SW
1545	REG OUT
B1357T114EF	STBY SW
A1037-K	FAST ON/OFF
C2412-K	STBY SW
C2412-K	STBY SW
Ø2096-EF	+12V REG
C2412K	STBY SW
Ø789-3	STBY SW
C2412-K	ABL AMP
508	H OUT
C2688	H DRIVER
SS133	HUE CTL
TZJ5.6B	PROT
TZJ33A	VC VOLTAGE REGULATION
TZJ3.9B	PLOT RESET
TZJ5.6B	CLIPPING SYNC LEVEL
TZJ6.2B	PROT
TZJ6.2B	PROT
SS133	PROT
TZJ6.8C	PROT
TZJ13B	VOLTAGE DETECT
SS133	DECOUPING MUTE AUDIO
SS133	START
P08ØPKG23	V PULSE OUT
A204K	CURRENT (KV-E2521Ø ONLY)
SS133	CANAL +BLK LEVEL
SS133	V LIN
P08ØPKG23	PROT
P08ØPKG23	PROT
TZJ4.7B	PROT
SS133	PROT (KV-E2921Ø ONLY)
SS133	PROT (KV-E2921Ø ONLY)
45B60L-F	AC RECT
GP10ØPKG23	REF RECT
P08ØPKG23	SMPS DRIVE 1
P08ØPKG23	SMPS DRIVE 2
P08ØPKG23	SMPS DRIVE 3
GP10ØPKG23	+12V RECT
GP10ØPKG23	REF RECT
RC25-06S	PLUSE CLIPPER
TZJ33A	FAST ON/OFF
TU-12S	+14V RECT
RØ29-Ø8J	+135VRECT
TU-12S	+7V RECT
GP15JPKG23	AF V RECT-1
GP15JPKG23	AF V RECT-2
TZJ6.2B	+12V REG
SS133	PROT
TZJ5.6B	+12V REF
TZJ33A	FAST ON/OFF-2
A204K	+12V REF
TZJ33A	FAST ON/OFF-3
SS133	PROT
SS133	DECOUPING STBY
SS133	DECOUPING ØTBY
TZJ15A	+12V REF
GP10ØPKG23	+27V REF
GP10ØPKG23	+20ØV REF
GPØ2-17	G2 REF
P08ØPKG23	H CENTER-1
P08ØPKG23	H CENTER-2
RCØ6-15S	H ØAMPER-1
RCØ6-15S	H ØAMPER-2
RØ29-Ø8J	PIN ØAMPER

• WAVEFORMS D BOARD

① 1.2Vp-p (H)	② 4.0Vp-p (V)	③ 4.8Vp-p (V)
④ 4.0Vp-p (V)	⑤ 4.0Vp-p (H)	⑥ 11.0Vp-p (H)
⑦ 14.0Vp-p (H)	⑧ 3.6Vp-p (H)	⑨ 0.1Vp-p (503KHz)
⑩ 1.4Vp-p (H)	⑪ 0.7Vp-p (V)	⑫ 2.2Vp-p (V)
⑬ 29.0Vp-p (V)	⑭ 48.0Vp-p (V)	⑮ 3.2Vp-p (H)
⑯ 250Vp-p (H)	⑰ 16.0Vp-p (H)	⑱ 900Vp-p (H)
⑲ 180Vp-p (H)	⑳ 7.0Vp-p (V)	㉑ 48.0Vp-p (V)
㉒ 1.4Vp-p (H)	㉓ 2.8Vp-p (12MHz)	

D BOARD *MARK


	KV-E2521Ø	KV-E2921Ø
C519	0.47MF	0.33MF
C815	1MF	0.82MF
C817	0.015MF	0.017MF
C821	680P 2K	470P 2K
Ø506	ØA204K	-
Ø514	JW	1SS133
Ø515	-	1SS133
Ø-88	-	3P
JW202	-	X
JW203	X	-
JW204	X	-
JW205	-	X
JW206	X	-
JW207	X	-
JW229	X	-
JW216	X	-
L801	-	3.9MMH
R525	1K	-
R561	-	270K
R570	-	680
R607	4.7K	5.6K
R812	68K	51K
R5503	4.7	10
R5506	-	12K

— NOT MOUNTED
× TO BE MOUNTED

C BOARD



Q702	JC501	R DRIVE
Q703	BF871	R OUT
Q704	2SA10910	ACD MEASURING
Q705	JC501	G DRIVE
Q706	BF871	G OUT
Q707	2SA10910	ACD MEASURING
Q708	JC501	B DRIVE
Q709	BF871	B OUT
Q710	2SA10910	ACD MEASURING
Ø701	MTZJ9.1C	PROTECT
Ø702	1SS133	PROTECT
Ø703	1SS133	PROTECT
Ø704	1SS133	PROTECT
Ø705	1SS133	PROTECT
Ø706	1SS133	PROTECT
Ø707	1SS133	PROTECT
Ø708	1SS133	PROTECT
Ø709	1SS133	PROTECT
Ø710	1SS133	PROTECT
Ø711	RGP10G	HEATING VOLTAGE REC
Ø713	1SS133	PROTECT

• WAVEFORMS C BOARD

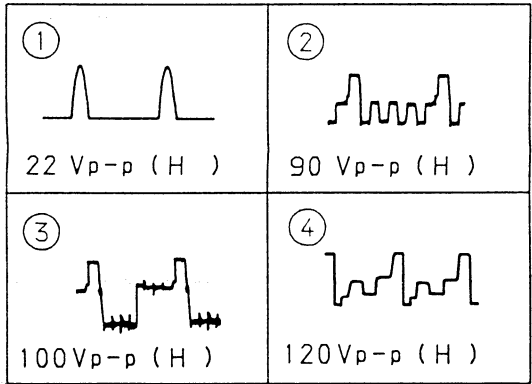


C BOARD *MARK


	KV-E2521Ø	KV-E2921Ø
C-71	2P	3P
R737	820K	470K

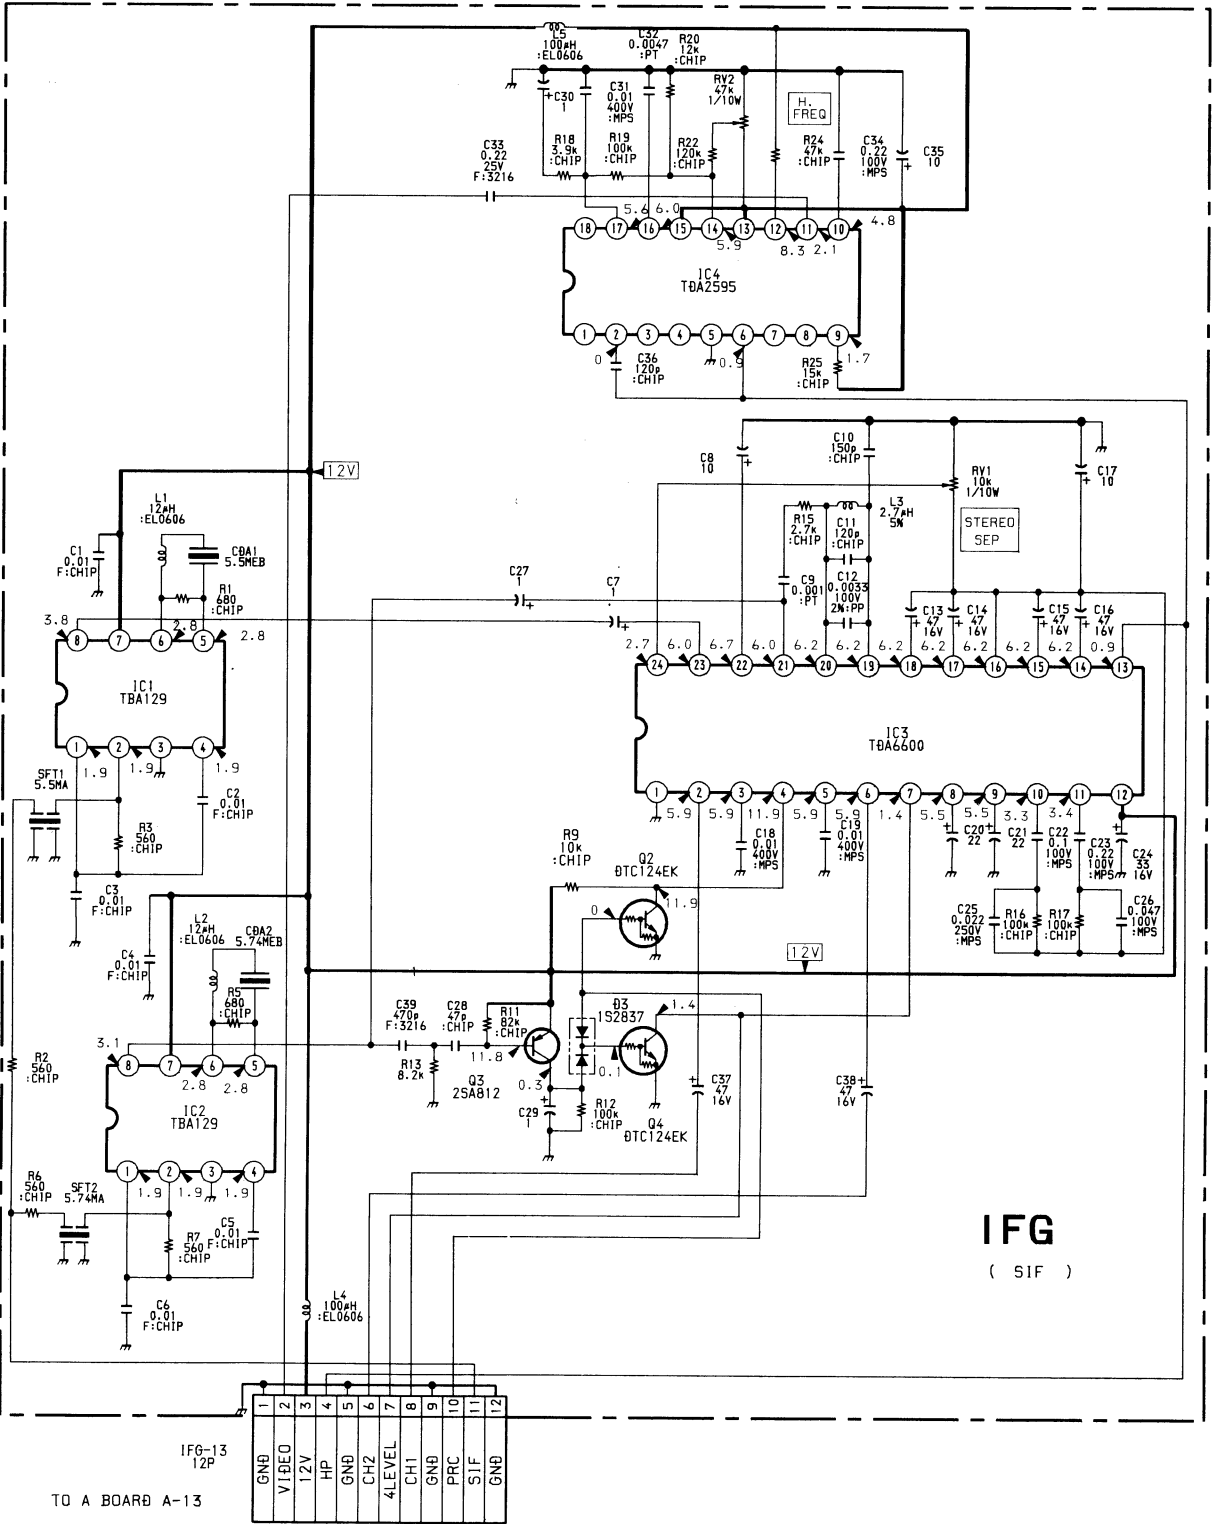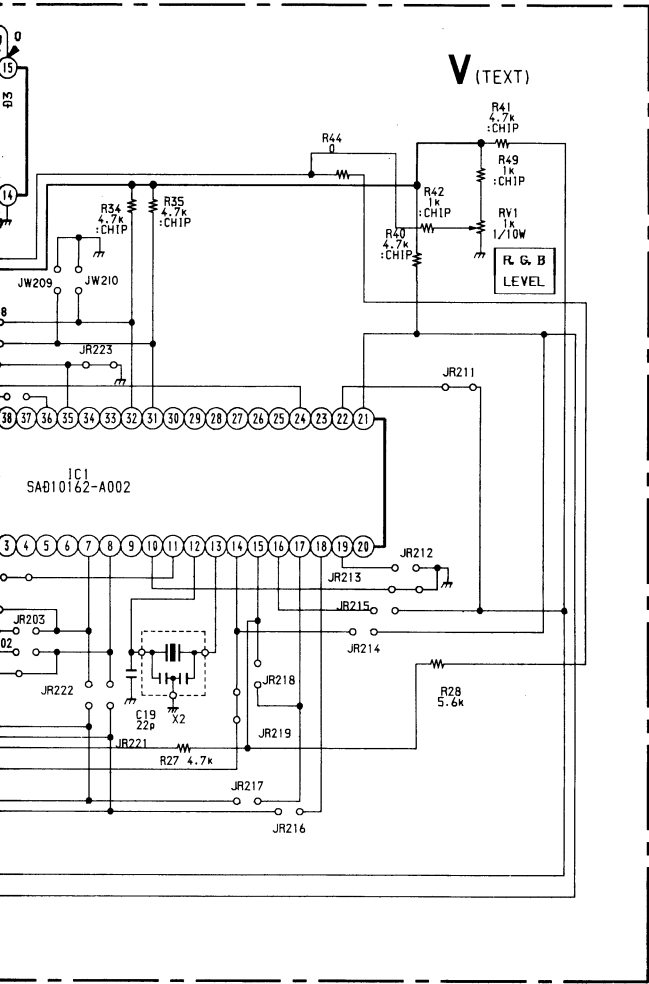



— C BOARD —

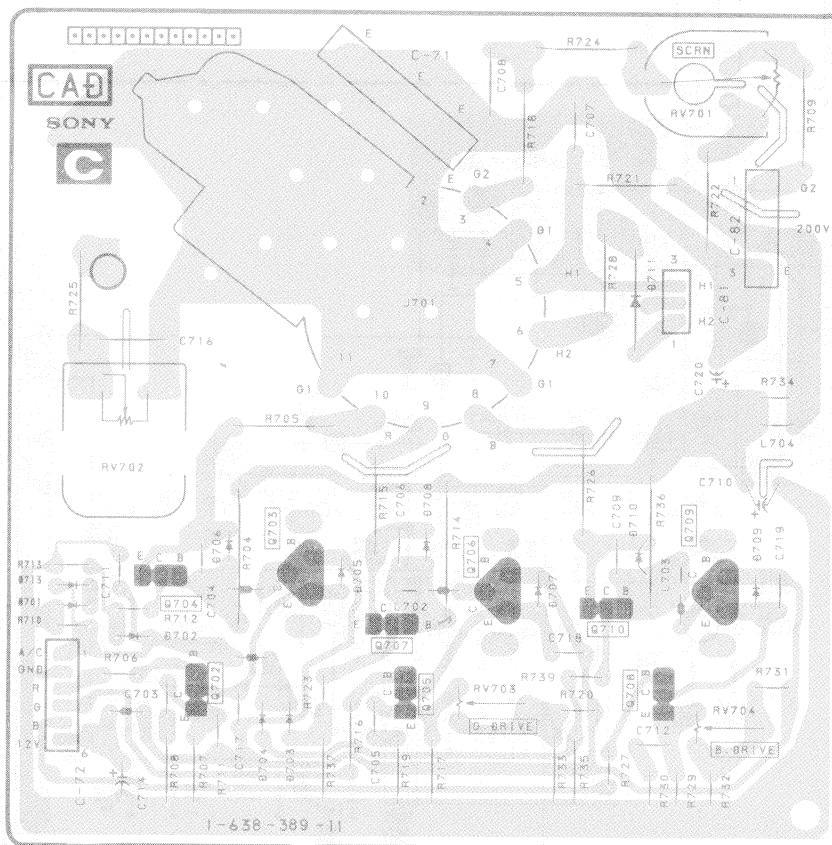

— V BOARD —

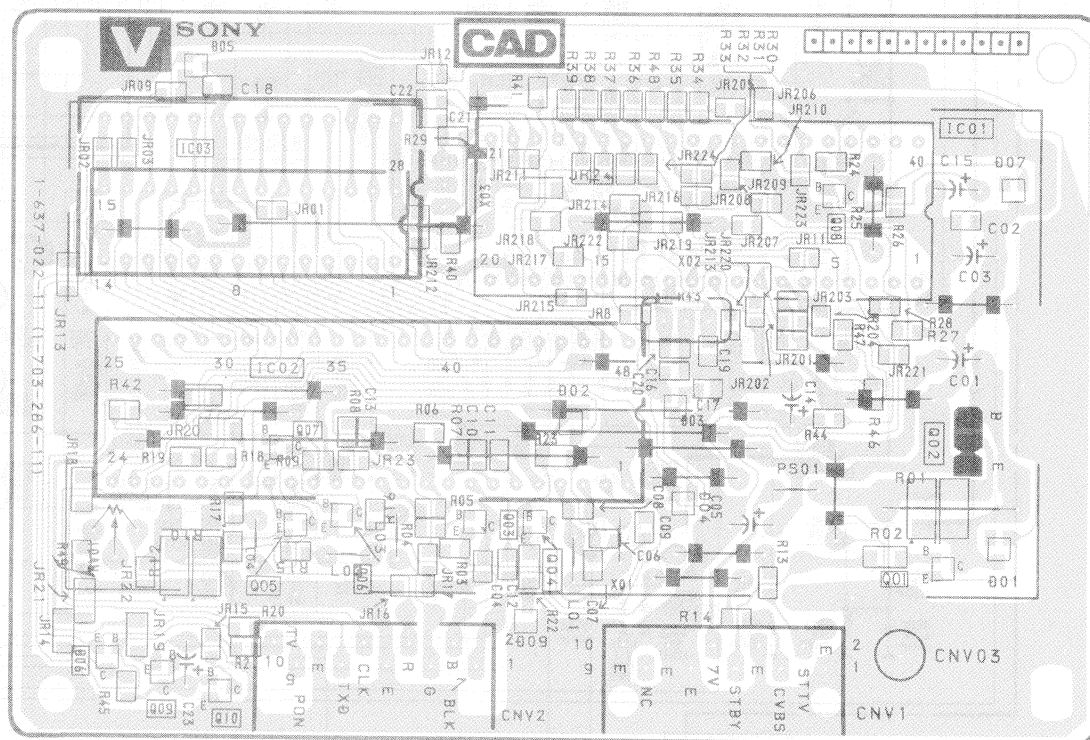


— IFG BOARD —

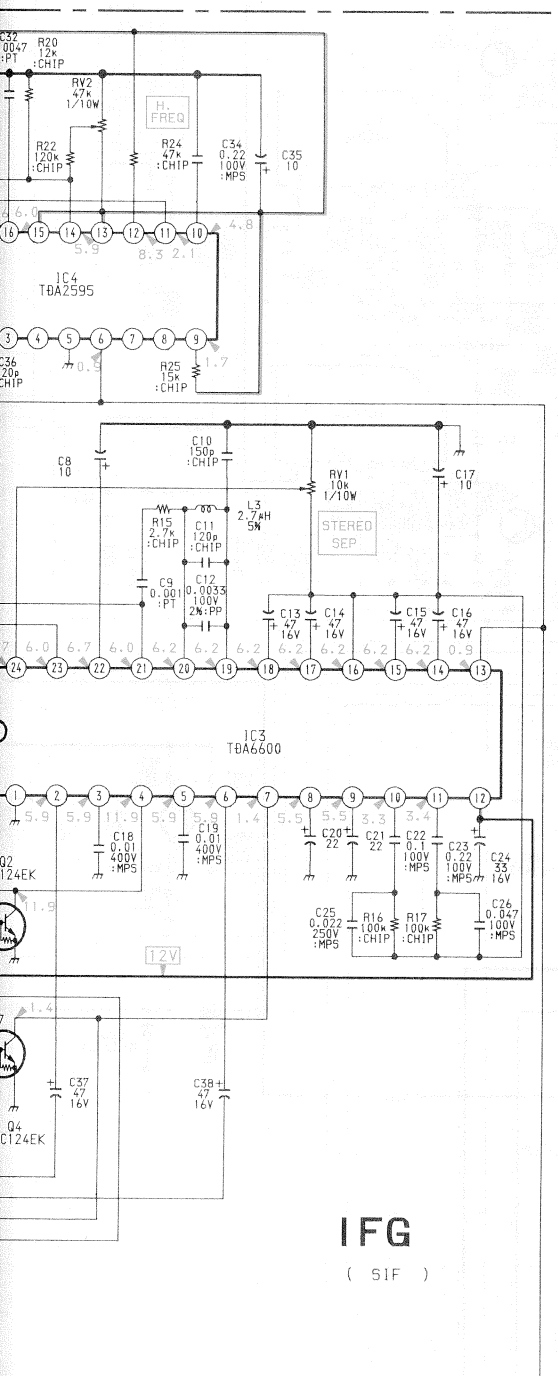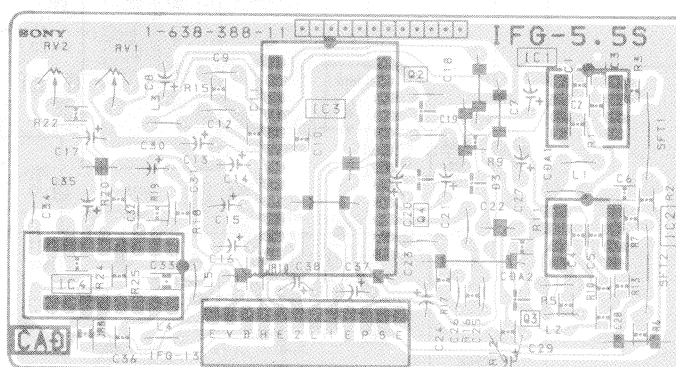


5-4. SEMICONDUCTORS


CXA1114P
SBA20162-A002
TDA4580-V6
TDA6200
TEA2028B

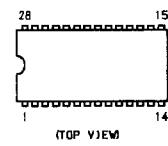


CXD1175AM
CXD1175M-T5

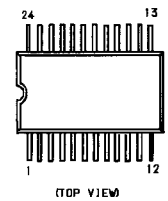


CXD2011Q
CXK1202Q-T4

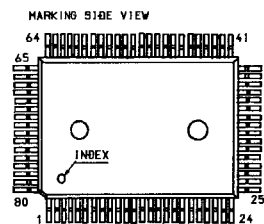


CXK-1202Q

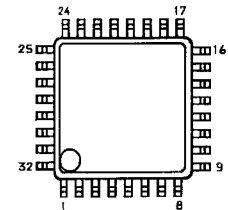


CX20061

 


FCB61C65-70P
SBA20560-AE1C

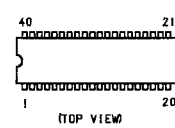


HCF4052BM

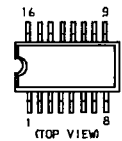


MB40968PF

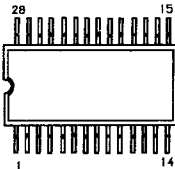


MC14053BCP
PCF8574
TC4051BPHB
TDA4660T
TDA8442-N3
TEA2260
μPD4053BC

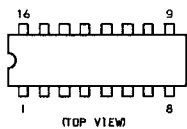


RC4558P
SBA2546
TEA2014A
TEA2031A

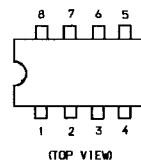


SAA5246E

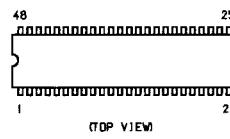


SBX1610-11

 


TDA2050

 


TDA4650WP

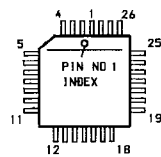


TDA8170

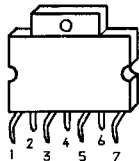


TEA7605
TYA7812CT
μPC24M05HF

 


BF871

 

BU508AS1

 

DTA144EK
DTC114EK
DTC124EK
DTC144EK
2SA1162G
2SB1295-UL6
2SC2412K
2SC2412K-QR
2SC2412K-R

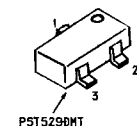

PST5290MT

DTC144ES



 
2SA1091-X




2SA1220A-P
2SD789-3TZ
2SD789-34




2SB734-34
2SD774-34




2SC2688-LK

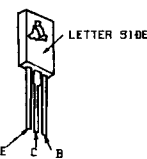


2SC2785-HFE

 


2SD2096-EF

 


CTU-12S

 


DAN212K
DAN212K-T146
MA152WK

 


DAP202K
EGP20G
1S2836

 


Ø4SB60L-F

 


ERC06-15S
RU-3AM

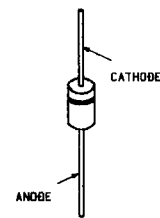

ERØ29-Ø8J

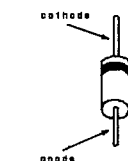


ES1F

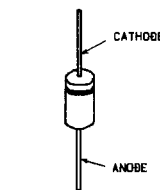


1MN10




HZS36NB4
MTZJ-T-77-13B
MTZJ-T-77-15A
MTZJ-T-77-33A
MTZJ-T77-6.2B
MTZJ-T-77-10C
MTZJ-13B
MTZJ-15A
MTZJ-3.9
MTZJ-33A
MTZJ-6.2B
MTZJN-10C
RØ5.6ESB2
RØ6.8ESB2
RØ7.5ESB2
RØ9.1ESB3
VZ4.7BSC
1SS119

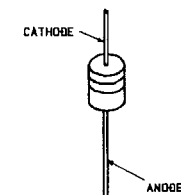


MA3056
MA3056-H
MA3110M-TX
RØ11M-B2
RØ3.6M-B2
RØ5.6M-B2
RØ6.8M-B2

 


U05G

 

1SS226

 


LØ-201VR

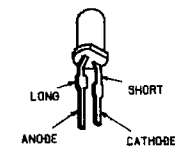

SECTION 6
EXPLODED VIEWS


NOTE:

 - Items with no part number and no description are not stocked because they are seldom required for routine service.
- The construction parts of an assembled part are indicated with a collation number in the remark column.
- Items marked "★" are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.

The components identified by shading and mark  are critical for safety.
Replace only with part number specified.


(1) CHASSIS


- : BVTP3×12 7-685-648-79
- : BVTP4×16 7-685-663-79

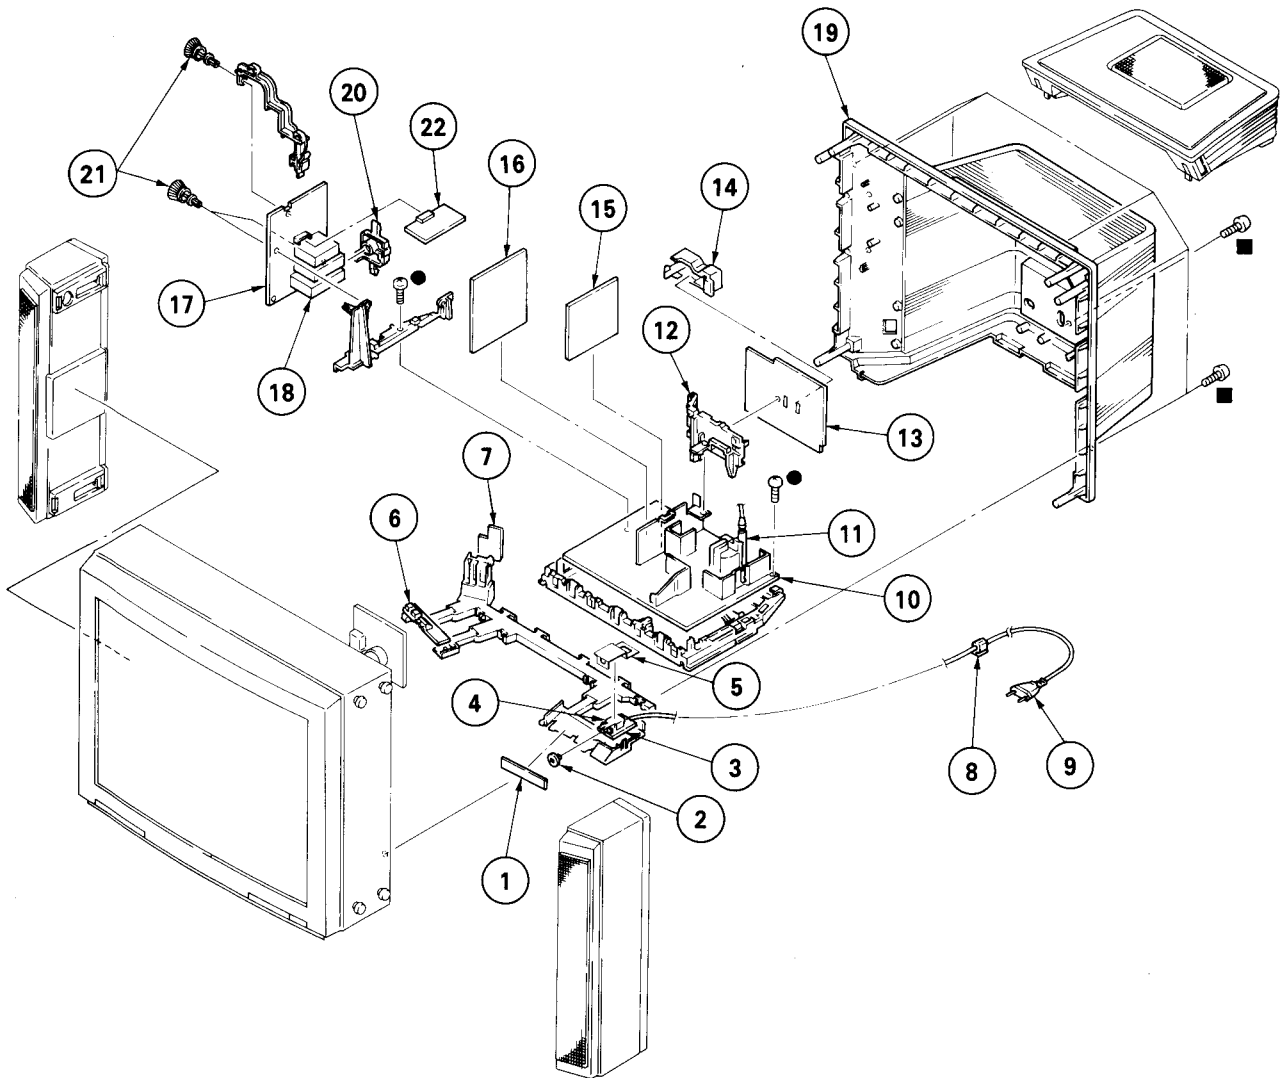

REF.NO.	PART NO.	DESCRIPTION	REMARK	REF.NO.	PART NO.	DESCRIPTION	REMARK
1	*1-638-392-11	H2 BOARD		12	*4-386-624-11	BRACKET, J	
2	4-201-011-01	CAP. SWITCH (KV-E2521D ONLY)		13	A-1651-018-A	J1 BOARD, COMPLETE (KV-E2521D ONLY)	
3	4-386-611-01	COVER, SWITCH (KV-E2921D ONLY)		14	A-1651-020-A	J1 BOARD, COMPLETE (KV-E2921D ONLY)	
4	*1-638-390-11	F BOARD		15	4-200-014-01	BRACKET, TERMINAL	
5	▲1-571-433-11	SWITCH, PUSH (AC POWER)		16	A-1645-013-A	V BOARD, COMPLETE	
6	4-200-274-01	COVER, POWER SWITCH		17	A-1621-013-A	B1 BOARD, COMPLETE (KV-E2521D ONLY)	
7	*1-638-391-11	H1 BOARD		18	A-1621-015-A	B1 BOARD, COMPLETE (KV-E2921D ONLY)	
8	*1-638-393-11	J2 BOARD		19	A-1632-022-A	A BOARD, COMPLETE	
9	▲4-389-201-02	HOLDER, AC CORD		20	▲1-465-301-11	TUNER, ET (UV-816(PLL))	
10	▲1-590-501-11	CORD, POWER(WITH NOISE FILTER)		21	4-201-017-02	COVER, REAR (KV-E2521D ONLY)	
11	A-1642-031-A	D BOARD, COMPLETE (KV-E2521D ONLY)		22	4-200-026-04	COVER, REAR (KV-E2921D ONLY)	
	A-1642-032-A	D BOARD, COMPLETE (KV-E2921D ONLY)			*4-386-617-01	HOLDER, TERMINAL	
	▲1-439-416-11	TRANSFORMER ASSY, FLYBACK (UX-1600)			4-386-618-01	RIVET, T TYPE	
					A-1654-004-A	IFG BOARD, COMPLETE	

 (2) PICTURE TUBE

The components identified by shading and mark  are critical for safety.
Replace only with part number specified.

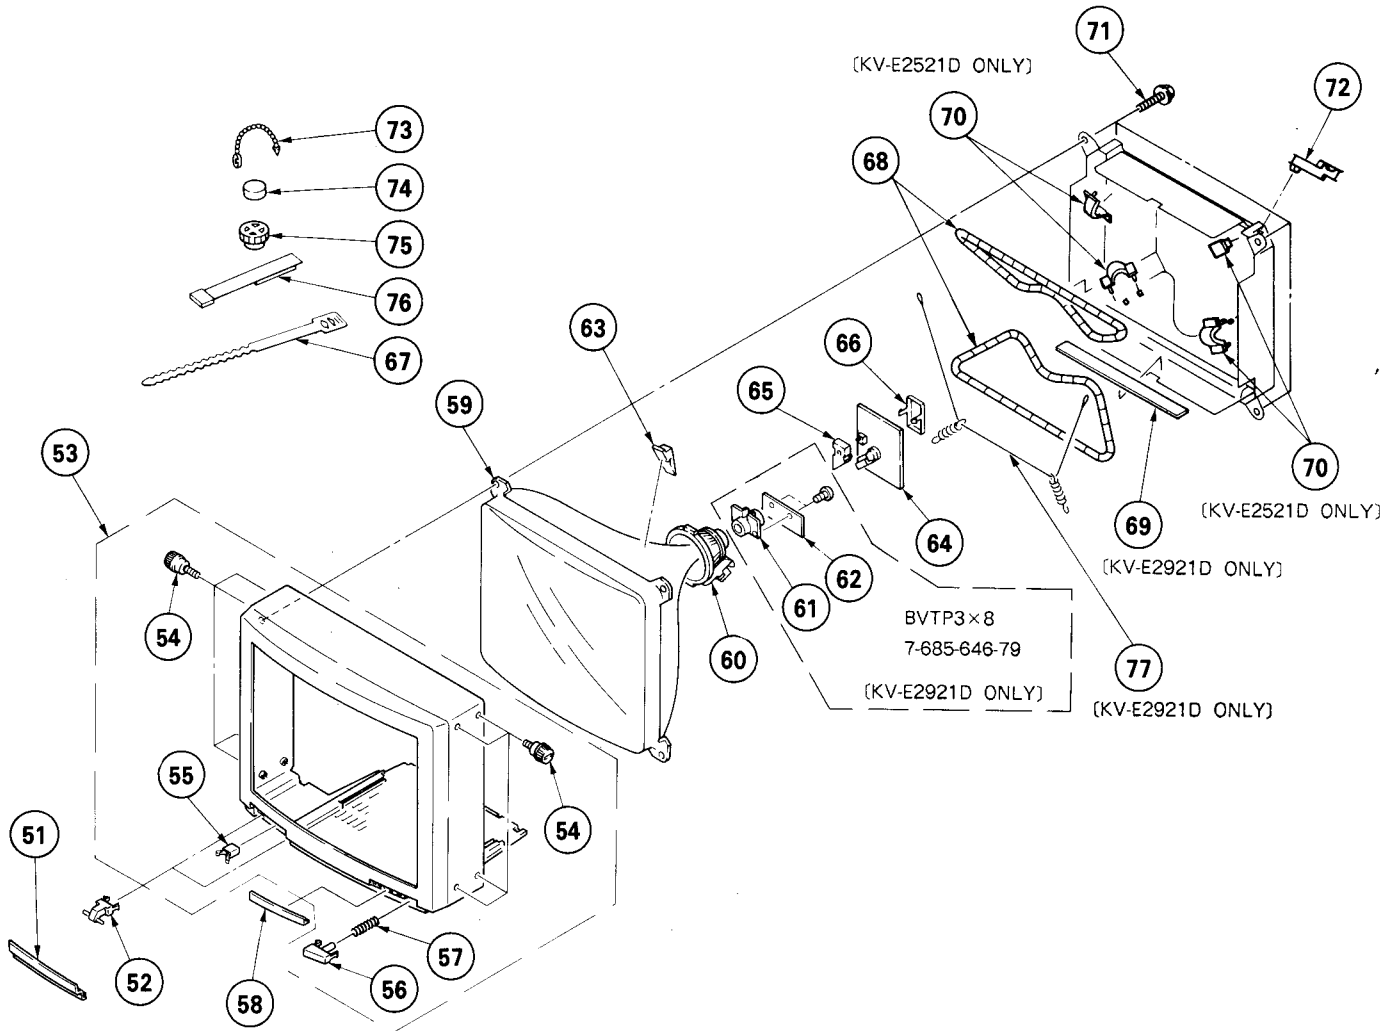


REF.NO.	PART NO.	DESCRIPTION	REMARK	REF.NO.	PART NO.	DESCRIPTION	REMARK
51	X-4201-006-5	DOOR ASSY, CONTROL (KV-E2521D ONLY)		62	*1-634-193-11	VM BOARD (KV-E2921D ONLY)	
52	X-4200-001-5	LID ASSY, CONTROL (KV-E2921D ONLY)		63	3-704-495-01	SPACER, DY	
53	3-703-035-11	SHAFT, LID		64	*A-1638-011-A	C BOARD, COMPLETE (KV-E2521D ONLY)	
	X-4201-005-5	CABINET ASSY (WITH BEZEL ASSY)	54-57 (KV-E2521D ONLY)	65	*A-1638-013-A	C BOARD, COMPLETE (KV-E2921D ONLY)	
	X-4200-008-8	CABINET ASSY (WITH BEZEL ASSY)	54-57 (KV-E2921D ONLY)	66	*4-379-167-01	COVER (MAIN), CV	
54	X-4374-104-1	SCREW (B) ASSY, ORNAMENTAL		67	*4-379-160-01	COVER (REAR LID), CV	
55	4-392-036-01	CATCHER, PUSH		68	3-701-007-00	BAND, BINDING	
56	4-200-013-01	BUTTON, POWER		69	▲1-460-091-11	COIL, DEGAUSS (KV-E2521D ONLY)	
57	4-329-112-21	SPRING		70	▲1-426-398-11	COIL, DEMAGNETIZATION (KV-E2921D ONLY)	
58	4-200-017-02	WINDOW, ORNAMENTAL		71	4-389-291-01	CUSHION (KV-E2921D ONLY)	
59	▲8-733-224-05	PICTURE TUBE (A59JWC60X) (KV-E2521D ONLY)		72	*4-385-916-01	HOLDER (D) (KV-E2521D ONLY)	
60	▲8-733-824-05	PICTURE TUBE (A68JYK60X) (KV-E2921D ONLY)		73	4-373-263-01	SCREW (M), PT	
61	▲1-451-311-21	DEFLECTION YOE (Y25FXA) (KV-E2521D ONLY)		74	*4-387-216-01	HOLDER, LEAD	
	▲1-451-313-21	DEFLECTION YOE (Y29FXA) (KV-E2921D ONLY)		75	4-308-870-00	CLIP, LEAD WIRE	
	▲1-452-509-42	NECK ASSY, PICTURE TUBE (NA-308) (KV-E2921D ONLY)		76	1-452-032-00	MAGNET, DISK; 10MM ϕ	
				77	1-452-094-00	MAGNET, ROTATABLE DISK; 15MM ϕ	
					X-4387-214-1	PERMALLOY ASSY, CORRECTION	
					4-369-318-00	SPRING, TENSION (KV-E2921D ONLY)	

(3) SPEAKER

■ : BVTP4×16 7-685-663-79

○ : BVTP4×10 7-685-660-79

△ : KTP3×12 7-685-248-19

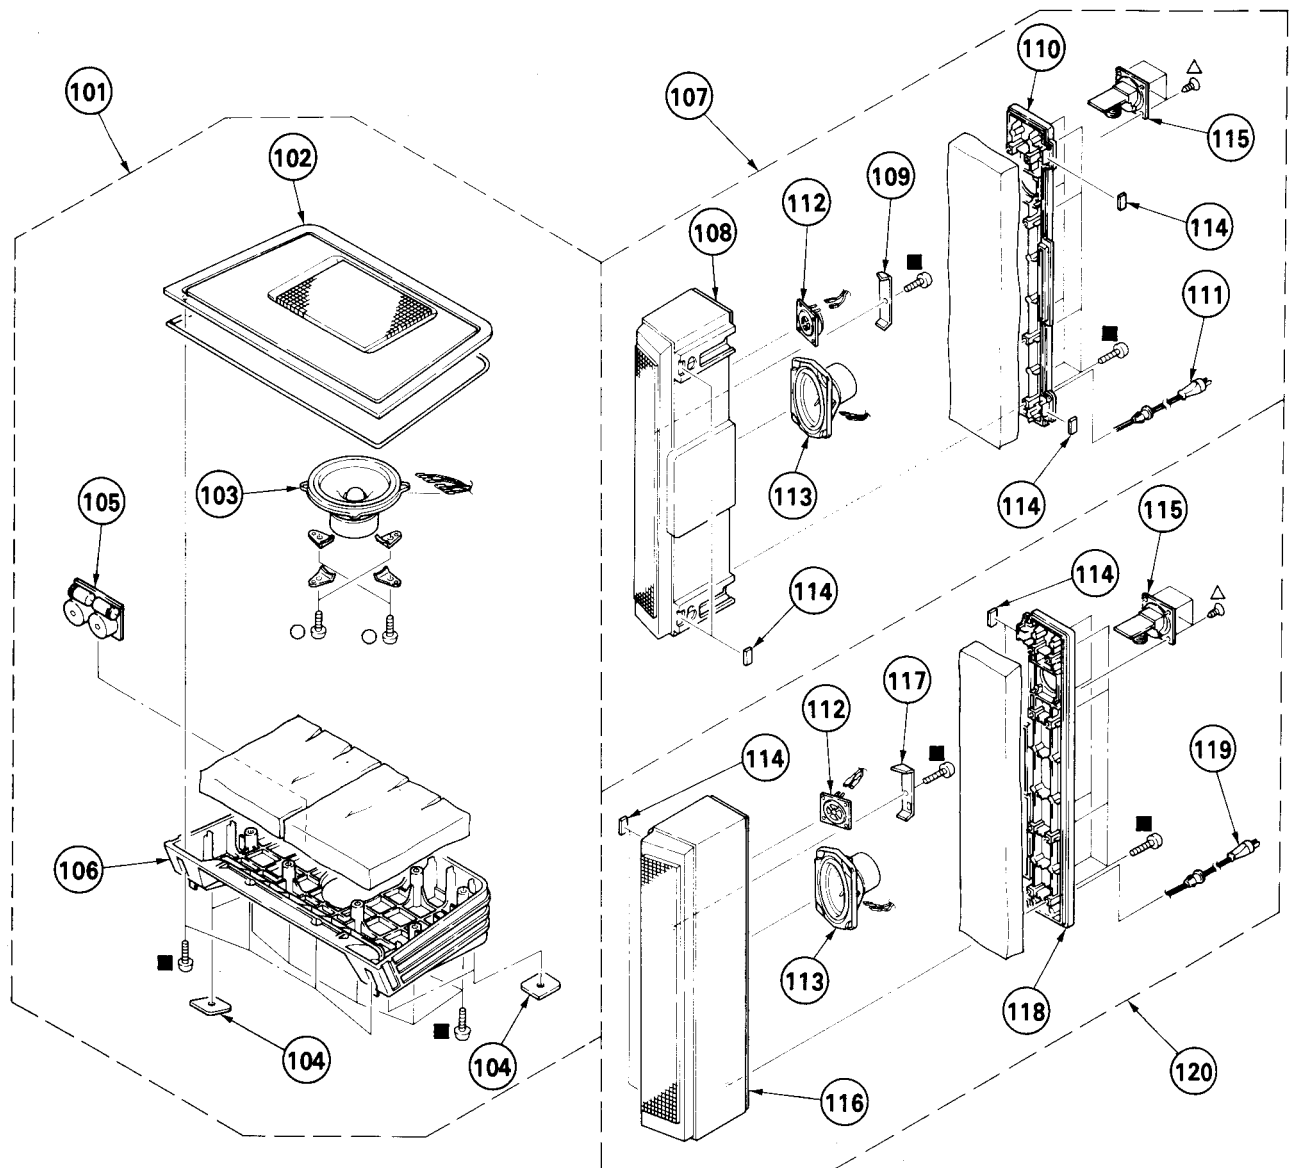

REF.NO.	PART NO.	DESCRIPTION	REMARK	REF.NO.	PART NO.	DESCRIPTION	REMARK
101	*A-1678-001-A	BOX ASSY, WOOFER		102-106	111	CORD, SPEAKER (WITH PLUG)	
102	X-4200-004-2	BOARD ASSY, BAFFLE			112	SPEAKER	
103	1-544-192-11	SPEAKER			113	SPEAKER	
104	4-200-009-01	CUSHION, FOOT			114	CUSHION, FOOT	
105	1-236-549-11	NETWORK, DIVIDING			115	1-236-510-21	NETWORK, DIVIDING
106	4-200-027-01	BOX, WOOFER			116	X-4201-004-1	BOX ASSY (RIGHT), SIDE (KV-E2521D ONLY)
107	*A-1678-012-A	BOX ASSY (LEFT), SPEAKER			X-4200-005-1	BOX ASSY (R), SIDE (KV-E2921D ONLY)	
		(KV-E2521D ONLY)			117	*4-200-004-02	BRACKET (R), SPEAKER
	*A-1678-005-A	BOX ASSY (LEFT), SPEAKER			118	4-201-006-01	PANEL (RIGHT), REAR (KV-E2521D ONLY)
		(KV-E2921D ONLY)			119	4-200-029-01	PANEL (R), REAR (KV-E2921D ONLY)
108	X-4201-003-1	BOX ASSY (LEFT), SIDE (KV-E2521D ONLY)			120	1-575-024-11	CORD, SPEAKER (WITH PLUG)
	X-4200-006-1	BOX ASSY (L), SIDE (KV-E2921D ONLY)				*A-1678-010-A	BOX ASSY (RIGHT), SPEAKER
109	*4-200-003-02	BRACKET (L), SPEAKER					112-119
110	4-201-007-01	PANEL (LEFT), REAR (KV-E2521D ONLY)					(KV-E2521D ONLY)
	4-200-030-01	PANEL (L), REAR (KV-E2921D ONLY)				*A-1678-003-A	BOX ASSY (RIGHT), SPEAKER
							112-119
							(KV-E2921D ONLY)

B1

SECTION 7 ELECTRICAL PARTS LIST

NOTE:

The components identified by shading and mark **△** are critical for safety.
Replace only with part number specified.

• Items marked " * " are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.

• All variable and adjustable resistors have characteristic curve B, unless otherwise noted.

When indicating parts by reference number, please include the board name.

CAPACITORS

• MF : μ F, PF : μ F

COILS

• MMH : mH, UH : μ H

RESISTORS

• All resistors are in ohms
• F : nonflammable

REF.NO.	PART NO.	DESCRIPTION	REMARK	REF.NO.	PART NO.	DESCRIPTION	REMARK
A-1621-013-A	B1 BOARD, COMPLETE (KV-E2521D ONLY)	*****		C344	1-124-791-11	ELECT 1MF	20% 50V
A-1621-015-A	B1 BOARD, COMPLETE (KV-E2921D ONLY)	*****		C345	1-137-094-11	FILM 0.047MF	10% 100V
*1-565-393-11	CONNECTOR, BOARD TO BOARD			C346	1-137-033-11	FILM 0.33MF	10% 100V
*1-568-878-51	PIN, CONNECTOR 3P (KV-E2921D ONLY)			C347	1-137-098-11	FILM 0.1MF	10% 100V
*1-568-881-51	PIN, CONNECTOR 6P			C348	1-137-102-11	FILM 0.022MF	10% 250V
<CAPACITOR>				C349	1-137-102-11	FILM 0.022MF	10% 250V
C301	1-137-031-11	FILM 0.22MF	10% 100V	C350	1-124-902-00	ELECT 0.47MF	20% 50V
C302	1-137-031-11	FILM 0.22MF	10% 100V	C351	1-137-102-11	FILM 0.022MF	10% 250V
C303	1-124-122-11	ELECT 100MF	20% 50V	C352	1-164-232-11	CERAMIC CHIP 0.01MF	50V
C304	1-137-031-11	FILM 0.22MF	10% 100V	C353	1-126-101-11	ELECT 100MF	20% 16V
C305	1-164-232-11	CERAMIC CHIP 0.01MF	10% 50V	C354	1-164-232-11	CERAMIC CHIP 0.01MF	50V
C306	1-124-902-00	ELECT 0.47MF	20% 50V	C355	1-126-101-11	ELECT 100MF	20% 16V
C307	1-124-902-00	ELECT 0.47MF	20% 50V	C357	1-164-232-11	CERAMIC CHIP 0.01MF	50V
C308	1-124-902-00	ELECT 0.47MF	20% 50V	C358	1-164-232-11	CERAMIC CHIP 0.01MF	50V
C309	1-124-902-00	ELECT 0.47MF	20% 50V	C360	1-164-232-11	CERAMIC CHIP 0.01MF	50V
C310	1-137-098-11	FILM 0.1MF	10% 100V	C361	1-164-232-11	CERAMIC CHIP 0.01MF	50V
C311	1-137-098-11	FILM 0.1MF	10% 100V	C363	1-163-033-00	CERAMIC CHIP 0.022MF	50V
C312	1-124-902-00	ELECT 0.47MF	20% 50V	C371	1-164-232-11	CERAMIC CHIP 0.01MF	50V
C313	1-124-902-00	ELECT 0.47MF	20% 50V	C372	1-124-477-11	ELECT 47MF	20% 16V
C314	1-124-902-00	ELECT 0.47MF	20% 50V	C373	1-124-477-11	ELECT 47MF	20% 16V
C315	1-124-791-11	ELECT 1MF	20% 50V	C374	1-163-090-00	CERAMIC CHIP 7PF	0.25PF 50V
C316	1-124-927-11	ELECT 4.7MF	20% 50V	C375	1-163-090-00	CERAMIC CHIP 7PF	0.25PF 50V
C317	1-164-232-11	CERAMIC CHIP 0.01MF	50V	C376	1-124-034-51	ELECT 33MF	20% 16V
C318	1-124-927-11	ELECT 4.7MF	20% 50V	C377	1-124-119-00	ELECT 330MF	20% 16V
C319	1-124-927-11	ELECT 4.7MF	20% 50V	C378	1-124-034-51	ELECT 33MF	20% 16V
C320	1-124-910-11	ELECT 47MF	20% 50V	C379	1-163-090-00	CERAMIC CHIP 7PF	0.25PF 50V
C321	1-137-027-11	FILM 0.82MF	10% 63V	C380	1-163-090-00	CERAMIC CHIP 7PF	0.25PF 50V
C322	1-163-077-00	CERAMIC CHIP 0.1MF	50V	C381	1-163-105-00	CERAMIC CHIP 33PF	5% 50V
C323	1-164-232-11	CERAMIC CHIP 0.01MF	50V	C382	1-163-121-00	CERAMIC CHIP 150PF	5% 50V
C324	1-164-232-11	CERAMIC CHIP 0.01MF	50V	C383	1-163-197-00	CERAMIC CHIP 470PF	5% 50V
C325	1-163-038-00	CERAMIC CHIP 0.1MF	25V	C384	1-163-103-00	CERAMIC CHIP 27PF	5% 50V
C326	1-124-910-11	ELECT 47MF	20% 50V	C385	1-163-093-00	CERAMIC CHIP 10PF	5% 50V
C327	1-124-910-11	ELECT 47MF	20% 50V	C386	1-163-117-00	CERAMIC CHIP 100PF	5% 50V
C328	1-163-038-00	CERAMIC CHIP 0.1MF	25V	C387	1-163-113-00	CERAMIC CHIP 68PF	5% 50V
C329	1-163-123-00	CERAMIC CHIP 180PF	5% 50V	C388	1-164-232-11	CERAMIC CHIP 0.01MF	50V
C330	1-163-125-00	CERAMIC CHIP 220PF	5% 50V	C389	1-163-097-00	CERAMIC CHIP 15PF	5% 50V
C331	1-137-098-11	FILM 0.1MF	10% 100V	C390	1-123-875-11	ELECT 10MF	20% 50V
C332	1-137-098-11	FILM 0.1MF	10% 100V	C391	1-123-875-11	ELECT 10MF	20% 50V
C333	1-163-103-00	CERAMIC CHIP 27PF	5% 50V	C392	1-123-875-11	ELECT 10MF	20% 50V
C335	1-163-119-00	CERAMIC CHIP 120PF	5% 50V	C393	1-126-101-11	ELECT 100MF	20% 16V
C337	1-163-103-00	CERAMIC CHIP 27PF	5% 50V	C394	1-126-101-11	ELECT 100MF	20% 16V
C338	1-137-102-11	FILM 0.022MF	10% 250V	C395	1-126-101-11	ELECT 100MF	20% 16V
C339	1-164-232-11	CERAMIC CHIP 0.01MF	50V	C396	1-126-101-11	ELECT 100MF	20% 16V
C340	1-126-103-11	ELECT 470MF	20% 16V	C397	1-124-791-11	ELECT 1MF	20% 50V
C341	1-164-232-11	CERAMIC CHIP 0.01MF	50V	C398	1-123-875-11	ELECT 10MF	20% 50V
C342	1-124-791-11	ELECT 1MF	20% 50V	C399	1-163-038-00	CERAMIC CHIP 0.1MF	25V
C343	1-163-038-00	CERAMIC CHIP 0.1MF	25V	C1301	1-163-105-00	CERAMIC CHIP 33PF	5% 50V
				C1302	1-163-235-11	CERAMIC CHIP 22PF	5% 50V
				C1303	1-163-038-00	CERAMIC CHIP 0.1MF	25V
				C1304	1-123-875-11	ELECT 10MF	20% 50V
				C1305	1-126-101-11	ELECT 100MF	20% 16V

B1

— 67 —

B1

REF.NO.	PART NO.	DESCRIPTION	REMARK	REF.NO.	PART NO.	DESCRIPTION	REMARK
Q329	8-729-216-22	TRANSISTOR 2SA1162-G		R312	1-216-019-00	METAL GLAZE 56 5%	1/10W
Q330	8-729-901-78	TRANSISTOR 2SC2412K-R		R313	1-216-019-00	METAL GLAZE 56 5%	1/10W
Q331	8-729-216-22	TRANSISTOR 2SA1162-G		R314	1-216-019-00	METAL GLAZE 56 5%	1/10W
Q332	8-729-216-22	TRANSISTOR 2SA1162-G		R315	1-216-023-00	METAL GLAZE 82 5%	1/10W
Q333	8-729-901-00	TRANSISTOR DTC124EK		R316	1-216-081-00	METAL GLAZE 22K 5%	1/10W
Q334	8-729-901-00	TRANSISTOR DTC124EK		R317	1-216-033-00	METAL GLAZE 220 5%	1/10W
Q335	8-729-901-78	TRANSISTOR 2SC2412K-R		R318	1-216-073-00	METAL GLAZE 10K 5%	1/10W
Q336	8-729-901-78	TRANSISTOR 2SC2412K-R		R319	1-216-073-00	METAL GLAZE 10K 5%	1/10W
Q337	8-729-901-78	TRANSISTOR 2SC2412K-R		R320	1-216-198-00	METAL GLAZE 1K 5%	1/8W
Q338	8-729-216-22	TRANSISTOR 2SA1162-G		R321	1-216-073-00	METAL GLAZE 10K 5%	1/10W
Q339	8-729-901-78	TRANSISTOR 2SC2412K-R		R322	1-216-073-00	METAL GLAZE 10K 5%	1/10W
Q340	8-729-901-78	TRANSISTOR 2SC2412K-R		R323	1-216-057-00	METAL GLAZE 2.2K 5%	1/10W
Q341	8-729-901-78	TRANSISTOR 2SC2412K-R		R324	1-216-049-00	METAL GLAZE 1K 5%	1/10W
Q342	8-729-901-78	TRANSISTOR 2SC2412K-R		R325	1-216-033-00	METAL GLAZE 220 5%	1/10W
Q343	8-729-901-78	TRANSISTOR 2SC2412K-R		R326	1-216-009-00	METAL GLAZE 22 5%	1/10W
Q344	8-729-901-78	TRANSISTOR 2SC2412K-R		R327	1-216-009-00	METAL GLAZE 22 5%	1/10W
Q345	8-729-901-78	TRANSISTOR 2SC2412K-R		R328	1-216-009-00	METAL GLAZE 22 5%	1/10W
Q346	8-729-901-78	TRANSISTOR 2SC2412K-R		R329	1-216-031-00	METAL GLAZE 180 5%	1/10W
Q347	8-729-901-78	TRANSISTOR 2SC2412K-R		R330	1-216-031-00	METAL GLAZE 180 5%	1/10W
Q348	8-729-901-00	TRANSISTOR DTC124EK		R331	1-216-031-00	METAL GLAZE 180 5%	1/10W
Q350	8-729-901-78	TRANSISTOR 2SC2412K-R		R332	1-216-182-00	METAL GLAZE 220 5%	1/8W
Q352	8-729-216-22	TRANSISTOR 2SA1162-G		R333	1-216-033-00	METAL GLAZE 220 5%	1/10W
Q353	8-729-901-78	TRANSISTOR 2SC2412K-R		R335	1-216-101-00	METAL GLAZE 150K 5%	1/10W
Q354	8-729-901-78	TRANSISTOR 2SC2412K-R		R336	1-216-073-00	METAL GLAZE 10K 5%	1/10W
Q355	8-729-901-78	TRANSISTOR 2SC2412K-R		R337	1-216-093-00	METAL GLAZE 68K 5%	1/10W
Q356	8-729-216-22	TRANSISTOR 2SA1162-G		R338	1-216-085-00	METAL GLAZE 33K 5%	1/10W
Q357	8-729-216-22	TRANSISTOR 2SA1162-G		R339	1-216-061-00	METAL GLAZE 3.3K 5%	1/10W
Q358	8-729-901-78	TRANSISTOR 2SC2412K-R		R340	1-216-103-00	METAL GLAZE 180K 5%	1/10W
Q359	8-729-216-22	TRANSISTOR 2SA1162-G		R341	1-216-115-00	METAL GLAZE 560K 5%	1/10W
Q360	8-729-901-78	TRANSISTOR 2SC2412K-R		R342	1-216-069-00	METAL GLAZE 6.8K 5%	1/10W
Q361	8-729-901-78	TRANSISTOR 2SC2412K-R		R343	1-216-043-00	METAL GLAZE 560 5%	1/10W
Q362	8-729-901-78	TRANSISTOR 2SC2412K-R			1-216-057-00	METAL GLAZE 2.2K 5%	(KV-E2521D ONLY) 1/10W
Q363	8-729-901-78	TRANSISTOR 2SC2412K-R		R344	1-216-089-00	METAL GLAZE 47K 5%	(KV-E2921D ONLY) 1/10W
Q364	8-729-216-22	TRANSISTOR 2SA1162-G		R345	1-216-097-00	METAL GLAZE 100K 5%	1/10W
Q365	8-729-216-22	TRANSISTOR 2SA1162-G		R346	1-216-033-00	METAL GLAZE 220 5%	1/10W
Q366	8-729-901-78	TRANSISTOR 2SC2412K-R		R347	1-216-121-00	METAL GLAZE 1M 5%	1/10W
Q367	8-729-901-78	TRANSISTOR 2SC2412K-R		R348	1-216-001-00	METAL GLAZE 10 5%	1/10W
Q368	8-729-901-78	TRANSISTOR 2SC2412K-R		R349	1-216-001-00	METAL GLAZE 10 5%	1/10W
Q369	8-729-901-78	TRANSISTOR 2SC2412K-R		R350	1-216-184-00	METAL GLAZE 270 5%	1/8W
Q370	8-729-901-78	TRANSISTOR 2SC2412K-R		R351	1-216-184-00	METAL GLAZE 270 5%	1/8W
Q371	8-729-901-78	TRANSISTOR 2SC2412K-R		R352	1-216-069-00	METAL GLAZE 6.8K 5%	1/10W
Q372	8-729-901-78	TRANSISTOR 2SC2412K-R		R353	1-216-073-00	METAL GLAZE 10K 5%	1/10W
Q373	8-729-901-00	TRANSISTOR DTC124EK		R354	1-216-037-00	METAL GLAZE 330 5%	1/10W
Q1301	8-729-901-00	TRANSISTOR DTC124EK		R355	1-216-033-00	METAL GLAZE 220 5%	1/10W
Q1302	8-729-901-78	TRANSISTOR 2SC2412K-R		R356	1-216-049-00	METAL GLAZE 1K 5%	1/10W
Q1303	8-729-901-00	TRANSISTOR DTC124EK		R357	1-216-061-00	METAL GLAZE 3.3K 5%	1/10W
				R358	1-216-037-00	METAL GLAZE 330 5%	1/10W
				R359	1-216-041-00	METAL GLAZE 470 5%	1/10W
				R361	1-216-065-00	METAL GLAZE 4.7K 5%	1/10W
				R362	1-216-065-00	METAL GLAZE 4.7K 5%	1/10W
				R363	1-216-069-00	METAL GLAZE 6.8K 5%	1/10W
				R364	1-216-033-00	METAL GLAZE 220 5%	1/10W
				R365	1-216-035-00	METAL GLAZE 270 5%	1/10W
				R366	1-216-069-00	METAL GLAZE 6.8K 5%	1/10W
				R367	1-216-069-00	METAL GLAZE 6.8K 5%	1/10W
				R368	1-216-071-00	METAL GLAZE 8.2K 5%	1/10W
				R369	1-216-071-00	METAL GLAZE 8.2K 5%	1/10W
				R370	1-216-097-00	METAL GLAZE 100K 5%	1/10W
				R371	1-216-049-00	METAL GLAZE 1K 5%	1/10W
				R372	1-216-033-00	METAL GLAZE 220 5%	1/10W
				R373	1-216-061-00	METAL GLAZE 3.3K 5%	1/10W
<RESISTOR>							
JR302	1-216-295-00	METAL GLAZE 0 5%	1/10W				
JR304	1-216-296-00	METAL GLAZE 0 5%	1/8W				
JR305	1-216-295-00	METAL GLAZE 0 5%	1/10W				
JR390	1-216-295-00	METAL GLAZE 0 5%	1/10W				
JR391	1-216-295-00	METAL GLAZE 0 5%	1/10W				
R301	1-216-033-00	METAL GLAZE 220 5%	1/10W				
R302	1-216-033-00	METAL GLAZE 220 5%	1/10W				
R303	1-216-033-00	METAL GLAZE 220 5%	1/10W				
R304	1-216-081-00	METAL GLAZE 22K 5%	1/10W				
R305	1-216-057-00	METAL GLAZE 2.2K 5%	1/10W				
R306	1-216-035-00	METAL GLAZE 270 5%	1/10W				
R307	1-216-097-00	METAL GLAZE 100K 5%	1/10W				
R309	1-216-025-00	METAL GLAZE 100 5%	1/10W				
R310	1-216-025-00	METAL GLAZE 100 5%	1/10W				
R311	1-216-025-00	METAL GLAZE 100 5%	1/10W				

REF. NO.	PART NO.	DESCRIPTION	REMARK	REF. NO.	PART NO.	DESCRIPTION	REMARK
R374	1-216-033-00	METAL GLAZE	220 5% 1/10W	R1339	1-216-039-00	METAL GLAZE	390 5% 1/10W
R375	1-216-043-00	METAL GLAZE	560 5% 1/10W	R1340	1-216-025-00	METAL GLAZE	100 5% 1/10W
R376	1-216-057-00	METAL GLAZE	2.2K 5% 1/10W	R1341	1-216-667-11	METAL CHIP	4.7K 0.50% 1/10W
R377	1-216-081-00	METAL GLAZE	22K 5% 1/10W	R1342	1-216-025-00	METAL GLAZE	100 5% 1/10W
R378	1-216-081-00	METAL GLAZE	22K 5% 1/10W	R1343	1-216-043-00	METAL GLAZE	560 5% 1/10W
R379	1-216-081-00	METAL GLAZE	22K 5% 1/10W	R1344	1-216-057-00	METAL GLAZE	2.2K 5% 1/10W
R380	1-216-073-00	METAL GLAZE	10K 5% 1/10W	R1345	1-216-077-00	METAL GLAZE	15K 5% 1/10W
R381	1-216-073-00	METAL GLAZE	10K 5% 1/10W	R1346	1-216-025-00	METAL GLAZE	100 5% 1/10W
R382	1-216-093-00	METAL GLAZE	68K 5% 1/10W	R1347	1-216-025-00	METAL GLAZE	100 5% 1/10W
R383	1-216-073-00	METAL GLAZE	10K 5% 1/10W	R1348	1-216-085-00	METAL GLAZE	33K 5% 1/10W
R384	1-216-093-00	METAL GLAZE	68K 5% 1/10W	R1349	1-216-075-00	METAL GLAZE	12K 5% 1/10W
R385	1-216-073-00	METAL GLAZE	10K 5% 1/10W	R1350	1-216-039-00	METAL GLAZE	390 5% 1/10W
R386	1-216-093-00	METAL GLAZE	68K 5% 1/10W	R1351	1-216-071-00	METAL GLAZE	8.2K 5% 1/10W
R387	1-216-065-00	METAL GLAZE	4.7K 5% 1/10W	R1352	1-216-041-00	METAL GLAZE	470 5% 1/10W
R388	1-216-053-00	METAL GLAZE	1.5K 5% 1/10W	R1353	1-216-065-00	METAL GLAZE	4.7K 5% 1/10W
R389	1-216-049-00	METAL GLAZE	1K 5% 1/10W	R1354	1-216-071-00	METAL GLAZE	8.2K 5% 1/10W
R390	1-216-049-00	METAL GLAZE	1K 5% 1/10W	R1355	1-216-045-00	METAL GLAZE	680 5% 1/10W
R391	1-216-097-00	METAL GLAZE	100K 5% 1/10W	R1356	1-216-055-00	METAL GLAZE	1.8K 5% 1/10W
R392	1-216-097-00	METAL GLAZE	100K 5% 1/10W	R1357	1-216-049-00	METAL GLAZE	1K 5% 1/10W
R393	1-216-097-00	METAL GLAZE	100K 5% 1/10W	R1358	1-216-081-00	METAL GLAZE	22K 5% 1/10W
R394	1-216-065-00	METAL GLAZE	4.7K 5% 1/10W	R1359	1-216-049-00	METAL GLAZE	1K 5% 1/10W
R395	1-216-097-00	METAL GLAZE	100K 5% 1/10W	R1360	1-216-049-00	METAL GLAZE	1K 5% 1/10W
R396	1-216-097-00	METAL GLAZE	100K 5% 1/10W	R1361	1-216-049-00	METAL GLAZE	1K 5% 1/10W
R397	1-216-053-00	METAL GLAZE	1.5K 5% 1/10W	R1362	1-216-055-00	METAL GLAZE	1.8K 5% 1/10W
R398	1-216-035-00	METAL GLAZE	270 5% 1/10W	R1363	1-216-039-00	METAL GLAZE	390 5% 1/10W
R399	1-216-085-00	METAL GLAZE	33K 5% 1/10W	R1364	1-216-049-00	METAL GLAZE	1K 5% 1/10W
R403	1-216-035-00	METAL GLAZE	270 5% 1/10W	R1365	1-216-059-00	METAL GLAZE	2.7K 5% 1/10W
R1301	1-216-065-00	METAL GLAZE	4.7K 5% 1/10W	R1366	1-216-083-00	METAL GLAZE	27K 5% 1/10W
R1302	1-216-089-00	METAL GLAZE	47K 5% 1/10W	R1367	1-216-059-00	METAL GLAZE	2.7K 5% 1/10W
R1303	1-216-089-00	METAL GLAZE	47K 5% 1/10W	R1368	1-216-033-00	METAL GLAZE	220 5% 1/10W
R1305	1-216-053-00	METAL GLAZE	1.5K 5% 1/10W	R1369	1-216-031-00	METAL GLAZE	180 5% 1/10W
R1308	1-216-295-00	METAL GLAZE	0 5% 1/10W	R1370	1-216-057-00	METAL GLAZE	2.2K 5% 1/10W
	1-216-065-00	METAL GLAZE	4.7K 5% 1/10W	R1371	1-216-031-00	METAL GLAZE	180 5% 1/10W
			(KV-E2521D ONLY)	R1372	1-216-047-00	METAL GLAZE	820 5% 1/10W
			(KV-F9221D ONLY)	R1373	1-216-035-00	METAL GLAZE	270 5% 1/10W
R1309	1-216-023-00	METAL GLAZE	82 5% 1/10W	R1374	1-216-202-00	METAL GLAZE	1.5K 5% 1/8W
R1310	1-216-047-00	METAL GLAZE	820 5% 1/10W	R1375	1-216-208-00	METAL GLAZE	2.7K 5% 1/8W
R1311	1-216-073-00	METAL GLAZE	10K 5% 1/10W	R1376	1-216-748-11	METAL GLAZE	39K 5% 1/10W
R1312	1-216-045-00	METAL GLAZE	680 5% 1/10W	R1377	1-216-748-11	METAL GLAZE	39K 5% 1/10W
R1313	1-216-043-00	METAL GLAZE	560 5% 1/10W	R1378	1-216-748-11	METAL GLAZE	39K 5% 1/10W
R1314	1-216-085-00	METAL GLAZE	33K 5% 1/10W	R1379	1-216-748-11	METAL GLAZE	39K 5% 1/10W
R1315	1-216-049-00	METAL GLAZE	1K 5% 1/10W	R1380	1-216-053-00	METAL GLAZE	1.5K 5% 1/10W
R1316	1-216-073-00	METAL GLAZE	10K 5% 1/10W	R1381	1-216-033-00	METAL GLAZE	220 5% 1/10W
R1319	1-216-049-00	METAL GLAZE	1K 5% 1/10W	R1382	1-216-089-00	METAL GLAZE	47K 5% 1/10W
R1320	1-216-641-11	METAL CHIP	390 0.50% 1/10W	R1383	1-216-053-00	METAL GLAZE	1.5K 5% 1/10W
R1321	1-216-073-00	METAL GLAZE	10K 5% 1/10W	R1384	1-216-089-00	METAL GLAZE	47K 5% 1/10W
R1322	1-216-067-00	METAL GLAZE	5.6K 5% 1/10W	R1385	1-216-055-00	METAL GLAZE	1.8K 5% 1/10W
R1323	1-216-643-11	METAL CHIP	470 0.50% 1/10W	R1386	1-216-047-00	METAL GLAZE	820 5% 1/10W
R1324	1-216-073-00	METAL GLAZE	10K 5% 1/10W	R1387	1-216-031-00	METAL GLAZE	180 5% 1/10W
R1325	1-216-037-00	METAL GLAZE	330 5% 1/10W	R1388	1-216-073-00	METAL GLAZE	10K 5% 1/10W
R1326	1-216-045-00	METAL GLAZE	680 5% 1/10W	R1389	1-216-073-00	METAL GLAZE	10K 5% 1/10W
R1327	1-216-029-00	METAL GLAZE	150 5% 1/10W	R1390	1-216-093-00	METAL GLAZE	68K 5% 1/10W
R1328	1-216-073-00	METAL GLAZE	10K 5% 1/10W	R1391	1-216-208-00	METAL GLAZE	2.7K 5% 1/8W
R1329	1-216-049-00	METAL GLAZE	1K 5% 1/10W	R1392	1-216-047-00	METAL GLAZE	820 5% 1/10W
R1330	1-216-081-00	METAL GLAZE	22K 5% 1/10W	R1393	1-216-047-00	METAL GLAZE	820 5% 1/10W
R1331	1-216-081-00	METAL GLAZE	22K 5% 1/10W	R1394	1-216-081-00	METAL GLAZE	22K 5% 1/10W
R1332	1-216-049-00	METAL GLAZE	1K 5% 1/10W	R1395	1-216-081-00	METAL GLAZE	22K 5% 1/10W
R1333	1-216-077-00	METAL GLAZE	15K 5% 1/10W	R1396	1-216-073-00	METAL GLAZE	10K 5% 1/10W
R1334	1-216-075-00	METAL GLAZE	12K 5% 1/10W	R1397	1-216-073-00	METAL GLAZE	10K 5% 1/10W
R1335	1-216-043-00	METAL GLAZE	560 5% 1/10W	R1398	1-216-001-00	METAL GLAZE	10 5% 1/10W
R1336	1-216-057-00	METAL GLAZE	2.2K 5% 1/10W	R1399	1-216-029-00	METAL GLAZE	150 5% 1/10W
R1337	1-216-657-11	METAL CHIP	1.8K 0.50% 1/10W				
R1338	1-216-085-00	METAL GLAZE	33K 5% 1/10W				

B1 F A C

The components identified by shading and mark Δ are critical for safety.
Replace only with part number specified.

REF.NO. PART NO. DESCRIPTION

<VARIABLE RESISTOR>

RV301 1-238-012-11 RES, ADJ, CARBON 1K

<CRYSTAL>

X301 1-567-307-11 OSCILLATOR, CRYSTAL
X302 1-567-131-00 OSCILLATOR, CRYSTAL

*1-638-390-11 F BOARD

*1-580-690-11 PIN, CONNECTOR (PC BOARD) 4P
*4-341-752-01 EYELET

<FUSE>

F1601 Δ 1-532-504-31 FUSE 4A/250V
1-533-230-11 HOLDER, FUSE; F1601

<SWITCH>

S1701 Δ 1-571-433-11 SWITCH, PUSH (AC POWER)

A-1632-022-A A BOARD, COMPLETE

*1-560-290-00 PLUG, CONNECTOR (2.5MM PITCH)
*1-564-881-11 PLUG, CONNECTOR 4P
*1-564-886-11 PLUG, CONNECTOR 9P
*1-565-393-11 CONNECTOR, BOARD TO BOARD
*1-565-503-11 CONNECTOR, BOARD TO BOARD 12P

<CAPACITOR>

Part No.	Description	Value	Tolerance	Voltage
C101	1-126-233-11 ELECT	22MF	20%	50V
C102	1-126-103-11 ELECT	470MF	20%	16V
C104	1-124-910-11 ELECT	47MF	20%	50V
C106	1-126-233-11 ELECT	22MF	20%	50V
C108	1-136-165-00 FILM	0.1MF	5%	50V
C109	1-163-133-00 CERAMIC CHIP	470PF	5%	50V
C111	1-124-925-11 ELECT	2.2MF	20%	50V
C115	1-124-925-11 ELECT	2.2MF	20%	50V
C127	1-124-122-11 ELECT	100MF	20%	50V
C128	1-124-910-11 ELECT	47MF	20%	50V
C129	1-124-910-11 ELECT	47MF	20%	50V
C138	1-136-165-00 FILM	0.1MF	5%	50V
C171	1-163-005-11 CERAMIC CHIP	470PF	10%	50V
C172	1-163-005-11 CERAMIC CHIP	470PF	10%	50V
C177	1-102-074-00 CERAMIC	0.001MF	10%	50V
C181	1-101-004-00 CERAMIC	0.01MF		50V

<IC>

IC103 8-759-979-62 IC PCF8574

<COIL>

Part No.	Description	Value
L100	1-410-683-31 INDUCTOR	560UH
L101	1-408-225-00 INDUCTOR	3.3UH
L102	1-408-413-00 INDUCTOR	22UH
L107	1-408-397-00 INDUCTOR	1UH

REMARK

REF.NO. PART NO.

DESCRIPTION

REMARK

<TRANSISTOR>

Part No.	Description	Value
Q113	8-729-901-78 TRANSISTOR	2SC2412K-R
Q114	8-729-901-78 TRANSISTOR	2SC2412K-R
Q115	8-729-901-78 TRANSISTOR	2SC2412K-R
Q116	8-729-901-78 TRANSISTOR	2SC2412K-R
Q125	8-729-900-89 TRANSISTOR	DTC144ES
Q126	8-729-901-06 TRANSISTOR	DTA144EK
Q181	8-729-901-78 TRANSISTOR	2SC2412K-R

<RESISTOR>

Part No.	Description	Value	Tolerance	Power
JR230	1-216-295-00 METAL GLAZE	0	5%	1/10W
JR252	1-216-296-00 METAL GLAZE	0	5%	1/8W
JR253	1-216-296-00 METAL GLAZE	0	5%	1/8W
JR255	1-216-296-00 METAL GLAZE	0	5%	1/8W
JR256	1-216-296-00 METAL GLAZE	0	5%	1/8W
JR257	1-216-296-00 METAL GLAZE	0	5%	1/8W
JR258	1-216-296-00 METAL GLAZE	0	5%	1/8W
R101	1-216-025-00 METAL GLAZE	100	5%	1/10W
R105	1-216-079-00 METAL GLAZE	18K	5%	1/10W
R107	1-216-081-00 METAL GLAZE	22K	5%	1/10W
R108	1-216-079-00 METAL GLAZE	18K	5%	1/10W
R110	1-249-429-11 CARBON	10K	5%	1/4W
R111	1-216-057-00 METAL GLAZE	2.2K	5%	1/10W
R116	1-216-023-00 METAL GLAZE	82	5%	1/10W
R118	1-216-085-00 METAL GLAZE	33K	5%	1/10W
R128	1-216-027-00 METAL GLAZE	120	5%	1/10W
R129	1-216-057-00 METAL GLAZE	2.2K	5%	1/10W
R130	1-216-057-00 METAL GLAZE	2.2K	5%	1/10W
R157	1-216-049-00 METAL GLAZE	1K	5%	1/10W
R158	1-249-409-11 CARBON	220	5%	1/4W
R159	1-249-409-11 CARBON	220	5%	1/4W
R161	1-216-089-00 METAL GLAZE	47K	5%	1/10W
R162	1-216-095-00 METAL GLAZE	82K	5%	1/10W
R163	1-216-095-00 METAL GLAZE	82K	5%	1/10W
R164	1-216-075-00 METAL GLAZE	12K	5%	1/10W
R165	1-216-075-00 METAL GLAZE	12K	5%	1/10W
R167	1-216-059-00 METAL GLAZE	2.7K	5%	1/10W
R168	1-216-089-00 METAL GLAZE	47K	5%	1/10W
R169	1-216-059-00 METAL GLAZE	2.7K	5%	1/10W
R181	1-216-049-00 METAL GLAZE	1K	5%	1/10W
R182	1-216-065-00 METAL GLAZE	4.7K	5%	1/10W
R193	1-216-073-00 METAL GLAZE	10K	5%	1/10W
R194	1-216-017-00 METAL GLAZE	47	5%	1/10W
R195	1-216-017-00 METAL GLAZE	47	5%	1/10W
R196	1-216-113-00 METAL GLAZE	470K	5%	1/10W

<TUNER>

TU101 Δ 1-465-301-11 TUNER, ET (UV-816(PLL))

<IF BLOCK>

VIF101 1-466-154-21 IF BLOCK (IFG-389S)

*A-1638-011-A C BOARD, COMPLETE (KV-E2521D ONLY)

*A-1638-013-A C BOARD, COMPLETE (KV-E2921D ONLY)

*1-506-371-00 PIN, CONNECTOR 2P
*1-508-765-00 PIN, CONNECTOR (5MM PITCH) 3P
*1-568-878-51 PIN, CONNECTOR 3P

REF.NO.	PART NO.	DESCRIPTION	REMARK	REF.NO.	PART NO.	DESCRIPTION	REMARK
*1-568-881-51	PIN, CONNECTOR 6P			R709	1-202-844-00	SOLID	330K 10% 1/2W
*4-379-160-01	COVER (REAR LID), CV			R710	1-215-465-00	METAL	68K 1% 1/6W
*4-379-167-01	COVER (MAIN), CV			R711	1-249-426-11	CARBON	5.6K 5% 1/4W
				R712	1-249-417-11	CARBON	1K 5% 1/4W
				R713	1-215-471-00	METAL	120K 1% 1/6W
<CAPACITOR>				R714	1-216-486-00	METAL OXIDE	8.2K 5% 3W F
C703	1-102-980-00	CERAMIC	270PF 5% 50V	R715	1-202-824-00	SOLID	3.3K 10% 1/2W
C704	1-102-116-00	CERAMIC	680PF 10% 50V	R716	1-249-409-11	CARBON	220 5% 1/4W
C705	1-102-978-00	CERAMIC	220PF 5% 50V	R717	1-249-415-11	CARBON	680 5% 1/4W
C706	1-102-116-00	CERAMIC	680PF 10% 50V	R718	1-202-814-11	SOLID	33K 10% 1/2W
C707	1-162-116-00	CERAMIC	680PF 10% 2KV	R719	1-249-401-11	CARBON	47 5% 1/4W
C708	1-162-114-00	CERAMIC	0.0047MF 2KV	R720	1-249-423-11	CARBON	3.3K 5% 1/4W
C709	1-102-116-00	CERAMIC	680PF 10% 50V	R721	1-202-842-11	SOLID	220K 10% 1/2W
C710	1-123-947-00	ELECT	10MF 20% 250V	R722	1-202-848-00	SOLID	680K 10% 1/2W
C711	1-101-880-00	CERAMIC	47PF 5% 50V	R723	1-249-417-11	CARBON	1K 5% 1/4W
C712	1-102-980-00	CERAMIC	270PF 5% 50V	R724	1-202-846-00	SOLID	470K 10% 1/2W
C714	1-124-360-00	ELECT	1000MF 20% 16V	R725	1-202-838-00	SOLID	100K 10% 1/2W
C716	1-162-622-11	CERAMIC	330PF 10% 400V	R726	1-202-824-00	SOLID	3.3K 10% 1/2W
C717	1-102-114-00	CERAMIC	470PF 10% 50V	R727	1-249-409-11	CARBON	220 5% 1/4W
C718	1-102-114-00	CERAMIC	470PF 10% 50V	R728	1-216-347-11	METAL OXIDE	0.68 5% 1W F
C719	1-102-114-00	CERAMIC	470PF 10% 50V	R729	1-249-416-11	CARBON	820 5% 1/4W
<DIODE>				R730	1-249-401-11	CARBON	47 5% 1/4W
D701	8-719-110-14	DIODE RD9.1ES-B3		R731	1-249-423-11	CARBON	3.3K 5% 1/4W
D702	8-719-911-19	DIODE 1SS119		R732	1-249-415-11	CARBON	680 5% 1/4W
D703	8-719-911-19	DIODE 1SS119		R733	1-249-415-11	CARBON	680 5% 1/4W
D704	8-719-911-19	DIODE 1SS119		R734	1-249-405-11	CARBON	100 5% 1/4W
D705	8-719-911-19	DIODE 1SS119		R735	1-215-493-00	METAL	1M 1% 1/6W
D706	8-719-911-19	DIODE 1SS119		R736	1-216-486-00	METAL OXIDE	8.2K 5% 3W F
D707	8-719-911-19	DIODE 1SS119		R737	1-215-491-00	METAL	820K 1% 1/6W (KV-E2521D ONLY)
D708	8-719-911-19	DIODE 1SS119			1-215-485-00	METAL	470K 1% 1/6W (KV-E2921D ONLY)
D709	8-719-911-19	DIODE 1SS119		R739	1-249-417-11	CARBON	1K 5% 1/4W
D710	8-719-911-19	DIODE 1SS119					
D711	8-719-300-33	DIODE RU-3AM					
D713	8-719-911-19	DIODE 1SS119					
<JACK>							
J701	1-526-990-11	SOCKET, PICTURE TUBE					
<COIL>							
L704	1-410-878-11	INDUCTOR	33UH				
<TRANSISTOR>							
Q702	8-729-119-78	TRANSISTOR 2SC2785-HFE					
Q703	8-729-906-70	TRANSISTOR BF871					
Q704	8-729-200-17	TRANSISTOR 2SA1091-0					
Q705	8-729-119-78	TRANSISTOR 2SC2785-HFE					
Q706	8-729-906-70	TRANSISTOR BF871					
Q707	8-729-200-17	TRANSISTOR 2SA1091-0					
Q708	8-729-119-78	TRANSISTOR 2SC2785-HFE					
Q709	8-729-906-70	TRANSISTOR BF871					
Q710	8-729-200-17	TRANSISTOR 2SA1091-0					
<RESISTOR>							
R704	1-216-486-00	METAL OXIDE	8.2K 5% 3W F				
R705	1-202-824-00	SOLID	3.3K 10% 1/2W				
R706	1-249-409-11	CARBON	220 5% 1/4W				
R707	1-249-412-11	CARBON	390 5% 1/4W				
R708	1-249-401-11	CARBON	47 5% 1/4W				

The components identified by shading and mark **Δ** are critical for safety. Replace only with part number specified.

D

REF.NO.	PART NO.	DESCRIPTION	REMARK	REF.NO.	PART NO.	DESCRIPTION	REMARK
<CAPACITOR>				C525	1-163-117-00	CERAMIC CHIP 100PF	5% 50V
C002	1-163-205-00	CERAMIC CHIP 0.001MF	5% 50V	C526	1-163-101-00	CERAMIC CHIP 22PF	5% 50V
C003	1-124-925-11	ELECT 2.2MF	20% 50V	C527	1-137-098-11	FILM 0.1MF	10% 100V
C004	1-124-120-11	ELECT 220MF	20% 16V	C531	1-124-190-00	ELECT 680MF	10% 25V
C005	1-124-791-11	ELECT 1MF	20% 50V	C532	1-124-122-11	ELECT 100MF	20% 50V
C008	1-163-117-00	CERAMIC CHIP 100PF	5% 50V	C533	1-137-096-11	FILM 0.068MF	10% 100V
C009	1-163-117-00	CERAMIC CHIP 100PF	5% 50V	C534	1-124-120-11	ELECT 220MF	20% 16V
C010	1-124-120-11	ELECT 220MF	20% 16V	C536	1-131-365-00	TANTALUM 10MF	10% 16V
C011	1-164-232-11	CERAMIC CHIP 0.01MF	50V	C537	1-124-791-11	ELECT 1MF	20% 50V
C013	1-137-098-11	FILM 0.1MF	10% 100V	C538	1-108-680-11	MYLAR 0.001MF	10% 100V
C014	1-137-098-11	FILM 0.1MF	10% 100V	C539	1-163-129-00	CERAMIC CHIP 330PF	5% 50V
C015	1-124-902-00	ELECT 0.47MF	20% 50V	C540	1-163-009-11	CERAMIC CHIP 0.001MF	10% 50V
C016	1-163-141-00	CERAMIC CHIP 0.001MF	5% 50V	C592	1-124-122-11	ELECT 100MF	20% 50V
C017	1-137-098-11	FILM 0.1MF	10% 100V	C593	1-163-129-00	CERAMIC CHIP 330PF	5% 50V
C018	1-163-127-00	CERAMIC CHIP 270PF	5% 50V	C601 Δ	1-161-964-61	CERAMIC 0.0047MF	250V
C019	1-137-094-11	FILM 0.047MF	10% 100V	C602 Δ	1-161-964-61	CERAMIC 0.0047MF	250V
C021	1-163-117-00	CERAMIC CHIP 100PF	5% 50V	C603 Δ	1-161-964-61	CERAMIC 0.0047MF	250V
C023	1-163-117-00	CERAMIC CHIP 100PF	5% 50V	C604 Δ	1-125-318-11	ELECT (BLOCK) 220MF	20% 400V
C024	1-163-117-00	CERAMIC CHIP 100PF	5% 50V	C605	1-124-484-11	ELECT 220MF	20% 35V
C027	1-124-910-11	ELECT 47MF	20% 50V	C606	1-163-137-00	CERAMIC CHIP 680PF	5% 50V
C030	1-163-038-00	CERAMIC CHIP 0.1MF	25V	C607	1-137-028-11	FILM 1MF	10% 63V
C031	1-163-081-00	CERAMIC CHIP 0.22MF	25V	C608	1-124-927-11	ELECT 4.7MF	20% 50V
C032	1-163-081-00	CERAMIC CHIP 0.22MF	25V	C611	1-124-910-11	ELECT 47MF	20% 50V
C033	1-163-181-00	CERAMIC CHIP 100PF	5% 50V	C612	1-108-680-11	MYLAR 0.001MF	10% 100V
C034	1-123-875-11	ELECT 10MF	20% 50V	C613	1-136-539-11	FILM 0.0022MF	3% 2KV
C034	1-163-038-00	CERAMIC CHIP 0.1MF	25V	C614	1-102-030-00	CERAMIC 330PF	10% 500V
C251	1-124-791-11	ELECT 1MF	20% 50V	C615	1-128-142-11	ELECT 1500MF	20% 25V
C252	1-126-233-11	ELECT 22MF	20% 50V	C616	1-102-030-00	CERAMIC 330PF	10% 500V
C253	1-163-009-11	CERAMIC CHIP 0.001MF	10% 50V	C617	1-124-122-11	ELECT 100MF	20% 50V
C254	1-137-098-11	FILM 0.1MF	10% 100V	C618	1-162-115-00	CERAMIC 330PF	10% 2KV
C255	1-124-636-00	ELECT 3300MF	20% 25V	C619	1-128-320-51	ELECT 2200MF	20% 16V
C261	1-124-791-11	ELECT 1MF	20% 50V	C620	1-136-173-00	FILM 0.47MF	5% 50V
C262	1-126-233-11	ELECT 22MF	20% 50V	C621	1-124-347-00	ELECT 100MF	20% 160V
C263	1-163-009-11	CERAMIC CHIP 0.001MF	10% 50V	C622	1-128-320-51	ELECT 2200MF	20% 16V
C264	1-137-098-11	FILM 0.1MF	10% 100V	C623	1-124-910-11	ELECT 47MF	20% 50V
C265	1-124-564-11	ELECT 4700MF	20% 25V	C624	1-124-122-11	ELECT 100MF	20% 50V
C270	1-137-035-11	FILM 0.47MF	10% 100V	C625	1-124-360-00	ELECT 1000MF	20% 16V
C274	1-137-035-11	FILM 0.47MF	10% 100V	C626	1-124-907-11	ELECT 10MF	20% 50V
C501	1-124-927-11	ELECT 4.7MF	20% 50V	C627	1-163-009-11	CERAMIC CHIP 0.001MF	10% 50V
C502	1-124-927-11	ELECT 4.7MF	20% 50V	C631	1-124-927-11	ELECT 4.7MF	20% 50V
C503	1-137-049-11	FILM 0.015MF	10% 400V	C632	1-163-009-11	CERAMIC CHIP 0.001MF	10% 50V
C504	1-163-121-00	CERAMIC CHIP 150PF	5% 50V	C633	1-163-117-00	CERAMIC CHIP 100PF	5% 50V
C505	1-108-794-11	MYLAR 0.0015MF	5% 50V	C801	1-126-105-11	ELECT 1000MF	20% 35V
C506	1-137-102-11	FILM 0.022MF	10% 250V	C802	1-102-030-00	CERAMIC 330PF	10% 500V
C507	1-137-033-11	FILM 0.33MF	10% 100V	C804	1-123-948-00	ELECT 22MF	20% 250V
C508	1-137-102-11	FILM 0.022MF	10% 250V	C805	1-162-114-00	CERAMIC 0.0047MF	2KV
C509	1-137-098-11	FILM 0.1MF	10% 100V	C806	1-137-098-11	FILM 0.1MF	10% 100V
C510	1-161-959-00	CERAMIC 22PF	10% 500V	C807	1-106-395-00	MYLAR 0.15MF	10% 200V
C511	1-108-686-11	MYLAR 0.0033MF	10% 100V	C810	1-123-024-21	ELECT 33MF	160V
C512	1-137-098-11	FILM 0.1MF	10% 100V	C811	1-136-113-00	FILM 2MF	5% 200V
C513	1-163-125-00	CERAMIC CHIP 220PF	5% 50V	C812	1-124-634-11	ELECT 1MF	20% 250V
C514	1-137-031-11	FILM 0.22MF	10% 100V	C813	1-102-212-00	CERAMIC 820PF	10% 500V
C515	1-124-791-11	ELECT 1MF	20% 50V	C814 Δ	1-161-731-51	CERAMIC 0.001MF	10% 2KV
C516	1-108-680-11	MYLAR 0.001MF	10% 100V	C815	1-136-111-00	FILM 1MF	5% 200V
C517	1-124-252-00	ELECT 0.33MF	20% 50V		1-136-540-11	FILM 0.82MF	5% 200V
C518	1-124-902-00	ELECT 0.47MF	20% 50V				(KV-E2521D ONLY)
C519	1-136-173-00	FILM 0.47MF	5% 50V				(KV-E2921D ONLY)
	1-136-171-00	FILM 0.33MF	5% 50V	C817 Δ	1-136-565-11	FILM 0.015MF	3% 1.4KV
			(KV-E2921D ONLY)		Δ 1-136-591-11	FILM 0.017MF	3% 1.4KV
C520	1-164-161-11	CERAMIC CHIP 0.0022MF	10% 50V				(KV-E2921D ONLY)
C521	1-137-098-11	FILM 0.1MF	10% 100V	C818 Δ	1-129-721-51	FILM 0.039MF	10% 630V
C522	1-124-122-11	ELECT 100MF	20% 50V	C819 Δ	1-161-731-51	CERAMIC 0.001MF	10% 2KV
C523	1-108-680-11	MYLAR 0.001MF	10% 100V				
C524	1-108-798-11	MYLAR 0.0033MF	5% 50V				

The components identified by shading and mark Δ are critical for safety.
Replace only with part number specified.

D

REF.NO.	PART NO.	DESCRIPTION	REMARK	REF.NO.	PART NO.	DESCRIPTION	REMARK
C820	1-137-046-11	FILM	0.0082MF 10% 400V	D618	8-719-109-89	DIODE RD5.6ES-B2	
C821	Δ 1-162-116-51	CERAMIC	680PF 10% 2KV	D619	8-719-982-24	DIODE MTZJ-33A	
	Δ 1-162-134-51	CERAMIC	470PF 10% 2KV (KV-E2521D ONLY)	D620	8-719-800-76	DIODE ISS226	
C822	1-163-005-11	CERAMIC CHIP	470PF 10% 50V	D621	8-719-982-24	DIODE MTZJ-33A	
C823	1-137-043-11	FILM	0.0047MF 10% 400V	D622	8-719-911-19	DIODE ISS119	
C824	1-102-212-00	CERAMIC	820PF 10% 500V	D623	8-719-911-19	DIODE ISS119	
C825	1-137-102-11	FILM	0.022MF 10% 250V	D624	8-719-911-19	DIODE ISS119	
C1601	Δ 1-136-518-11	FILM	0.33MF 20% 300V	D630	8-719-921-91	DIODE MTZJ-15A	
C1602	Δ 1-136-519-11	FILM	0.47MF 20% 300V	D801	8-719-300-33	DIODE RU-3AM	
C1603	Δ 1-164-246-51	CERAMIC	0.0022MF 20% 400V (KV-E2921D ONLY)	D802	8-719-300-33	DIODE RU-3AM	
C1604	Δ 1-164-246-51	CERAMIC	0.0022MF 20% 400V (KV-E2521D ONLY)	D803	8-719-976-64	DIODE RGP02-17	
C1605	Δ 1-164-246-51	CERAMIC	0.0022MF 20% 400V	D804	8-719-911-55	DIODE U05G	
C1607	Δ 1-161-964-61	CERAMIC	0.0047MF 250V	D805	8-719-911-55	DIODE U05G	
<FILTER>				<IC>			
CF001	1-577-364-11	VIBRATOR, CERAMIC		IC001	8-759-515-80	IC SDA20560-A008	
CF501	1-567-888-11	OSCILLATOR, CERAMIC		IC002	8-759-208-06	IC TC4051BPHB	
<CONNECTOR>				IC003	8-759-945-58	IC RC4558P	
CND801	*1-508-784-00	PIN, CONNECTOR (5MM PITCH) 1P	(KV-E2921D ONLY)	IC005	8-759-748-56	IC SDA2546	
<DIODE>				IC251	8-759-988-94	IC TDA2050	
D003	8-719-911-19	DIODE ISS119			4-812-134-00	RIVET NYLON, 3.5; IC251	
D005	8-719-109-89	DIODE RD5.6ES-B2		IC261	8-759-988-94	IC TDA2050	
D006	8-719-982-24	DIODE MTZJ-33A			4-812-134-00	RIVET NYLON, 3.5; IC261	
D007	8-719-982-08	DIODE MTZJ-3.9B		IC501	8-759-970-73	IC TEA2028B	
D009	8-719-109-89	DIODE RD5.6ES-B2		IC502	8-759-944-57	IC TDA8170	
D010	8-719-921-54	DIODE MTZJ-6.2B		IC601	8-759-988-95	IC TEA2260	
D011	8-719-921-54	DIODE MTZJ-6.2B		IC604	8-759-510-52	IC TEA7605	
D012	8-719-911-19	DIODE ISS119		IC608	8-759-037-26	IC TYA7812CT	
D013	8-719-109-97	DIODE RD6.8ES-B2		<COIL>			
D271	8-719-921-88	DIODE MTZJ-13B		L501	1-408-225-00	INDUCTOR 3.3UH	
D272	8-719-911-19	DIODE ISS119		L601	*1-420-872-00	COIL, AIR CORE	
D501	8-719-911-19	DIODE ISS119		L602	1-410-396-41	FERRITE BEAD INDUCTOR	
D504	8-719-911-55	DIODE U05G		L603	1-410-396-41	FERRITE BEAD INDUCTOR	
D506	8-719-800-76	DIODE ISS226 (KV-E2521D ONLY)		L604	1-410-671-31	INDUCTOR 47UH	
D508	8-719-911-19	DIODE ISS119		L605	1-459-585-11	COIL (WITH CORE) (DRUM TYPE)	
D509	8-719-911-19	DIODE ISS119		L606	1-421-013-00	COIL (HORIZONTAL CHOKE) 25UH	
D511	8-719-911-55	DIODE U05G		L607	1-410-671-31	INDUCTOR 47UH	
D512	8-719-911-55	DIODE U05G		L801	1-459-087-00	COIL, HCC DUST CORE 3.9MMH (KV-E2921D ONLY)	
D543	8-719-010-34	DIODE UZ-4.7BSC		L803	1-459-104-00	COIL, DUST CORE	
D514	8-719-911-19	DIODE ISS119 (KV-E2921D ONLY)		L804	1-408-239-00	INDUCTOR 4.7MMH	
D515	8-719-911-19	DIODE ISS119 (KV-E2921D ONLY)		L805	1-459-755-11	COIL, HORIZONTAL LINEARITY (KV-E2521D ONLY)	
D601	Δ 8-719-510-63	DIODE D4SB60L-F			1-459-907-11	COIL, HORIZONTAL LINEARITY (KV-E2921D ONLY)	
D602	8-719-300-33	DIODE RU-3AM		L806	1-459-111-00	COIL, DRAM CORE (CDI) (KV-E2521D ONLY)	
D603	8-719-911-55	DIODE U05G			1-459-087-00	COIL, HCC DUST CORE 3.9MMH (KV-E2921D ONLY)	
D604	8-719-911-55	DIODE U05G		L809	*1-420-872-00	COIL, AIR CORE	
D605	8-719-911-55	DIODE U05G		L810	Δ 1-421-982-12	PMC (KV-E2521D ONLY)	
D606	8-719-300-33	DIODE RU-3AM			Δ 1-421-794-21	TRANSFORMER, FERRITE (PMT) (KV-E2921D ONLY)	
D607	8-719-300-33	DIODE RU-3AM		<TRANSFORMER>			
D608	8-719-300-33	DIODE RU-3AM		LF1601	Δ 1-421-866-12	LFT	
D609	8-719-982-24	DIODE MTZJ-33A		LF1602	Δ 1-421-776-11	LFT	
D610	8-719-300-59	DIODE CTU-12S		LF1603	Δ 1-421-862-11	LFT	
D611	8-719-900-26	DIODE ERD29-08J		T601	Δ 1-450-038-11	S.R.T (KV-E2521D ONLY)	
D612	8-719-300-59	DIODE CTU-12S					
D613	8-719-979-85	DIODE EGP20G					
D614	8-719-979-85	DIODE EGP20G					
D616	8-719-921-54	DIODE MTZJ-6.2B					
D617	8-719-911-19	DIODE ISS119					

The components identified by shading and mark **△** are critical for safety.
Replace only with part number specified.

D

REF.NO.	PART NO.	DESCRIPTION	REMARK	REF.NO.	PART NO.	DESCRIPTION	REMARK
T601	△ 1-450-037-11	S.R.T (KV-E2921D ONLY)		R015	1-216-061-00	METAL GLAZE 3.3K 5%	1/10W
T602	△ 1-424-277-11	TRANSFORMER, TRIGGER PULSE		R016	1-216-085-00	METAL GLAZE 33K 5%	1/10W
T801	△ 1-437-090-21	HDT		R017	1-216-748-11	METAL GLAZE 39K 5%	1/10W
T802	△ 1-439-416-11	TRANSFORMER ASSY, FLYBACK (UX-1600)		R018	1-216-095-00	METAL GLAZE 82K 5%	1/10W
<IC LINK>				R019	1-216-025-00	METAL GLAZE 100 5%	1/10W
PS601	△ 1-532-984-91	LINK, IC (ICP-N50) 2A		R020	1-216-025-00	METAL GLAZE 100 5%	1/10W
PS602	△ 1-532-984-91	LINK, IC (ICP-N50) 2A		R021	1-216-065-00	METAL GLAZE 4.7K 5%	1/10W
PS603	△ 1-532-679-91	LINK, IC (ICP-N15) 0.6A		R022	1-216-065-00	METAL GLAZE 4.7K 5%	1/10W
PS604	△ 1-532-984-91	LINK, IC (ICP-N50) 2A		R024	1-216-073-00	METAL GLAZE 10K 5%	1/10W
<TRANSISTOR>				R025	1-216-073-00	METAL GLAZE 10K 5%	1/10W
Q001	8-729-901-01	TRANSISTOR DTC144EK		R026	1-216-182-00	METAL GLAZE 220 5%	1/8W
Q002	8-729-901-01	TRANSISTOR DTC144EK		R027	1-216-025-00	METAL GLAZE 100 5%	1/10W
Q003	8-729-216-22	TRANSISTOR 2SA1162-G		R028	1-216-025-00	METAL GLAZE 100 5%	1/10W
Q004	8-729-216-22	TRANSISTOR 2SA1162-G		R029	1-216-073-00	METAL GLAZE 10K 5%	1/10W
Q005	8-729-901-01	TRANSISTOR DTC144EK		R030	1-216-073-00	METAL GLAZE 10K 5%	1/10W
Q006	8-729-901-01	TRANSISTOR DTC144EK		R031	1-216-081-00	METAL GLAZE 22K 5%	1/10W
Q007	8-729-901-78	TRANSISTOR 2SC2412K-R		R032	1-216-073-00	METAL GLAZE 10K 5%	1/10W
Q008	8-729-901-78	TRANSISTOR 2SC2412K-R		R033	1-216-073-00	METAL GLAZE 10K 5%	1/10W
Q009	8-729-901-78	TRANSISTOR 2SC2412K-R		R034	1-216-077-00	METAL GLAZE 15K 5%	1/10W
Q010	8-729-901-78	TRANSISTOR 2SC2412K-R		R035	1-216-081-00	METAL GLAZE 22K 5%	1/10W
Q251	8-729-901-78	TRANSISTOR 2SC2412K-R		R036	1-216-083-00	METAL GLAZE 27K 5%	1/10W
Q261	8-729-901-78	TRANSISTOR 2SC2412K-R		R037	1-216-069-00	METAL GLAZE 6.8K 5%	1/10W
Q271	8-729-901-78	TRANSISTOR 2SC2412K-R		R038	1-216-069-00	METAL GLAZE 6.8K 5%	1/10W
Q502	8-729-216-22	TRANSISTOR 2SA1162-G		R039	1-216-081-00	METAL GLAZE 22K 5%	1/10W
Q505	8-729-140-96	TRANSISTOR 2SD774-34		R040	1-216-077-00	METAL GLAZE 15K 5%	1/10W
Q506	8-729-140-97	TRANSISTOR 2SB734-34		R041	1-216-073-00	METAL GLAZE 10K 5%	1/10W
Q507	8-729-216-22	TRANSISTOR 2SA1162-G		R042	1-216-049-00	METAL GLAZE 1K 5%	1/10W
Q598	8-729-216-22	TRANSISTOR 2SA1162-G		R043	1-216-041-00	METAL GLAZE 470 5%	1/10W
Q601	8-729-122-03	TRANSISTOR 2SA1220A-P		R044	1-216-097-00	METAL GLAZE 100K 5%	1/10W
Q602	8-729-209-02	TRANSISTOR 2SD1548-LB		R045	1-216-061-00	METAL GLAZE 3.3K 5%	1/10W
Q603	8-729-122-03	TRANSISTOR 2SA1220A-P		R046	1-216-095-00	METAL GLAZE 82K 5%	1/10W
Q604	8-729-216-22	TRANSISTOR 2SA1162-G		R047	1-216-073-00	METAL GLAZE 10K 5%	1/10W
Q605	8-729-901-78	TRANSISTOR 2SC2412K-R		R048	1-216-073-00	METAL GLAZE 10K 5%	1/10W
Q606	8-729-901-78	TRANSISTOR 2SC2412K-R		R049	1-216-073-00	METAL GLAZE 10K 5%	1/10W
Q607	8-729-920-92	TRANSISTOR 2SD2096-EF		R050	1-216-067-00	METAL GLAZE 5.6K 5%	1/10W
Q608	8-729-901-78	TRANSISTOR 2SC2412K-R		R051	1-216-041-00	METAL GLAZE 470 5%	1/10W
Q609	8-729-320-62	TRANSISTOR 2SD789-34		R052	1-216-049-00	METAL GLAZE 1K 5%	1/10W
Q801	8-729-901-78	TRANSISTOR 2SC2412K-R		R053	1-216-049-00	METAL GLAZE 1K 5%	1/10W
Q804	8-729-304-50	TRANSISTOR 2SD1941-06		R054	1-216-049-00	METAL GLAZE 1K 5%	1/10W
Q805	8-729-119-80	TRANSISTOR 2SC2688-LK		R055	1-216-037-00	METAL GLAZE 330 5%	1/10W
<RESISTOR>				R056	1-216-073-00	METAL GLAZE 10K 5%	1/10W
JR1	1-216-296-00	METAL GLAZE 0 5%	1/8W	R057	1-216-025-00	METAL GLAZE 100 5%	1/10W
JR3	1-216-296-00	METAL GLAZE 0 5%	1/8W	R058	1-216-049-00	METAL GLAZE 1K 5%	1/10W
JR4	1-216-296-00	METAL GLAZE 0 5%	1/8W	R059	1-216-049-00	METAL GLAZE 1K 5%	1/10W
JR5	1-216-295-00	METAL GLAZE 0 5%	1/10W	R060	1-216-049-00	METAL GLAZE 1K 5%	1/10W
JR6	1-216-295-00	METAL GLAZE 0 5%	1/10W	R061	1-216-065-00	METAL GLAZE 4.7K 5%	1/10W
JR7	1-216-296-00	METAL GLAZE 0 5%	1/8W	R062	1-216-049-00	METAL GLAZE 1K 5%	1/10W
JR8	1-216-295-00	METAL GLAZE 0 5%	1/10W	R063	1-216-049-00	METAL GLAZE 1K 5%	1/10W
R001	1-216-041-00	METAL GLAZE 470 5%	1/10W	R064	1-216-049-00	METAL GLAZE 1K 5%	1/10W
R002	1-216-041-00	METAL GLAZE 470 5%	1/10W	R065	1-216-049-00	METAL GLAZE 1K 5%	1/10W
R003	1-216-198-00	METAL GLAZE 1K 5%	1/8W	R066	1-216-049-00	METAL GLAZE 1K 5%	1/10W
R004	1-216-049-00	METAL GLAZE 1K 5%	1/10W	R067	1-216-073-00	METAL GLAZE 10K 5%	1/10W
R005	1-216-081-00	METAL GLAZE 22K 5%	1/10W	R068	1-216-174-00	METAL GLAZE 100 5%	1/8W
R006	1-216-073-00	METAL GLAZE 10K 5%	1/10W	R069	1-216-174-00	METAL GLAZE 100 5%	1/8W
R007	1-216-065-00	METAL GLAZE 4.7K 5%	1/10W	R070	1-216-198-00	METAL GLAZE 1K 5%	1/8W
R008	1-216-073-00	METAL GLAZE 10K 5%	1/10W	R071	1-216-198-00	METAL GLAZE 1K 5%	1/8W
R009	1-216-073-00	METAL GLAZE 10K 5%	1/10W	R072	1-216-222-00	METAL GLAZE 10K 5%	1/8W
R010	1-216-041-00	METAL GLAZE 470 5%	1/10W	R073	1-216-073-00	METAL GLAZE 10K 5%	1/10W
R011	1-216-065-00	METAL GLAZE 4.7K 5%	1/10W	R075	1-216-041-00	METAL GLAZE 470 5%	1/10W
R012	1-216-073-00	METAL GLAZE 10K 5%	1/10W	R076	1-216-073-00	METAL GLAZE 10K 5%	1/10W
R013	1-216-073-00	METAL GLAZE 10K 5%	1/10W	R078	1-216-198-00	METAL GLAZE 1K 5%	1/8W
R014	1-216-085-00	METAL GLAZE 33K 5%	1/10W	R079	1-216-073-00	METAL GLAZE 10K 5%	1/10W
				R080	1-216-073-00	METAL GLAZE 10K 5%	1/10W

REF.NO.	PART NO.	DESCRIPTION	REMARK	REF.NO.	PART NO.	DESCRIPTION	REMARK
R081	1-216-073-00	METAL GLAZE	10K 5% 1/10W	R534	1-216-119-00	METAL GLAZE	820K 5% 1/10W
R082	1-216-073-00	METAL GLAZE	10K 5% 1/10W	R535	1-249-749-00	CARBON	2.2M 5% 1/4W
R083	1-216-049-00	METAL GLAZE	1K 5% 1/10W	R536	1-216-129-00	METAL GLAZE	2.2M 5% 1/10W
R084	1-216-049-00	METAL GLAZE	1K 5% 1/10W	R537	1-216-083-00	METAL GLAZE	27K 5% 1/10W
R085	1-216-049-00	METAL GLAZE	1K 5% 1/10W	R538	1-216-101-00	METAL GLAZE	150K 5% 1/10W
R086	1-216-049-00	METAL GLAZE	1K 5% 1/10W	R539	1-216-101-00	METAL GLAZE	150K 5% 1/10W
R087	1-216-035-00	METAL GLAZE	270 5% 1/10W	R540	1-216-013-00	METAL GLAZE	33 5% 1/10W
R088	1-216-059-00	METAL GLAZE	2.7K 5% 1/10W	R541	1-216-091-00	METAL GLAZE	56K 5% 1/10W
R093	1-216-073-00	METAL GLAZE	10K 5% 1/10W	R542	1-216-308-00	METAL GLAZE	4.7 5% 1/10W
R094	1-216-073-00	METAL GLAZE	10K 5% 1/10W	R543	1-249-451-11	CARBON	2.2 5% 1/4W
R095	1-216-073-00	METAL GLAZE	10K 5% 1/10W	R544	1-247-745-11	CARBON	330 5% 1/2W
R096	1-216-073-00	METAL GLAZE	10K 5% 1/10W	R545	1-216-081-00	METAL GLAZE	22K 5% 1/10W
R098	1-216-049-00	METAL GLAZE	1K 5% 1/10W	R546	1-216-083-00	METAL GLAZE	27K 5% 1/10W
R251	1-216-065-00	METAL GLAZE	4.7K 5% 1/10W	R547	1-216-061-00	METAL GLAZE	3.3K 5% 1/10W
R252	1-216-039-00	METAL GLAZE	390 5% 1/10W	R548	1-216-349-00	METAL OXIDE	1 5% 1W F
R253	1-216-073-00	METAL GLAZE	10K 5% 1/10W	R549	1-216-454-11	METAL OXIDE	390 5% 2W F
R254	1-216-357-00	METAL OXIDE	4.7 5% 1W F	R550	1-216-095-00	METAL GLAZE	82K 5% 1/10W
R255	1-216-073-00	METAL GLAZE	10K 5% 1/10W	R551	1-216-129-00	METAL GLAZE	2.2M 5% 1/10W
R256	1-216-115-00	METAL GLAZE	560K 5% 1/10W	R553	1-215-869-11	METAL OXIDE	1K 5% 1W
R257	1-216-077-00	METAL GLAZE	15K 5% 1/10W	R554	1-216-037-00	METAL GLAZE	330 5% 1/10W
R258	1-215-869-11	METAL OXIDE	1K 5% 1W F	R555	1-216-129-00	METAL GLAZE	2.2M 5% 1/10W
R259	1-216-065-00	METAL GLAZE	4.7K 5% 1/10W	R556	1-216-025-00	METAL GLAZE	100 5% 1/10W
R261	1-216-065-00	METAL GLAZE	4.7K 5% 1/10W	R557	1-216-065-00	METAL GLAZE	4.7K 5% 1/10W
R262	1-216-039-00	METAL GLAZE	390 5% 1/10W	R558	1-216-113-00	METAL GLAZE	470K 5% 1/10W
R263	1-216-073-00	METAL GLAZE	10K 5% 1/10W	R559	1-216-069-00	METAL GLAZE	6.8K 5% 1/10W
R264	1-216-357-00	METAL OXIDE	4.7 5% 1W F	R560	1-216-037-00	METAL GLAZE	330 5% 1/10W
R265	1-216-073-00	METAL GLAZE	10K 5% 1/10W	R561	1-216-107-00	METAL GLAZE	270K 5% 1/10W
R266	1-216-115-00	METAL GLAZE	560K 5% 1/10W	R570	1-216-045-00	METAL GLAZE	680 5% (KV-E2921D ONLY)
R267	1-216-077-00	METAL GLAZE	15K 5% 1/10W	R591	1-216-047-00	METAL GLAZE	820 5% 1/10W
R268	1-215-869-11	METAL OXIDE	1K 5% 1W F	R592	1-216-049-00	METAL GLAZE	1K 5% 1/10W
R269	1-216-065-00	METAL GLAZE	4.7K 5% 1/10W	R593	1-216-053-00	METAL GLAZE	1.5K 5% 1/10W
R270	1-216-073-00	METAL GLAZE	10K 5% 1/10W	R594	1-216-071-00	METAL GLAZE	8.2K 5% 1/10W
R271	1-216-045-00	METAL GLAZE	680 5% 1/10W	R597	1-216-041-00	METAL GLAZE	470 5% 1/10W
R272	1-216-073-00	METAL GLAZE	10K 5% 1/10W	R598	1-215-900-11	METAL OXIDE	22K 5% 2W F
R273	1-216-073-00	METAL GLAZE	10K 5% 1/10W	R600	1-249-381-11	CARBON	1 5% 1/4W
R274	1-216-073-00	METAL GLAZE	10K 5% 1/10W	R601	1-216-353-00	METAL OXIDE	2.2 5% 1W F
R500	1-216-115-00	METAL GLAZE	560K 5% 1/10W	R603	1-216-469-11	METAL OXIDE	12 5% 3W F
R501	1-216-041-00	METAL GLAZE	470 5% 1/10W	R604	1-216-025-00	METAL GLAZE	100 5% 1/10W
R502	1-216-033-00	METAL GLAZE	220 5% 1/10W	R605	1-216-081-00	METAL GLAZE	22K 5% 1/10W
R503	1-216-035-00	METAL GLAZE	270 5% 1/10W	R606	1-216-051-00	METAL GLAZE	1.2K 5% 1/10W
R504	1-249-420-11	CARBON	1.8K 5% 1/4W	R607	1-216-065-00	METAL GLAZE	4.7K 5% 1/10W
R505	1-216-077-00	METAL GLAZE	15K 5% 1/10W		1-216-067-00	METAL GLAZE	5.6K 5% (KV-E2521D ONLY)
R506	1-216-071-00	METAL GLAZE	8.2K 5% 1/10W				1/10W (KV-E2921D ONLY)
R509	1-216-063-00	METAL GLAZE	3.9K 5% 1/10W	R608	1-216-488-11	METAL OXIDE	18K 5% 3W F
R510	1-216-067-00	METAL GLAZE	5.6K 5% 1/10W	R609	1-216-007-00	METAL GLAZE	18 5% 1/10W
R514	1-216-033-00	METAL GLAZE	220 5% 1/10W	R610	1-244-941-00	CARBON	680K 5% 1/2W
R515	1-216-061-00	METAL GLAZE	3.3K 5% 1/10W	R611	1-216-015-00	METAL GLAZE	39 5% 1/10W
R517	1-216-073-00	METAL GLAZE	10K 5% 1/10W	R612	1-216-049-00	METAL GLAZE	1K 5% 1/10W
R518	1-216-089-00	METAL GLAZE	47K 5% 1/10W	R613	1-216-097-00	METAL GLAZE	100K 5% 1/10W
R519	1-216-081-00	METAL GLAZE	22K 5% 1/10W	R614	1-205-758-11	WIREWOUND	100 10% 10W F
R520	1-216-037-00	METAL GLAZE	330 5% 1/10W	R616	1-216-099-00	METAL GLAZE	120K 5% 1/10W
R521	1-216-025-00	METAL GLAZE	100 5% 1/10W	R617	1-216-037-00	METAL GLAZE	330 5% 1/10W
R522	1-215-469-00	METAL	100K 1% 1/6W	R618	1-216-431-11	METAL OXIDE	560 5% 1W F
R523	1-216-049-00	METAL GLAZE	1K 5% 1/10W	R619	1-216-073-00	METAL GLAZE	10K 5% 1/10W
R524	1-216-057-00	METAL GLAZE	2.2K 5% 1/10W	R620	1-216-081-00	METAL GLAZE	22K 5% 1/10W
R525	1-216-049-00	METAL GLAZE	1K 5% 1/10W	R621	1-216-077-00	METAL GLAZE	15K 5% 1/10W
R526	1-249-409-11	CARBON	220 5% 1/4W F	R622	1-216-073-00	METAL GLAZE	10K 5% 1/10W
R527	1-216-077-00	METAL GLAZE	15K 5% 1/10W	R623	1-216-081-00	METAL GLAZE	22K 5% 1/10W
R528	1-216-031-00	METAL GLAZE	180 5% 1/10W	R624	1-216-067-00	METAL GLAZE	5.6K 5% 1/10W
R529	1-216-069-00	METAL GLAZE	6.8K 5% 1/10W	R625	1-215-865-11	METAL OXIDE	220 5% 1W F
R530	1-249-448-11	CARBON	1.2 5% 1/4W F				
R531	1-216-099-00	METAL GLAZE	120K 5% 1/10W				
R532	1-216-049-00	METAL GLAZE	1K 5% 1/10W				
R533	1-216-295-00	METAL GLAZE	0 5% 1/10W				

The components identified by shading and mark Δ are critical for safety. Replace only with part number specified.



REF.NO.	PART NO.	DESCRIPTION	REMARK
R626	1-216-037-00	METAL GLAZE 330 5% 1/10W	
R628	1-216-001-00	METAL GLAZE 10 5% 1/10W	
R629	1-216-037-00	METAL GLAZE 330 5% 1/10W	
R633	1-216-049-00	METAL GLAZE 1K 5% 1/10W	
R634	1-216-430-11	METAL OXIDE 390 5% 1W F	
R635	1-216-073-00	METAL GLAZE 10K 5% 1/10W	
R636	1-216-073-00	METAL GLAZE 10K 5% 1/10W	
R643	1-217-189-21	WIREWOUND 0.12 5% 2W F	
R651	1-216-025-00	METAL GLAZE 100 5% 1/10W	
R653	1-205-758-11	WIREWOUND 100 10% 10W F	
R802	1-249-443-11	CARBON 0.47 5% 1/4W F	
R805	1-249-448-11	CARBON 1.2 5% 1/4W F	
R806	1-216-093-00	METAL GLAZE 68K 5% 1/10W	
R807	1-215-869-11	METAL OXIDE 1K 5% 1W F	
R809	1-202-821-11	SOLID 1.8K 10% 1/2W	
R810	1-202-818-00	SOLID 1K 10% 1/2W	
R811	1-215-882-00	METAL OXIDE 22 5% 2W F	
R812	1-249-494-11	CARBON 68K 5% 1/2W (KV-E2521D ONLY)	
	1-247-281-00	CARBON 51K 5% 1/2W	
R815	1-215-884-11	METAL OXIDE 47 5% 2W F	
R816	1-215-868-00	METAL OXIDE 680 5% 1W F	
R817	1-216-049-00	METAL GLAZE 1K 5% 1/10W	
R820	1-249-403-11	CARBON 68 5% 1/4W	
R821	1-247-725-11	CARBON 10K 5% 1/4W F	
R822	1-217-778-11	FUSIBLE 1K 5% 1W F	
R825	1-216-345-11	METAL OXIDE 0.47 5% 1W F	
R826	1-216-097-00	METAL GLAZE 100K 5% 1/10W	
R827	1-216-073-00	METAL GLAZE 10K 5% 1/10W	
R828	1-216-059-00	METAL GLAZE 2.7K 5% 1/10W	
R829	1-216-051-00	METAL GLAZE 1.2K 5% 1/10W	
R831	1-249-451-11	CARBON 2.2 5% 1/4W	
R1601 Δ	1-246-513-75	CARBON 47K 5% 1/4W	
R1602 Δ	1-244-945-91	CARBON 1M 5% 1/2W	
R1603 Δ	1-217-328-11	WIREWOUND 2.7 10% 7W F	
R1604 Δ	1-246-513-75	CARBON 47K 5% 1/4W	
R1605 Δ	1-218-265-91	METAL GLAZE 8.2M 5% 1W	
R5501	1-216-073-00	METAL GLAZE 10K 5% 1/10W	
R5503	1-216-308-00	METAL GLAZE 4.7 5% 1/10W	
	1-216-001-00	METAL GLAZE 10 5% 1/10W (KV-E2521D ONLY)	
			(KV-E2921D ONLY)
R5504	1-216-121-00	METAL GLAZE 1M 5% 1/10W	
R5505	1-216-001-00	METAL GLAZE 10 5% 1/10W	
R5506	1-216-075-00	METAL GLAZE 12K 5% 1/10W	
			(KV-E2921D ONLY)
<VARIABLE RESISTOR>			
RV501	1-238-013-11	RES, ADJ, CARBON 2.2K	
RV502	1-238-016-11	RES, ADJ, CARBON 10K	
RV601	1-238-011-11	RES, ADJ, CARBON 470	
<SPARK GAP>			
SG801	1-519-422-11	GAP, SPARK	
<THERMISTOR>			
THP601 Δ	1-808-059-32	THERMISTOR, POSITIVE	

REF.NO.	PART NO.	DESCRIPTION	REMARK

	*1-634-193-11	VM BOARD (KV-E2921D ONLY)	

	*1-568-878-51	PIN, CONNECTOR 3P	
<CAPACITOR>			
C751	1-101-361-00	CERAMIC 150PF 5% 50V	
C752	1-108-629-11	MYLAR 0.018MF 10% 100V	
C753	1-137-047-11	FILM 0.01MF 10% 400V	
C754	1-102-980-00	CERAMIC 270PF 5% 50V	
C757	1-108-692-11	MYLAR 0.01MF 10% 200V	
C759	1-123-875-11	ELECT 10MF 20% 50V	
C760	1-124-917-11	ELECT 33MF 20% 50V	
C761	1-101-006-00	CERAMIC 0.047MF 50V	
C762	1-137-047-11	FILM 0.01MF 10% 400V	
<COIL>			
L751	1-408-413-00	INDUCTOR 22UH	
L770	1-410-665-31	INDUCTOR 15UH	
<TRANSISTOR>			
Q751	8-729-119-78	TRANSISTOR 2SC2785-HFE	
Q752	8-729-119-78	TRANSISTOR 2SC2785-HFE	
Q753	8-729-140-97	TRANSISTOR 2SB734-34	
Q754	8-729-140-96	TRANSISTOR 2SD774-34	
<RESISTOR>			
R751	1-249-418-11	CARBON 1.2K 5% 1/4W	
R752	1-249-426-11	CARBON 5.6K 5% 1/4W	
R753	1-249-414-11	CARBON 560 5% 1/4W	
R754	1-249-434-11	CARBON 27K 5% 1/4W	
R755	1-249-405-11	CARBON 100 5% 1/4W	
R756	1-249-419-11	CARBON 1.5K 5% 1/4W	
R757	1-249-405-11	CARBON 100 5% 1/4W	
R758	1-249-409-11	CARBON 220 5% 1/4W	
R760	1-249-411-11	CARBON 330 5% 1/4W	
R761	1-249-429-11	CARBON 10K 5% 1/4W	
R762	1-247-895-00	CARBON 470K 5% 1/4W	
R763	1-249-429-11	CARBON 10K 5% 1/4W	
R764	1-249-455-11	CARBON 4.7 5% 1/4W F	
R765	1-249-455-11	CARBON 4.7 5% 1/4W F	
R766	1-247-753-11	CARBON 1.2K 5% 1/2W	
R767	1-247-751-11	CARBON 820 5% 1/2W	
R768	1-215-887-00	METAL OXIDE 150 5% 2W F	
R769	1-212-889-00	FUSIBLE 220 5% 1/4W F	

	A-1645-013-A	V BOARD, COMPLETE	

<CAPACITOR>			
C1	1-126-101-11	ELECT 100MF 20% 16V	
C2	1-163-038-00	CERAMIC CHIP 0.1MF 25V	
C3	1-124-120-11	ELECT 220MF 20% 16V	
C4	1-163-077-00	CERAMIC CHIP 0.1MF 50V	
C5	1-124-120-11	ELECT 220MF 20% 16V	
C6	1-163-038-00	CERAMIC CHIP 0.1MF 25V	

The components identified by shading and mark Δ are critical for safety.
Replace only with part number specified.

V

REF.NO.	PART NO.	DESCRIPTION	REMARK	REF.NO.	PART NO.	DESCRIPTION	REMARK
C7	1-163-235-11	CERAMIC CHIP 22PF	5% 50V	JR11	1-216-295-00	METAL GLAZE	0 5% 1/10W
C8	1-163-235-11	CERAMIC CHIP 22PF	5% 50V	JR12	1-216-295-00	METAL GLAZE	0 5% 1/10W
C9	1-163-235-11	CERAMIC CHIP 22PF	5% 50V	JR13	1-216-296-00	METAL GLAZE	0 5% 1/8W
C10	1-163-038-00	CERAMIC CHIP 0.1MF	25V	JR14	1-216-296-00	METAL GLAZE	0 5% 1/8W
C11	1-163-038-00	CERAMIC CHIP 0.1MF	25V	JR16	1-216-296-00	METAL GLAZE	0 5% 1/8W
C12	1-163-038-00	CERAMIC CHIP 0.1MF	25V	JR17	1-216-295-00	METAL GLAZE	0 5% 1/10W
C13	1-163-038-00	CERAMIC CHIP 0.1MF	25V	JR21	1-216-296-00	METAL GLAZE	0 5% 1/8W
C14	1-124-927-11	ELECT 4.7MF	20% 50V	JR22	1-216-295-00	METAL GLAZE	0 5% 1/10W
C15	1-124-927-11	ELECT 4.7MF	20% 50V	JR23	1-216-295-00	METAL GLAZE	0 5% 1/10W
C16	1-163-141-00	CERAMIC CHIP 0.001MF	5% 50V	JR24	1-216-296-00	METAL GLAZE	0 5% 1/8W
C17	1-163-141-00	CERAMIC CHIP 0.001MF	5% 50V	JR26	1-216-296-00	METAL GLAZE	0 5% 1/8W
C18	1-163-141-00	CERAMIC CHIP 0.001MF	5% 50V	JR27	1-216-295-00	METAL GLAZE	0 5% 1/10W
C19	1-163-235-11	CERAMIC CHIP 22PF	5% 50V	JR201	1-216-295-00	METAL GLAZE	0 5% 1/10W
<CONNECTOR>				JR204	1-216-295-00	METAL GLAZE	0 5% 1/10W
CNV1	*1-565-393-11	CONNECTOR, BOARD TO BOARD		JR207	1-216-295-00	METAL GLAZE	0 5% 1/10W
CNV2	*1-565-393-11	CONNECTOR, BOARD TO BOARD		JR208	1-216-295-00	METAL GLAZE	0 5% 1/10W
<DIODE>				JR211	1-216-295-00	METAL GLAZE	0 5% 1/10W
D1	8-719-105-91	DIODE RD5.6M-B2		JR213	1-216-295-00	METAL GLAZE	0 5% 1/10W
D3	8-719-914-44	DIODE DAP202K		JR219	1-216-296-00	METAL GLAZE	0 5% 1/8W
D4	8-719-400-18	DIODE MA152WK		JR220	1-216-295-00	METAL GLAZE	0 5% 1/10W
D5	8-719-914-44	DIODE DAP202K		JR223	1-216-295-00	METAL GLAZE	0 5% 1/10W
D6	8-719-400-18	DIODE MA152WK		R1	1-218-326-11	METAL GLAZE	470 5% 1/2W
D7	8-719-105-52	DIODE RD3.6M-B2		R3	1-216-049-00	METAL GLAZE	1K 5% 1/10W
D9	8-719-106-17	DIODE RD6.8M-B2		R4	1-216-025-00	METAL GLAZE	100 5% 1/10W
<IC>				R5	1-216-047-00	METAL GLAZE	820 5% 1/10W
IC1	8-759-038-58	IC SDA20162-A002		R6	1-216-001-00	METAL GLAZE	10 5% 1/10W
IC2	8-759-510-46	IC SAA5246P/E		R7	1-216-083-00	METAL GLAZE	27K 5% 1/10W
IC3	8-759-510-49	IC FCB61C65-70P		R8	1-216-071-00	METAL GLAZE	8.2K 5% 1/10W
<COIL>				R9	1-216-308-00	METAL GLAZE	4.7 5% 1/10W
L1	1-408-403-00	INDUCTOR 3.3UH		R02	1-216-214-00	METAL GLAZE	4.7K 5% 1/8W
L2	1-408-407-00	INDUCTOR 6.8UH		R10	1-218-325-11	METAL GLAZE	120 5% 1/4W
L3	1-408-407-00	INDUCTOR 6.8UH		R11	1-218-325-11	METAL GLAZE	120 5% 1/4W
L4	1-408-407-00	INDUCTOR 6.8UH		R12	1-218-325-11	METAL GLAZE	120 5% 1/4W
<IC LINK>				R13	1-216-025-00	METAL GLAZE	100 5% 1/10W
PS1	Δ 1-532-679-91	LINK, IC (ICP-N15) 0.6A		R14	1-216-001-00	METAL GLAZE	10 5% 1/10W
<TRANSISTOR>				R15	1-216-013-00	METAL GLAZE	33 5% 1/10W
Q1	8-729-900-53	TRANSISTOR DTC114EK		R16	1-216-013-00	METAL GLAZE	33 5% 1/10W
Q2	8-729-920-92	TRANSISTOR 2SD2096-EF		R17	1-216-013-00	METAL GLAZE	33 5% 1/10W
Q3	8-729-901-78	TRANSISTOR 2SC2412K-R		R18	1-216-025-00	METAL GLAZE	100 5% 1/10W
Q4	8-729-901-78	TRANSISTOR 2SC2412K-R		R19	1-216-025-00	METAL GLAZE	100 5% 1/10W
Q5	8-729-807-87	TRANSISTOR 2SB1295-UL6		R20	1-216-041-00	METAL GLAZE	470 5% 1/10W
Q6	8-729-807-87	TRANSISTOR 2SB1295-UL6		R21	1-216-041-00	METAL GLAZE	470 5% 1/10W
Q7	8-729-807-87	TRANSISTOR 2SB1295-UL6		R22	1-216-168-00	METAL GLAZE	56 5% 1/8W
Q8	8-729-901-78	TRANSISTOR 2SC2412K-R		R23	1-216-214-00	METAL GLAZE	4.7K 5% 1/8W
<RESISTOR>				R24	1-216-065-00	METAL GLAZE	4.7K 5% 1/10W
JR01	1-216-295-00	METAL GLAZE	0 5% 1/10W	R25	1-216-065-00	METAL GLAZE	4.7K 5% 1/10W
JR02	1-216-295-00	METAL GLAZE	0 5% 1/10W	R26	1-216-049-00	METAL GLAZE	1K 5% 1/10W
JR03	1-216-295-00	METAL GLAZE	0 5% 1/10W	R27	1-216-214-00	METAL GLAZE	4.7K 5% 1/8W
JR08	1-216-295-00	METAL GLAZE	0 5% 1/10W	R28	1-216-067-00	METAL GLAZE	5.6K 5% 1/10W
JR09	1-216-295-00	METAL GLAZE	0 5% 1/10W	R34	1-216-065-00	METAL GLAZE	4.7K 5% 1/10W
<VARIABLE RESISTOR>				R35	1-216-065-00	METAL GLAZE	4.7K 5% 1/10W
				R40	1-216-065-00	METAL GLAZE	4.7K 5% 1/10W
				R41	1-216-065-00	METAL GLAZE	4.7K 5% 1/10W
				R42	1-216-049-00	METAL GLAZE	1K 5% 1/10W
				R44	1-216-295-00	METAL GLAZE	0 5% 1/10W
				R46	1-216-065-00	METAL GLAZE	4.7K 5% 1/10W
				R47	1-216-065-00	METAL GLAZE	4.7K 5% 1/10W
				R49	1-216-049-00	METAL GLAZE	1K 5% 1/10W
				RV1	1-238-012-11	RES, ADJ, CARBON 1K	

V	H1	H2	J2	J1
---	----	----	----	----

REF.NO. PART NO. DESCRIPTION

<CRYSTAL>

X1 1-579-266-21 CRYSTAL VIBRATOR
X2 1-577-364-11 VIBRATOR, CERAMIC

*1-638-391-11 H1 BOARD

1-562-837-11 JACK
*1-564-512-11 PLUG, CONNECTOR 9P
1-568-678-11 TERMINAL BLOCK, S 3P
*1-568-879-51 PIN, CONNECTOR 4P
*1-568-881-51 PIN, CONNECTOR 6P

<RESISTOR>

R1651 1-249-413-11 CARBON 470 5% 1/4W
R1652 1-249-413-11 CARBON 470 5% 1/4W

<SWITCH>

S1651 1-571-532-21 SWITCH, TACTIL
S1652 1-571-532-21 SWITCH, TACTIL
S1653 1-571-532-21 SWITCH, TACTIL

*1-638-392-11 H2 BOARD

*1-568-882-51 PIN, CONNECTOR 7P
*4-374-987-01 GUIDE, LIGHT
*4-381-686-01 BRACKET (B), LIGHT GUIDE

<DIODE>

D1651 8-719-948-31 DIODE LD-201VR
*4-201-076-01 HOLDER, LED; D1651
D1652 8-719-948-31 DIODE LD-201VR
*4-201-076-01 HOLDER, LED; D1652
D1654 8-719-948-31 DIODE LD-201VR

*4-201-076-01 HOLDER, LED; D1654

<IC>

IC1651 8-741-101-75 IC SBX1610-11

<RESISTOR>

R1662 1-249-413-11 CARBON 470 5% 1/4W

*1-638-393-11 J2 BOARD

1-537-339-11 TERMINAL BOARD
*1-560-278-21 PLUG, CONNECTOR 4P
*1-564-517-11 PLUG, CONNECTOR 2P
*1-564-519-11 PLUG, CONNECTOR 4P

<CAPACITOR>

C1751 1-101-005-00 CERAMIC 0.022MF 50V
C1752 1-101-005-00 CERAMIC 0.022MF 50V
C1755 1-102-114-00 CERAMIC 470PF 10% 50V
C1756 1-102-114-00 CERAMIC 470PF 10% 50V

REMARK

REF.NO. PART NO.

DESCRIPTION

REMARK

<COIL>

L1751 1-412-240-11 INDUCTOR, WIDE BAND
L1752 1-412-240-11 INDUCTOR, WIDE BAND

A-1651-018-A J1 BOARD, COMPLETE (KV-E2521D ONLY)

A-1651-020-A J1 BOARD, COMPLETE (KV-E2921D ONLY)

1-561-534-41 SOCKET 21P
*1-564-524-11 PLUG, CONNECTOR 9P
*1-564-527-11 PLUG, CONNECTOR 12P
*1-566-641-11 CONNECTOR, HINGE (TAB) 18P

<CAPACITOR>

C203 1-124-925-11 ELECT 2.2MF 20% 50V
C205 1-124-927-11 ELECT 4.7MF 20% 50V
C206 1-124-925-11 ELECT 2.2MF 20% 50V
C207 1-124-927-11 ELECT 4.7MF 20% 50V
C213 1-126-233-11 ELECT 22MF 20% 50V

C214 1-137-045-11 FILM 0.0068MF 10% 400V
C217 1-137-045-11 FILM 0.0068MF 10% 400V
C218 1-137-102-11 FILM 0.022MF 10% 250V
C219 1-137-102-11 FILM 0.022MF 10% 250V
C220 1-108-686-11 MYLAR 0.0033MF 10% 100V

C221 1-108-686-11 MYLAR 0.0033MF 10% 100V
C222 1-137-095-11 FILM 0.056MF 10% 100V
C223 1-137-095-11 FILM 0.056MF 10% 100V
C224 1-137-047-11 FILM 0.01MF 10% 400V
C225 1-136-173-00 FILM 0.47MF 5% 50V

C226 1-136-173-00 FILM 0.47MF 5% 50V
C227 1-137-102-11 FILM 0.022MF 10% 250V
C228 1-137-104-11 FILM 0.033MF 10% 250V
C229 1-137-049-11 FILM 0.015MF 10% 400V
C230 1-137-049-11 FILM 0.015MF 10% 400V

C231 1-124-902-00 ELECT 0.47MF 20% 50V
C232 1-123-875-11 ELECT 10MF 20% 50V
C233 1-163-005-11 CERAMIC CHIP 470PF 10% 50V
C234 1-163-005-11 CERAMIC CHIP 470PF 10% 50V
C235 1-163-005-11 CERAMIC CHIP 470PF 10% 50V

C236 1-163-005-11 CERAMIC CHIP 470PF 10% 50V
C237 1-124-902-00 ELECT 0.47MF 20% 50V
C238 1-163-125-00 CERAMIC CHIP 220PF 5% 50V
C239 1-126-103-11 ELECT 470MF 20% 16V
C240 1-163-018-00 CERAMIC CHIP 0.0056MF 10% 50V

C241 1-163-018-00 CERAMIC CHIP 0.0056MF 10% 50V
C242 1-163-033-00 CERAMIC CHIP 0.022MF 50V
C243 1-163-033-00 CERAMIC CHIP 0.022MF 50V
C244 1-163-033-00 CERAMIC CHIP 0.022MF 50V
C245 1-163-033-00 CERAMIC CHIP 0.022MF 50V

C1401 1-123-875-11 ELECT 10MF 20% 50V
C1402 1-126-103-11 ELECT 470MF 20% 16V
C1403 1-163-003-11 CERAMIC CHIP 330PF 10% 50V
C1404 1-137-035-11 FILM 0.47MF 10% 100V
C1405 1-136-017-00 CERAMIC CHIP 0.0047MF 50V

C1406 1-137-035-11 FILM 0.47MF 10% 100V
C1407 1-124-910-11 ELECT 47MF 20% 50V
C1408 1-124-122-11 ELECT 100MF 20% 50V
C1409 1-126-233-11 ELECT 22MF 20% 50V
C1410 1-123-875-11 ELECT 10MF 20% 50V

REF.NO.	PART NO.	DESCRIPTION	REMARK	REF.NO.	PART NO.	DESCRIPTION	REMARK		
C1411	1-123-875-11	ELECT	10MF	20%	50V	D1410	8-719-110-14	DIODE RD9.1ES-B3	
C1412	1-124-910-11	ELECT	47MF	20%	50V	D1415	8-719-110-03	DIODE RD7.5ES-B2	
C1413	1-124-910-11	ELECT	47MF	20%	50V	D1418	8-719-110-03	DIODE RD7.5ES-B2	
C1414	1-123-875-11	ELECT	10MF	20%	50V	D1419	8-719-110-03	DIODE RD7.5ES-B2	
C1415	1-137-035-11	FILM	0.47MF	10%	100V	D1420	8-719-110-03	DIODE RD7.5ES-B2	
C1416	1-137-035-11	FILM	0.47MF	10%	100V	D1421	8-719-110-03	DIODE RD7.5ES-B2	
C1417	1-124-120-11	ELECT	220MF	20%	16V	D1422	8-719-110-03	DIODE RD7.5ES-B2	
C1418	1-163-003-11	CERAMIC CHIP	330PF	10%	50V	D1423	8-719-110-03	DIODE RD7.5ES-B2	
C1419	1-163-003-11	CERAMIC CHIP	330PF	10%	50V	D1424	8-719-110-03	DIODE RD7.5ES-B2	
C1425	1-124-902-00	ELECT	0.47MF	20%	50V	D1425	8-719-110-03	DIODE RD7.5ES-B2	
C1426	1-124-902-00	ELECT	0.47MF	20%	50V	D1426	8-719-110-03	DIODE RD7.5ES-B2	
C1427	1-136-017-00	CERAMIC CHIP	0.0047MF		50V	D1501	8-719-300-33	DIODE RU-3AM	
C1428	1-136-017-00	CERAMIC CHIP	0.0047MF		50V	D1502	8-719-911-19	DIODE 1SS119	
C1429	1-136-017-00	CERAMIC CHIP	0.0047MF		50V	D1503	8-719-911-19	DIODE 1SS119	
C1430	1-163-003-11	CERAMIC CHIP	330PF	10%	50V	D1504	8-719-911-19	DIODE 1SS119	
C1431	1-126-529-11	ELECT	0.47MF	20%	50V	D1505	8-719-911-19	DIODE 1SS119	
C1432	1-124-902-00	ELECT	0.47MF	20%	50V	D1506	8-719-982-33	DIODE MTZJ-36D	
C1433	1-124-122-11	ELECT	100MF	20%	50V	D1507	8-719-911-19	DIODE 1SS119	
C1436	1-163-009-11	CERAMIC CHIP	0.001MF	10%	50V	D1510	8-719-911-19	DIODE 1SS119	
C1437	1-163-009-11	CERAMIC CHIP	0.001MF	10%	50V				
C1438	1-137-047-11	FILM	0.01MF	10%	400V				
C1439	1-137-047-11	FILM	0.01MF	10%	400V				
C1440	1-123-875-11	ELECT	10MF	20%	50V				
C1441	1-123-875-11	ELECT	10MF	20%	50V				
C1442	1-137-035-11	FILM	0.47MF	10%	100V				
C1443	1-137-035-11	FILM	0.47MF	10%	100V				
C1444	1-124-910-11	ELECT	47MF	20%	50V				
C1445	1-102-824-00	CERAMIC	470PF	5%	50V				
C1446	1-102-824-00	CERAMIC	470PF	5%	50V				
C1501	1-124-927-11	ELECT	4.7MF	20%	50V				
C1502	1-124-791-11	ELECT	1MF	20%	50V				
C1503	1-108-680-11	MYLAR	0.001MF	10%	100V				
C1504	1-124-910-11	ELECT	47MF	20%	50V				
C1505	1-137-094-11	FILM	0.047MF	10%	100V				
C1507	1-108-686-11	MYLAR	0.0033MF	10%	100V				
C1508	1-124-791-11	ELECT	1MF	20%	50V				
C1509	1-124-791-11	ELECT	1MF	20%	50V				
C1511	1-124-927-11	ELECT	4.7MF	20%	50V				
C1512	1-137-045-11	FILM	0.0068MF	10%	400V				
					(KV-E2521D ONLY)				
C1513	1-163-105-00	CERAMIC CHIP	33PF	5%	50V				
C1514	1-137-102-11	FILM	0.022MF	10%	250V				
					(KV-E2521D ONLY)				
C1515	1-102-117-00	CERAMIC	820PF	10%	50V				
					(KV-E2521D ONLY)				
<CONNECTOR>									
CN1401	1-565-838-11	JACK BLOCK, PIN 2P							
<DIODE>									
D201	8-719-110-14	DIODE RD9.1ES-B3				D201	8-719-110-14	DIODE RD9.1ES-B3	
D202	8-719-110-14	DIODE RD9.1ES-B3				D202	8-719-110-14	DIODE RD9.1ES-B3	
D205	8-719-110-03	DIODE RD7.5ES-B2				D205	8-719-110-03	DIODE RD7.5ES-B2	
D206	8-719-110-03	DIODE RD7.5ES-B2				D206	8-719-110-03	DIODE RD7.5ES-B2	
D1401	8-719-110-03	DIODE RD7.5ES-B2				D1401	8-719-110-03	DIODE RD7.5ES-B2	
D1403	8-719-110-03	DIODE RD7.5ES-B2				D1403	8-719-110-03	DIODE RD7.5ES-B2	
D1404	8-719-110-03	DIODE RD7.5ES-B2				D1404	8-719-110-03	DIODE RD7.5ES-B2	
D1405	8-719-110-03	DIODE RD7.5ES-B2				D1405	8-719-110-03	DIODE RD7.5ES-B2	
D1406	8-719-110-03	DIODE RD7.5ES-B2				D1406	8-719-110-03	DIODE RD7.5ES-B2	
D1407	8-719-921-77	DIODE MTZN-10C				D1407	8-719-921-77	DIODE MTZN-10C	
D1408	8-719-110-14	DIODE RD9.1ES-B3				D1408	8-719-110-14	DIODE RD9.1ES-B3	
D1409	8-719-110-14	DIODE RD9.1ES-B3				D1409	8-719-110-14	DIODE RD9.1ES-B3	
<IC>									
IC201	8-759-013-17	IC TDA6200				IC201	8-759-013-17	IC TDA6200	
IC1401	8-752-053-17	IC CXA1114P				IC1401	8-752-053-17	IC CXA1114P	
IC1402	8-759-946-32	IC TEA2014A				IC1402	8-759-946-32	IC TEA2014A	
IC1403	8-759-040-53	IC MC14053BCP				IC1403	8-759-040-53	IC MC14053BCP	
IC1501	8-759-942-16	IC TEA2031A				IC1501	8-759-942-16	IC TEA2031A	
<TRANSISTOR>									
Q201	8-729-901-78	TRANSISTOR 2SC2412K-R				Q201	8-729-901-78	TRANSISTOR 2SC2412K-R	
Q202	8-729-901-78	TRANSISTOR 2SC2412K-R				Q202	8-729-901-78	TRANSISTOR 2SC2412K-R	
Q1401	8-729-216-22	TRANSISTOR 2SA1162-G				Q1401	8-729-216-22	TRANSISTOR 2SA1162-G	
Q1402	8-729-901-78	TRANSISTOR 2SC2412K-R				Q1402	8-729-901-78	TRANSISTOR 2SC2412K-R	
Q1403	8-729-901-78	TRANSISTOR 2SC2412K-R				Q1403	8-729-901-78	TRANSISTOR 2SC2412K-R	
Q1404	8-729-216-22	TRANSISTOR 2SA1162-G				Q1404	8-729-216-22	TRANSISTOR 2SA1162-G	
<RESISTOR>									
R201	1-216-079-00	METAL GLAZE 18K	5%	1/10W		R201	1-216-079-00	METAL GLAZE 18K	5%
R202	1-216-206-00	METAL GLAZE 2.2K	5%	1/8W		R202	1-216-206-00	METAL GLAZE 2.2K	5%
R203	1-216-075-00	METAL GLAZE 12K	5%	1/10W		R203	1-216-075-00	METAL GLAZE 12K	5%
R204	1-216-085-00	METAL GLAZE 33K	5%	1/10W		R204	1-216-085-00	METAL GLAZE 33K	5%
R205	1-216-085-00	METAL GLAZE 33K	5%	1/10W		R205	1-216-085-00	METAL GLAZE 33K	5%
R206	1-216-061-00	METAL GLAZE 3.3K	5%	1/10W		R206	1-216-061-00	METAL GLAZE 3.3K	5%
R207	1-216-061-00	METAL GLAZE 3.3K	5%	1/10W		R207	1-216-061-00	METAL GLAZE 3.3K	5%
R208	1-216-077-00	METAL GLAZE 15K	5%	1/10W		R208	1-216-077-00	METAL GLAZE 15K	5%
R209	1-216-081-00	METAL GLAZE 22K	5%	1/10W		R209	1-216-081-00	METAL GLAZE 22K	5%
R210	1-216-077-00	METAL GLAZE 15K	5%	1/10W		R210	1-216-077-00	METAL GLAZE 15K	5%
R211	1-216-097-00	METAL GLAZE 100K	5%	1/10W		R211	1-216-097-00	METAL GLAZE 100K	5%
R212	1-216-081-00	METAL GLAZE 22K	5%	1/10W		R212	1-216-081-00	METAL GLAZE 22K	5%
R213	1-216-077-00	METAL GLAZE 15K	5%	1/10W		R213	1-216-077-00	METAL GLAZE 15K	5%
R214	1-216-033-00	METAL GLAZE 220	5%	1/10W		R214	1-216-033-00	METAL GLAZE 220	5%
R215	1-216-081-00	METAL GLAZE 22K	5%	1/10W		R215	1-216-081-00	METAL GLAZE 22K	5%
R216	1-216-081-00	METAL GLAZE 22K	5%	1/10W		R216	1-216-081-00	METAL GLAZE 22K	5%
R217	1-216-077-00	METAL GLAZE 15K	5%	1/10W		R217	1-216-077-00	METAL GLAZE 15K	5%
R218	1-216-033-00	METAL GLAZE 220	5%	1/10W		R218	1-216-033-00	METAL GLAZE 220	5%
R219	1-216-073-00	METAL GLAZE 10K	5%	1/10W		R219	1-216-073-00	METAL GLAZE 10K	5%
R220	1-216-057-00	METAL GLAZE 2.2K	5%	1/10W		R220	1-216-057-00	METAL GLAZE 2.2K	5%
R221	1-216-041-00	METAL GLAZE 470	5%	1/10W		R221	1-216-041-00	METAL GLAZE 470	5%
R222	1-216-041-00	METAL GLAZE 470	5%	1/10W		R222	1-216-041-00	METAL GLAZE 470	5%
R223	1-216-049-00	METAL GLAZE 1K	5%	1/10W		R223	1-216-049-00	METAL GLAZE 1K	5%
R224	1-216-049-00	METAL GLAZE 1K	5%	1/10W		R224	1-216-049-00	METAL GLAZE 1K	5%
R225	1-216-049-00	METAL GLAZE 1K	5%	1/10W		R225	1-216-049-00	METAL GLAZE 1K	5%

J1

REF. NO. PART NO. DESCRIPTION

R226	1-216-049-00	METAL GLAZE	1K	5%	1/10W
R227	1-216-033-00	METAL GLAZE	220	5%	1/10W
R228	1-216-033-00	METAL GLAZE	220	5%	1/10W
R229	1-216-075-00	METAL GLAZE	12K	5%	1/10W
R230	1-216-079-00	METAL GLAZE	18K	5%	1/10W
R231	1-216-073-00	METAL GLAZE	10K	5%	1/10W
R232	1-216-073-00	METAL GLAZE	10K	5%	1/10W
R233	1-216-057-00	METAL GLAZE	2.2K	5%	1/10W
R234	1-216-057-00	METAL GLAZE	2.2K	5%	1/10W
R240	1-216-033-00	METAL GLAZE	220	5%	1/10W
R241	1-216-091-00	METAL GLAZE	56K	5%	1/10W
R242	1-216-091-00	METAL GLAZE	56K	5%	1/10W
R243	1-216-075-00	METAL GLAZE	12K	5%	1/10W
R244	1-216-067-00	METAL GLAZE	5.6K	5%	1/10W
R245	1-216-075-00	METAL GLAZE	12K	5%	1/10W
R246	1-216-067-00	METAL GLAZE	5.6K	5%	1/10W
R247	1-216-075-00	METAL GLAZE	12K	5%	1/10W
R248	1-216-067-00	METAL GLAZE	5.6K	5%	1/10W
R249	1-216-075-00	METAL GLAZE	12K	5%	1/10W
R250	1-216-067-00	METAL GLAZE	5.6K	5%	1/10W
R1401	1-216-023-00	METAL GLAZE	82	5%	1/10W
R1402	1-216-170-00	METAL GLAZE	68	5%	1/8W
R1403	1-216-089-00	METAL GLAZE	47K	5%	1/10W
R1404	1-216-178-00	METAL GLAZE	150	5%	1/8W
R1405	1-249-429-11	CARBON	10K	5%	1/4W
R1407	1-216-113-00	METAL GLAZE	470K	5%	1/10W
R1408	1-216-089-00	METAL GLAZE	47K	5%	1/10W
R1409	1-216-041-00	METAL GLAZE	470	5%	1/10W
R1410	1-216-089-00	METAL GLAZE	47K	5%	1/10W
R1411	1-216-041-00	METAL GLAZE	470	5%	1/10W
R1412	1-216-089-00	METAL GLAZE	47K	5%	1/10W
R1413	1-216-113-00	METAL GLAZE	470K	5%	1/10W
R1414	1-216-089-00	METAL GLAZE	47K	5%	1/10W
R1415	1-216-083-00	METAL GLAZE	27K	5%	1/10W
R1416	1-216-083-00	METAL GLAZE	27K	5%	1/10W
R1417	1-216-023-00	METAL GLAZE	82	5%	1/10W
R1418	1-247-738-11	CARBON	82	5%	1/2W F
R1422	1-216-025-00	METAL GLAZE	100	5%	1/10W
R1423	1-216-083-00	METAL GLAZE	27K	5%	1/10W
R1424	1-216-083-00	METAL GLAZE	27K	5%	1/10W
R1425	1-216-045-00	METAL GLAZE	680	5%	1/10W
R1426	1-216-025-00	METAL GLAZE	100	5%	1/10W
R1427	1-216-001-00	METAL GLAZE	10	5%	1/10W
R1428	1-216-113-00	METAL GLAZE	470K	5%	1/10W
R1429	1-216-113-00	METAL GLAZE	470K	5%	1/10W
R1430	1-216-170-00	METAL GLAZE	68	5%	1/8W
R1431	1-216-041-00	METAL GLAZE	470	5%	1/10W
R1432	1-216-041-00	METAL GLAZE	470	5%	1/10W
R1433	1-216-033-00	METAL GLAZE	220	5%	1/10W
R1434	1-249-393-11	CARBON	10	5%	1/4W F
R1437	1-249-429-11	CARBON	10K	5%	1/4W
R1440	1-216-045-00	METAL GLAZE	680	5%	1/10W
R1441	1-216-045-00	METAL GLAZE	680	5%	1/10W
R1442	1-216-089-00	METAL GLAZE	47K	5%	1/10W
R1443	1-216-089-00	METAL GLAZE	47K	5%	1/10W
R1444	1-216-033-00	METAL GLAZE	220	5%	1/10W
R1445	1-216-095-00	METAL GLAZE	82K	5%	1/10W
R1446	1-216-033-00	METAL GLAZE	220	5%	1/10W
R1447	1-216-033-00	METAL GLAZE	220	5%	1/10W
R1448	1-216-025-00	METAL GLAZE	100	5%	1/10W
R1452	1-216-049-00	METAL GLAZE	1K	5%	1/10W
R1453	1-216-049-00	METAL GLAZE	1K	5%	1/10W
R1454	1-216-180-00	METAL GLAZE	180	5%	1/8W
R1455	1-216-180-00	METAL GLAZE	180	5%	1/8W

REMARK

REF. NO. PART NO. DESCRIPTION

R1457	1-216-025-00	METAL GLAZE	100	5%	1/10W
R1459	1-216-025-00	METAL GLAZE	100	5%	1/10W
R1460	1-216-065-00	METAL GLAZE	4.7K	5%	1/10W
R1461	1-216-190-00	METAL GLAZE	470	5%	1/8W
R1462	1-216-057-00	METAL GLAZE	2.2K	5%	1/10W
R1463	1-216-049-00	METAL GLAZE	1K	5%	1/10W
R1464	1-216-061-00	METAL GLAZE	3.3K	5%	1/10W
R1465	1-216-023-00	METAL GLAZE	82	5%	1/10W
R1466	1-216-033-00	METAL GLAZE	220	5%	1/10W
R1467	1-216-025-00	METAL GLAZE	100	5%	1/10W
R1468	1-216-025-00	METAL GLAZE	100	5%	1/10W
R1469	1-216-025-00	METAL GLAZE	100	5%	1/10W
R1470	1-216-025-00	METAL GLAZE	100	5%	1/10W
R1471	1-216-023-00	METAL GLAZE	82	5%	1/10W
R1472	1-216-023-00	METAL GLAZE	82	5%	1/10W
R1473	1-216-023-00	METAL GLAZE	82	5%	1/10W
R1474	1-216-113-00	METAL GLAZE	470K	5%	1/10W
R1476	1-216-089-00	METAL GLAZE	47K	5%	1/10W
R1477	1-216-089-00	METAL GLAZE	47K	5%	1/10W
R1478	1-216-113-00	METAL GLAZE	470K	5%	1/10W
R1480	1-216-190-00	METAL GLAZE	470	5%	1/8W
R1482	1-216-178-00	METAL GLAZE	150	5%	1/8W
R1483	1-216-178-00	METAL GLAZE	150	5%	1/8W
R1484	1-216-073-00	METAL GLAZE	10K	5%	1/10W
R1485	1-216-073-00	METAL GLAZE	10K	5%	1/10W
R1486	1-216-073-00	METAL GLAZE	10K	5%	1/10W
R1487	1-216-065-00	METAL GLAZE	4.7K	5%	1/10W
R1488	1-216-065-00	METAL GLAZE	4.7K	5%	1/10W
R1489	1-216-065-00	METAL GLAZE	4.7K	5%	1/10W
R1501	1-216-081-00	METAL GLAZE	22K	5%	1/10W
R1502	1-216-083-00	METAL GLAZE	27K	5%	1/10W
R1503	1-216-113-00	METAL GLAZE	470K	5%	1/10W
R1504	1-216-085-00	METAL GLAZE	33K	5%	1/10W
R1505	1-216-081-00	METAL GLAZE	22K	5%	1/10W
R1506	1-216-113-00	METAL GLAZE	470K	5%	1/10W
R1509	1-216-105-00	METAL GLAZE	220K	5%	1/10W
R1510	1-216-067-00	METAL GLAZE	5.6K	5%	1/10W
R1511	1-216-049-00	METAL GLAZE	1K	5%	1/10W
R1512	1-216-073-00	METAL GLAZE	10K	5%	1/10W
R1513	1-216-091-00	METAL GLAZE	56K	5%	1/10W
R1514	1-216-049-00	METAL GLAZE	1K	5%	1/10W
R1515	1-216-117-00	METAL GLAZE	680K	5%	1/10W (KV-E2521D ONLY)
R1516	1-216-079-00	METAL GLAZE	18K	5%	1/10W
R1517	1-216-033-00	METAL GLAZE	220	5%	1/10W
R1519	1-216-101-00	METAL GLAZE	150K	5%	1/10W
R1520	1-216-113-00	METAL GLAZE	470K	5%	1/10W (KV-E2521D ONLY)
	1-216-111-00	METAL GLAZE	390K	5%	1/10W (KV-E2921D ONLY)
R1521	1-216-214-00	METAL GLAZE	4.7K	5%	1/8W
R1550	1-216-349-00	METAL OXIDE	1	5%	1W F (KV-E2921D ONLY)
R1556	1-216-067-00	METAL GLAZE	5.6K	5%	1/10W
<VARIABLE RESISTOR>					
RV1501	1-238-023-11	RES, ADJ, CARBON	470K		
RV1502	1-238-016-11	RES, ADJ, CARBON	10K		
RV1503	1-238-017-11	RES, ADJ, CARBON	22K		
RV1504	1-238-012-11	RES, ADJ, CARBON	1K		
RV1505	1-238-023-11	RES, ADJ, CARBON	470K		
RV1506	1-238-017-11	RES, ADJ, CARBON	22K		

The components identified by shading and mark Δ are critical for safety.
Replace only with part number specified.

J1 IFG

REF.NO.	PART NO.	DESCRIPTION	REMARK	REF.NO.	PART NO.	DESCRIPTION	REMARK
RV1507	1-238-009-11	RES, ADJ, CARBON 220		IC1	8-759-003-90	IC TBA129	
RV1508	1-238-016-11	RES, ADJ, CARBON 10K		IC2	8-759-003-90	IC TBA129	
RV1509	1-238-023-11	RES, ADJ, CARBON 470K		IC3	8-759-030-48	IC TDA6600-2	
*****				IC4	8-759-513-48	IC TDA2595/V9	
A-1654-004-A	IFG BOARD, COMPLETE			<COIL>			
*****				L1	1-408-410-00	INDUCTOR	12UH
*1-565-488-11	CONNECTOR, BOARD TO BOARD 12P			L2	1-408-410-00	INDUCTOR	12UH
<CAPACITOR>				L3	1-410-064-11	INDUCTOR	2.7MMH
C1	1-164-232-11	CERAMIC CHIP 0.01MF	50V	L4	1-408-421-00	INDUCTOR	100UH
C2	1-164-232-11	CERAMIC CHIP 0.01MF	50V	L5	1-408-421-00	INDUCTOR	100UH
C3	1-164-232-11	CERAMIC CHIP 0.01MF	50V	<TRANSISTOR>			
C4	1-164-232-11	CERAMIC CHIP 0.01MF	50V	Q2	8-729-901-00	TRANSISTOR DTC124EK	
C5	1-164-232-11	CERAMIC CHIP 0.01MF	50V	Q3	8-729-216-22	TRANSISTOR 2SA1162-G	
C6	1-164-232-11	CERAMIC CHIP 0.01MF	50V	Q4	8-729-901-00	TRANSISTOR DTC124EK	
C7	1-124-791-11	ELECT 1MF	20% 50V	<RESISTOR>			
C8	1-123-875-11	ELECT 10MF	20% 50V	JR8	1-216-296-00	METAL GLAZE 0	5% 1/8W
C9	1-130-471-00	MYLAR 0.001MF	5% 50V	JR10	1-216-296-00	METAL GLAZE 0	5% 1/8W
C10	1-163-121-00	CERAMIC CHIP 150PF	5% 50V	R1	1-216-045-00	METAL GLAZE 680	5% 1/10W
C11	1-163-119-00	CERAMIC CHIP 120PF	5% 50V	R2	1-216-043-00	METAL GLAZE 560	5% 1/10W
C12	1-136-298-00	FILM 0.0033MF	2% 100V	R3	1-216-043-00	METAL GLAZE 560	5% 1/10W
C13	1-124-477-11	ELECT 47MF	20% 16V	R5	1-216-045-00	METAL GLAZE 680	5% 1/10W
C14	1-124-477-11	ELECT 47MF	20% 16V	R6	1-216-043-00	METAL GLAZE 560	5% 1/10W
C15	1-124-477-11	ELECT 47MF	20% 16V	R7	1-216-043-00	METAL GLAZE 560	5% 1/10W
C16	1-124-477-11	ELECT 47MF	20% 16V	R9	1-216-073-00	METAL GLAZE 10K	5% 1/10W
C17	1-123-875-11	ELECT 10MF	20% 50V	R11	1-216-095-00	METAL GLAZE 82K	5% 1/10W
C18	1-137-047-11	FILM 0.01MF	10% 400V	R12	1-216-097-00	METAL GLAZE 100K	5% 1/10W
C19	1-137-047-11	FILM 0.01MF	10% 400V	R13	1-216-071-00	METAL GLAZE 8.2K	5% 1/10W
C20	1-126-233-11	ELECT 22MF	20% 50V	R15	1-216-059-00	METAL GLAZE 2.7K	5% 1/10W
C21	1-126-233-11	ELECT 22MF	20% 50V	R16	1-216-097-00	METAL GLAZE 100K	5% 1/10W
C22	1-137-098-11	FILM 0.1MF	10% 100V	R17	1-216-097-00	METAL GLAZE 100K	5% 1/10W
C23	1-137-031-11	FILM 0.22MF	10% 100V	R18	1-216-063-00	METAL GLAZE 3.9K	5% 1/10W
C24	1-124-034-51	ELECT 33MF	20% 16V	R19	1-216-097-00	METAL GLAZE 100K	5% 1/10W
C25	1-137-102-11	FILM 0.022MF	10% 250V	R20	1-216-075-00	METAL GLAZE 12K	5% 1/10W
C26	1-137-094-11	FILM 0.047MF	10% 100V	R22	1-216-099-00	METAL GLAZE 120K	5% 1/10W
C27	1-124-791-11	ELECT 1MF	20% 50V	R24	1-216-089-00	METAL GLAZE 47K	5% 1/10W
C28	1-163-109-00	CERAMIC CHIP 47PF	5% 50V	R25	1-216-077-00	METAL GLAZE 15K	5% 1/10W
C29	1-124-791-11	ELECT 1MF	20% 50V	<VARIABLE RESISTOR>			
C30	1-124-791-11	ELECT 1MF	20% 50V	RV1	1-238-016-11	RES, ADJ, CARBON 10K	
C31	1-137-047-11	FILM 0.01MF	10% 400V	RV2	1-238-019-11	RES, ADJ, CARBON 47K	
C32	1-130-479-00	MYLAR 0.0047MF	5% 50V	*****			
C33	1-163-081-00	CERAMIC CHIP 0.22MF	25V	MISCELLANEOUS			
C34	1-137-031-11	FILM 0.22MF	10% 100V	*****			
C35	1-123-875-11	ELECT 10MF	20% 50V	Δ 1-460-091-11	COIL, DEGAUSS (KV-E2521D ONLY)		
C36	1-163-119-00	CERAMIC CHIP 120PF	5% 50V	Δ 1-426-398-11	COIL, DEMAGNETIZATION (KV-E2921D ONLY)		
C37	1-124-477-11	ELECT 47MF	20% 16V	Δ 1-451-311-21	DEFLECTION YOKE (Y25FXA) (KV-E2521D ONLY)		
C38	1-124-477-11	ELECT 47MF	20% 16V	Δ 1-451-313-21	DEFLECTION YOKE (Y29FXA) (KV-E2921D ONLY)		
C39	1-163-197-00	CERAMIC CHIP 470PF	5% 50V	1-452-032-00	MAGNET, DISK; 10MM ϕ		
<FILTER>				1-452-094-00	MAGNET, ROTATABLE DISK; 15MM ϕ		
CDA1	1-404-751-11	DISCRIMINATOR, CERAMIC		Δ 1-452-509-42	NECK ASSY, PICTURE TUBE (NA-308) (KV-E2921D ONLY)		
CDA2	1-404-750-11	DISCRIMINATOR, CERAMIC		Δ 1-590-501-11	CORD, POWER(WITH NOISE FILTER)		
SFT1	1-527-840-00	FILTER, CERAMIC		V901 Δ 8-733-224-05	PICTURE TUBE (A59JWC60X) (KV-E2521D ONLY)		
SFT2	1-527-839-00	FILTER, CERAMIC		Δ 8-733-824-05	PICTURE TUBE (A68JYK60X) (KV-E2921D ONLY)		
<DIODE>				*****			
D3	8-719-400-18	DIODE MA152WK					
<IC>							

ACCESSORIES AND PACKING MATERIALS

PART NO.	DESCRIPTION	REMARK
*A-1678-001-A	BOX ASSY, WOOFER	
*A-1678-010-A	BOX ASSY (RIGHT), SPEAKER	(KV-E2521D ONLY)
*A-1678-003-A	BOX ASSY (RIGHT), SPEAKER	(KV-E2921D ONLY)
*A-1678-012-A	BOX ASSY (LEFT), SPEAKER	(KV-E2521D ONLY)
*A-1678-005-A	BOX ASSY (LEFT), SPEAKER	(KV-E2921D ONLY)
*3-704-280-01	BAG (STANDARD), PROTECTION	(KV-E2521D ONLY)
*3-704-283-01	BAG (STANDARD), PROTECTION	(KV-E2921D ONLY)
4-200-591-11	MANUAL, INSTRUCTION	(GERMAN/ENGLISH/FRENCH/ DUTCH/ITALIAN/PORTUGUESE)
*4-201-015-02	INDIVIDUAL CARTON (KV-E2521D ONLY)	
*4-200-036-01	INDIVIDUAL CARTON (KV-E2921D ONLY)	
*4-201-012-02	CUSHION (UPPER) (ASSY) (KV-E2521D ONLY)	
*4-200-041-02	CUSHION (UPPER) (ASSY) (KV-E2921D ONLY)	
*4-201-013-01	CUSHION (LOWER) (ASSY) (KV-E2521D ONLY)	
*4-200-042-01	CUSHION (LOWER) (ASSY) (KV-E2921D ONLY)	
*4-380-340-01	BAG, PROTECTION (KV-E2521D ONLY)	
*4-384-027-01	BAG, PROTECTION (KV-E2921D ONLY)	

REMOTE COMMANDER

1-465-797-11	COMMANDER, REMOTE (RM-817)
4-031-670-11	COVER, POCKET (FOR RM-817)